

## Panasonic RB-HF630BE-A

# Panasonic RB-HF630BE-A Wireless Over-Ear Headphones User Manual

Model: RB-HF630BE-A

## 1. INTRODUCTION

---

Thank you for purchasing the Panasonic RB-HF630BE-A Wireless Over-Ear Headphones. This manual provides essential information for the safe and effective use of your new headphones. Please read it thoroughly before use and retain it for future reference.

## 2. SAFETY INFORMATION

---

To ensure safe operation, please observe the following precautions:

- Do not expose the headphones to extreme temperatures, direct sunlight, or high humidity.
- Avoid dropping or subjecting the headphones to strong impacts.
- Do not disassemble or modify the headphones. This may void the warranty and pose a safety risk.
- Keep out of reach of children.
- Prolonged listening at high volume levels can cause hearing damage. Adjust the volume to a moderate level.
- Use only the supplied charging cable or a certified equivalent.

## 3. PACKAGE CONTENTS

---

Verify that all items are present in the package:

- Panasonic RB-HF630BE-A Wireless Over-Ear Headphones
- USB-C Charging Cable
- User Manual (this document)

## 4. PRODUCT OVERVIEW

---

Familiarize yourself with the components and controls of your headphones.



**Figure 4.1:** Front view of the Panasonic RB-HF630BE-A headphones, showcasing the over-ear design and blue finish.

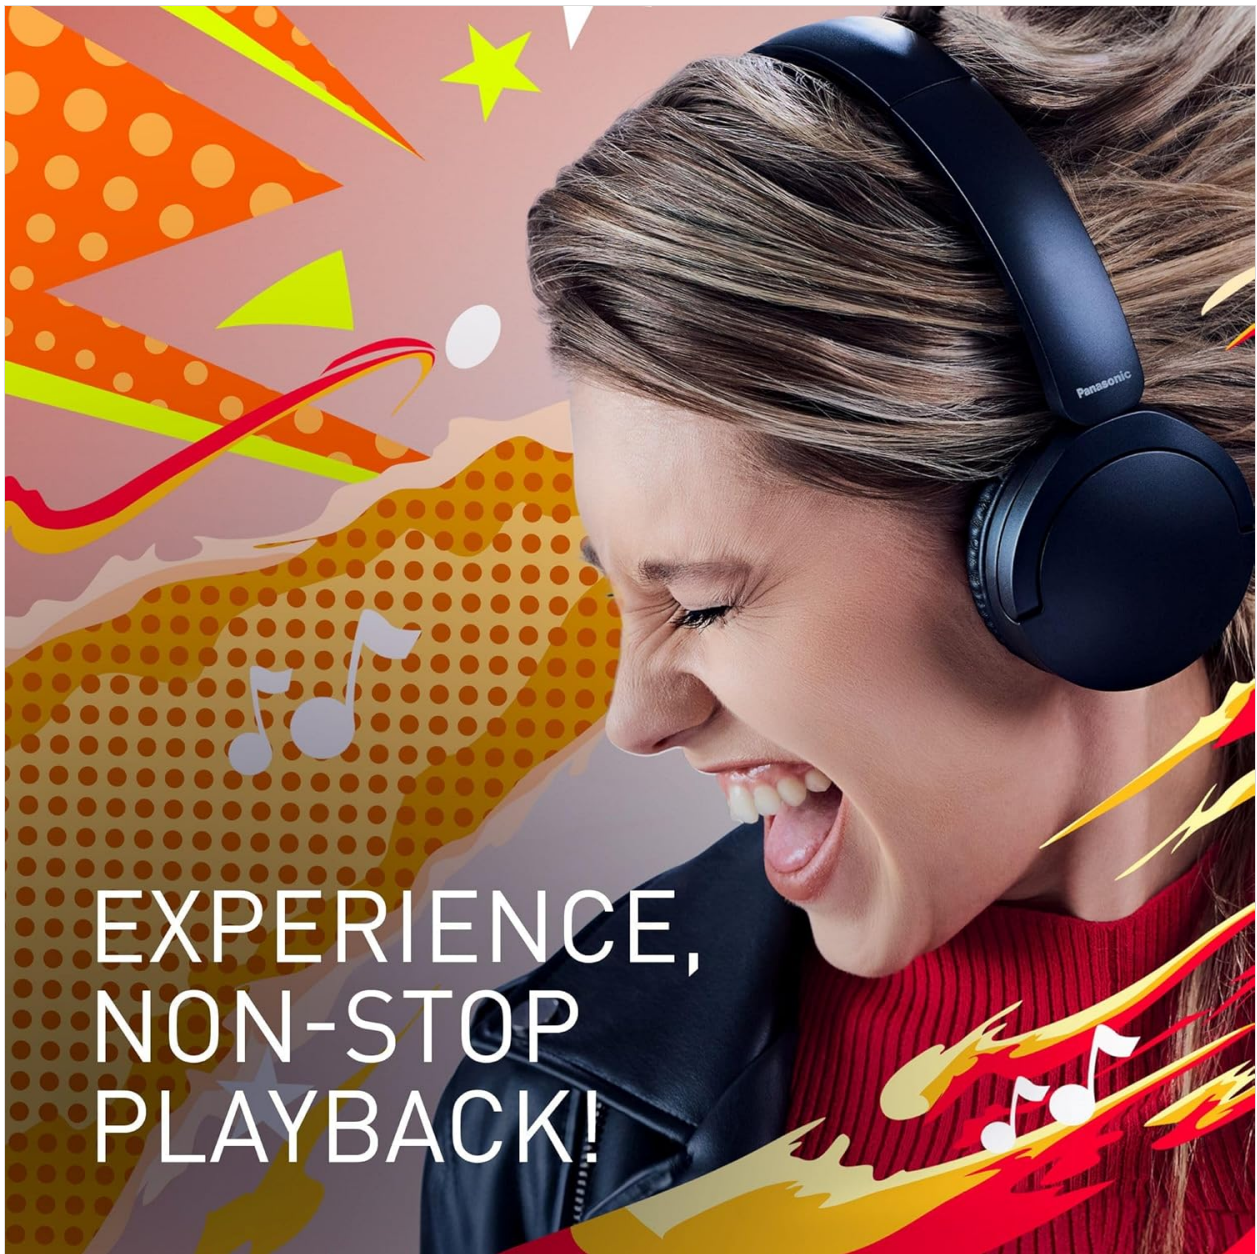


Figure 4.2: Side view illustrating the location of control buttons and ports on the ear cup.

### Controls and Indicators:

- **Power Button:** Press and hold to power on/off.
- **Volume Up/Next Track:** Short press for volume up, long press for next track.
- **Volume Down/Previous Track:** Short press for volume down, long press for previous track.
- **Multi-function Button (MFB):** Play/Pause, Answer/End Call, Activate Voice Assistant.
- **LED Indicator:** Shows power status, pairing mode, and charging status.
- **USB-C Port:** For charging the headphones.
- **Microphone:** Built-in for calls and voice assistant.

## 5. SETUP

---

### 5.1 Charging the Headphones

Before first use, fully charge the headphones.

1. Connect the supplied USB-C charging cable to the USB-C port on the headphones.

2. Connect the other end of the cable to a USB power adapter (not included) or a computer's USB port.
3. The LED indicator will illuminate during charging and turn off when fully charged.

A full charge takes approximately **2 hours**. A **15-minute quick charge** provides approximately **6 hours** of playback.



**Figure 5.1:** Detail of the USB-C charging port, indicating where to connect the charging cable.

## 5.2 Bluetooth Pairing

To connect your headphones to a device:

1. Ensure the headphones are powered off.
2. Press and hold the Power button for approximately 5-7 seconds until the LED indicator flashes blue and red alternately. This indicates pairing mode.
3. On your device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
4. Select "RB-HF630B" or "Panasonic HF630B" from the list of found devices.
5. Once connected, the LED indicator will flash blue slowly.

## 5.3 Multipoint Connectivity

The headphones support connecting to two Bluetooth devices simultaneously.

1. Pair the headphones with the first device as described in Section 5.2.
2. Disable Bluetooth on the first device.
3. Put the headphones back into pairing mode and pair with the second device.
4. Re-enable Bluetooth on the first device. The headphones should automatically connect to both devices.

You can switch between audio sources by pausing playback on one device and starting it on the other.



**Figure 5.2:** Visual representation of the headphones maintaining simultaneous connections with two separate Bluetooth devices.

## 6. OPERATING INSTRUCTIONS

---

### 6.1 Power On/Off

- **Power On:** Press and hold the Power button for approximately 3 seconds until the LED flashes blue.
- **Power Off:** Press and hold the Power button for approximately 3 seconds until the LED flashes red and then turns off.

### 6.2 Music Playback

- **Play/Pause:** Press the MFB once.
- **Volume Up:** Short press the Volume Up button.
- **Volume Down:** Short press the Volume Down button.
- **Next Track:** Long press the Volume Up button.
- **Previous Track:** Long press the Volume Down button.

### 6.3 Call Management

- **Answer/End Call:** Press the MFB once.
- **Reject Call:** Press and hold the MFB for approximately 2 seconds.
- **Switch Call to Phone:** During a call, press and hold the MFB for approximately 2 seconds.

### 6.4 Voice Assistant

To activate your device's voice assistant (e.g., Siri, Google Assistant), press the MFB twice quickly.



Figure 6.1: The integrated Environmental Noise Cancellation (ENC) microphone ensures clear communication during calls.

## 7. MAINTENANCE

---

## 7.1 Cleaning

- Wipe the headphones with a soft, dry cloth.
- Do not use abrasive cleaners, alcohol, or chemical solvents.
- Clean the ear pads gently to remove any buildup.

## 7.2 Storage

- Store the headphones in a cool, dry place away from direct sunlight.
- Avoid placing heavy objects on the headphones.
- The swivel design allows for compact storage.



# DAY-TO-NIGHT POWER

## STUNNING 72 HOURS OF BATTERY LIFE!

Figure 7.1: The adjustable headband and soft ear pads contribute to comfortable wear and compact storage.

## 8. TROUBLESHOOTING

If you encounter issues with your headphones, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Headphones do not power on.	Low battery.	Charge the headphones fully.
Cannot pair with a device.	Headphones not in pairing mode. Bluetooth disabled on device. Device too far.	Ensure headphones are in pairing mode (flashing red/blue). Enable Bluetooth on your device. Move device closer to headphones.
No sound.	Volume too low. Headphones not connected. Audio source paused.	Increase headphone and device volume. Re-pair headphones. Check audio playback on your device.
Poor sound quality.	Weak Bluetooth signal. Interference.	Move closer to the connected device. Avoid strong electromagnetic interference.
Microphone not working.	Device settings.	Ensure the headphones are selected as the input device in your phone's audio settings.

## 9. SPECIFICATIONS

---

- **Model Name:** RB-HF630BE-A (also referred to as RB-HF630B)
- **Connectivity:** Wireless Bluetooth 5.3
- **Driver Unit:** 30 mm Neodymium Magnet
- **Frequency Range:** 20 Hz - ? Hz
- **Battery Life:** Up to 72 hours (playback)
- **Quick Charge:** 15 minutes for 6 hours playback
- **Full Charge Time:** Approximately 2 hours
- **Battery Type:** Lithium-polymer (1 included)
- **Weight:** Approximately 140 grams
- **Microphone:** Built-in with Environmental Noise Cancellation (ENC)
- **Control Method:** Remote control buttons
- **Special Features:** Lightweight design, Adjustable headband, Soft ear pads, Swivel design, Multipoint connectivity
- **Compatible Devices:** Mobile phones, televisions, tablets, laptops, smart speakers
- **Recommended Uses:** Listening to music, commuting, office work
- **Manufacturer:** Panasonic
- **Country of Origin:** China



**Figure 9.1:** The Extra Bass System (XBS) provides powerful and robust bass for an immersive listening experience.

## 10. WARRANTY AND SUPPORT

---

Panasonic products are designed and manufactured to the highest quality standards. For warranty information, please refer to the warranty card included with your purchase or visit the official Panasonic website for your region.

If you require further assistance or have questions not covered in this manual, please contact Panasonic customer support:

- **Website:** [www.panasonic.com](http://www.panasonic.com)
- Refer to your regional Panasonic website for specific contact details.

