

KODAK RCF-1018F-US

KODAK Digital Picture Frame with WiFi 10.1 inch (Model RCF-1018F-US) User Manual

Model: RCF-1018F-US

1. INTRODUCTION

This manual provides comprehensive instructions for the setup, operation, and maintenance of your KODAK Digital Picture Frame with WiFi, 10.1 inch IPS HD Touch Screen. Please read this manual thoroughly before using the device to ensure proper functionality and to maximize your user experience. Keep this manual for future reference.

2. PACKAGE CONTENTS

Verify that all items listed below are included in your package. If any items are missing or damaged, please contact customer support.

- KODAK 10.1 inch Digital Picture Frame
- Instruction Manual
- Type-C Data Cable
- Power Cord
- Photo Frame Stand

Multi Users Connection

Built-in 32GB Storage & Expansion MicroSD card (up to 32GB)



Image 2.1: The image displays the KODAK Digital Picture Frame, its instruction manual, a Type-C data cable, a power cord, and a photo frame stand, all neatly arranged as included package contents.

3. SETUP GUIDE

Follow these steps to set up your KODAK Digital Picture Frame and begin sharing photos and videos.

3.1 Initial Power-On and Network Connection

1. Connect the power cord to the frame and plug it into an electrical outlet. The frame will power on automatically.
2. Follow the on-screen prompts to select your language and connect to a Wi-Fi network. A stable Wi-Fi connection is required for sharing content via the KODAK app.

3.2 KODAK App Installation and Pairing

The KODAK app facilitates easy sharing of photos and videos to your frame from anywhere.

1. **Download the KODAK App:** Search for "KODAK Digital Frame" in the Google Play Store (for Android devices) or the Apple App Store (for iOS devices) and install the free application.



Image 3.1: A smartphone screen displaying the KODAK Digital Frame app available for download on app stores, illustrating the first step of setup.

2. **Pair Your Device:** Open the KODAK app on your smartphone. On the digital picture frame, navigate to the pairing section to display a unique device number (e.g., **302668480**) or QR code. Enter this number into the app to connect your frame.



Image 3.2: A smartphone displaying the KODAK app interface for entering a device number to connect with the digital picture frame, which shows a QR code and device ID for pairing.

3. **Invite Family and Friends:** Once paired, you can invite others to share photos and videos to your frame through the KODAK app. This allows multiple users to contribute to the frame's content.

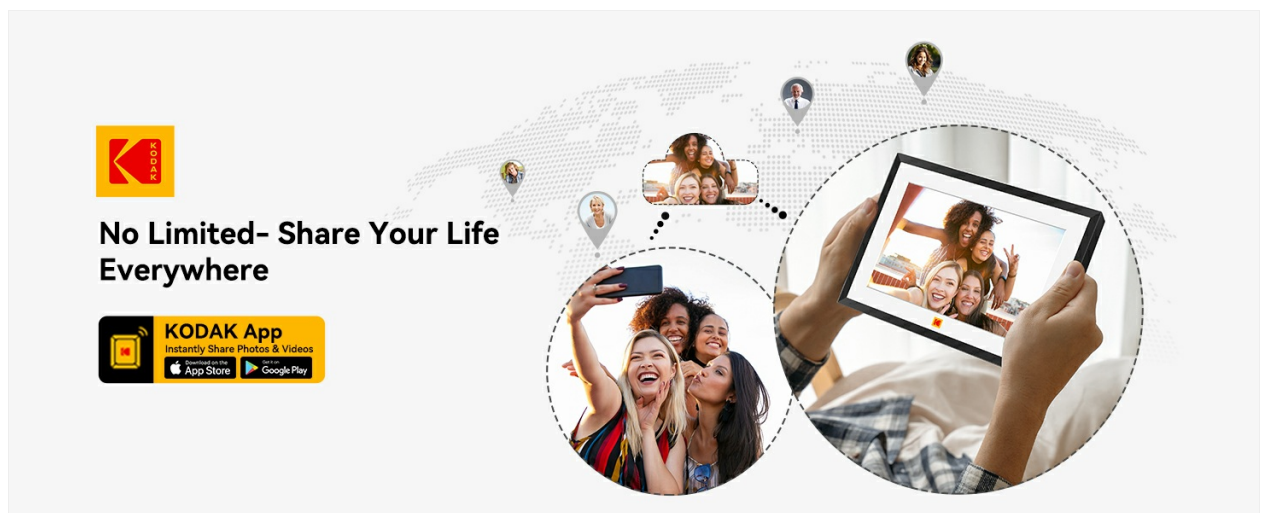 


Image 3.3: A smartphone screen showing the KODAK app interface for inviting family and friends to share content, with a digital picture frame displaying shared photos in the background.

4. OPERATING INSTRUCTIONS

4.1 Navigating the Touch Screen Interface

The KODAK Digital Picture Frame features an intuitive 10.1-inch HD IPS touch screen. Swipe left or right to browse photos, tap to access settings, and pinch to zoom (if supported by the current display mode).

4.2 Photo and Video Playback

The frame automatically plays a slideshow of uploaded photos and videos. You can adjust slideshow settings such as transition effects, display duration, and playback order through the frame's settings menu.



Image 4.1: A KODAK Digital Picture Frame displaying a photo of a child on a swing, with a smartphone showing the KODAK app interface for instant and wireless photo sharing.

4.3 Auto-Rotate and Wall Mounting

The frame is equipped with an auto-rotate function that automatically adjusts the orientation of photos and videos whether the frame is placed horizontally or vertically. It can also be wall-mounted for flexible display options.

Instant & Wireless Sharing

Share Your Picture And Video With KODAK App


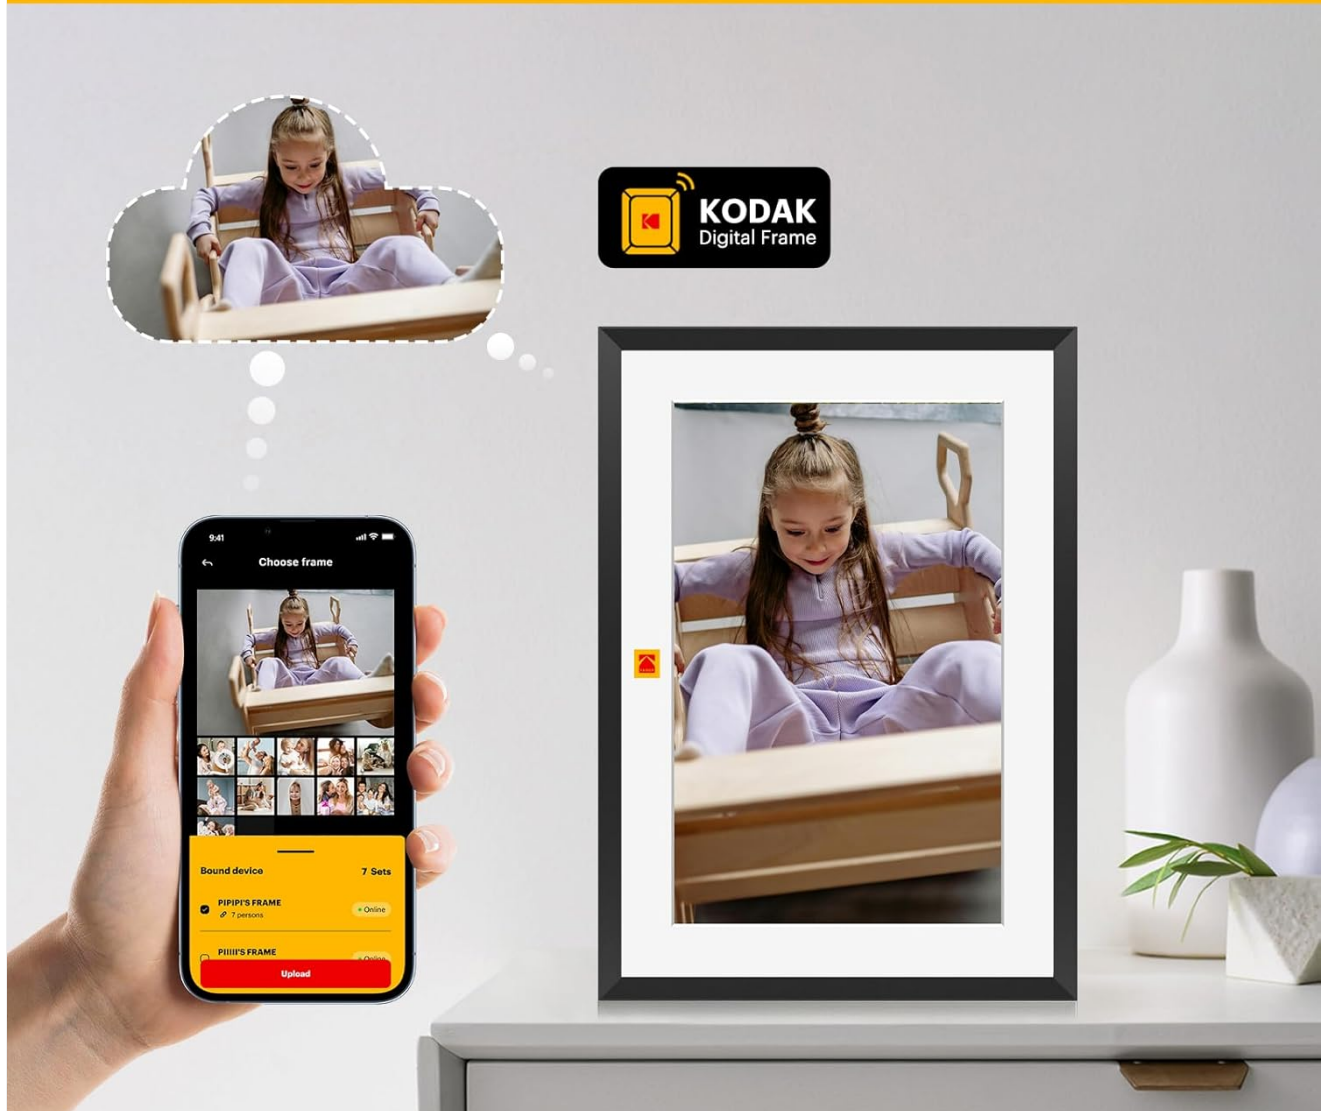 


Image 4.2: The KODAK Digital Picture Frame shown in both landscape and portrait orientations, demonstrating its auto-rotate function and wall-mounting capability with a visible wall hanging hole.

4.4 Multi-User Connection

 
The KODAK Digital Picture Frame supports multiple users. Once invited through the KODAK app, family and friends can share their photos and videos directly to your frame, creating a collaborative photo album.

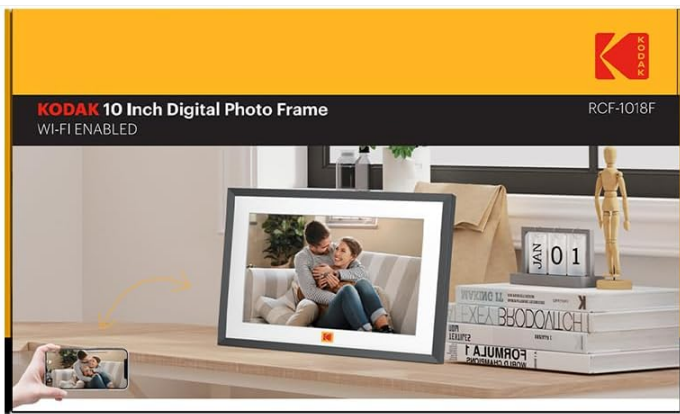

Package box*1



 Kodak digital photo frame*1

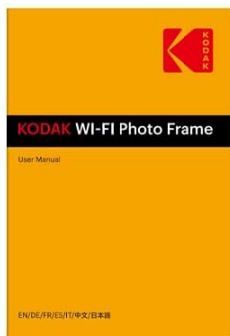

Instruction manual*1



Type-C data cable*1



Power cord *1



Photo frame stand*1

Image 4.3: A KODAK Digital Picture Frame displaying a family photo, surrounded by icons representing multiple users sharing content from their smartphones, illustrating the multi-user connection feature.

4.5 Clock and Calendar Functions

In addition to displaying photos, the frame can function as a digital clock and calendar. These settings can be configured in the main menu.



Image 4.4: A KODAK Digital Picture Frame on a nightstand displaying a clock setting interface, with a person sleeping in the background, highlighting the clock function.

5. STORAGE AND MEDIA MANAGEMENT

The KODAK Digital Picture Frame comes with built-in 32GB memory, capable of storing over 10,000 photos. It also supports external storage options.

- **Internal Storage:** 32GB built-in memory.
- **SD Card Support:** Expand storage by inserting an SD card (up to 32GB, sold separately) into the designated slot.
- **Type-C Connection:** Connect the frame to a computer via the Type-C data cable to manage and export received pictures and videos.



Image 5.1: An illustration showing various methods to upload photos to the KODAK Digital Picture Frame, including a laptop, a microSD card, and a smartphone using the KODAK app.

6. MAINTENANCE

To ensure the longevity and optimal performance of your digital picture frame, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry, lint-free cloth to gently wipe the screen and frame. Avoid using abrasive cleaners or solvents.
- **Placement:** Place the frame on a stable surface, away from direct sunlight, heat sources, and excessive moisture.
- **Power:** Always use the provided power adapter. Disconnect the power during electrical storms or when not in use for extended periods.

7. TROUBLESHOOTING

If you encounter issues with your KODAK Digital Picture Frame, refer to the following common problems and solutions:

Problem	Possible Solution
Frame is frozen or unresponsive.	Disconnect the power adapter, wait 10 seconds, then reconnect it to reboot the device.
Cannot connect to Wi-Fi.	Ensure your Wi-Fi password is correct. Try moving the frame closer to your router. Restart your router and the frame.
Photos/videos not appearing on the frame.	Verify that the KODAK app is connected to the correct frame. Check your internet connection. Ensure the files are in a supported format. Allow sufficient time for uploads to complete.

Problem	Possible Solution
Screen display issues (e.g., dim, incorrect colors).	Adjust brightness and display settings in the frame's menu. Ensure the screen is clean.

8. SPECIFICATIONS




Detailed technical specifications for the KODAK Digital Picture Frame (Model RCF-1018F-US):




- **Model Number:** RCF-1018F-US
- **Screen Size:** 10.1 inches
- **Resolution:** 1280 x 800 (HD IPS Touch Screen)
- **Internal Storage:** 32GB
- **External Storage:** Supports SD cards up to 32GB
- **Connectivity:** Wi-Fi, Type-C (for computer connection)
- **Dimensions:** 7.36 x 10.5 x 0.99 inches
- **Item Weight:** 2.51 pounds
- **Features:** Auto-Rotate, Wall Mountable, Multi-User Sharing via KODAK App, Clock, Calendar

9. WARRANTY AND SUPPORT

KODAK provides a 12-month service warranty for this product. Additionally, lifetime friendly support is available to assist you with any issues or questions you may have regarding your digital picture frame. For assistance, please refer to the contact information provided in your product packaging or visit the official KODAK support website.

Related Documents - RCF-1018F-US

	KODAK Classic Photo Frame RCF-1013W/RCF-8013W User Manual User manual for the KODAK Classic Photo Frame with WiFi connectivity, model RCF-1013W and RCF-8013W. Learn about installation, features, specifications, and technical support.
	KODAK Classic Photo Frame / WiFi Enabled User Manual User manual for the KODAK Classic Photo Frame with WiFi connectivity. This guide covers setup, features, app usage, and technical specifications for models RCF-1013W and RCF-8013W.
	KODAK 10-Inch Touchscreen Wi-Fi Digital Photo Frame User Manual Comprehensive user manual for the KODAK 10-Inch Touchscreen Digital Photo Frame (RCF-106H/RWF-108H) with Wi-Fi. Learn about setup, features, photo sharing, and specifications.

	<p>Podręcznik użytkownika skanerów Kodak i24x0 / i26x0 / i28x0</p> <p>Instrukcja obsługi dla skanerów dokumentów Kodak serii i24x0, i26x0 i i28x0. Zawiera informacje o instalacji, obsłudze, konserwacji i rozwiązywaniu problemów.</p>
	<p>Przewodnik Użytkownika Kodak Smart Touch Wersja 1.7</p> <p>Szczegółowy przewodnik użytkownika dotyczący funkcji Kodak Smart Touch w wersji 1.7. Dokument opisuje instalację, konfigurację, obsługę i rozwiązywanie problemów z oprogramowaniem do skanowania Kodak.</p>
	<p>Kodak Smart Touch: Guia Completo de Digitalização e Configuração</p> <p>Aprenda a usar o Kodak Smart Touch para digitalizar documentos de forma rápida e eficiente. Este manual cobre a configuração de tarefas, destinos de envio, personalização e solução de problemas para scanners Kodak.</p>