

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [GROSERY](#) /

› [GROSERY Massaging Recliner User Manual](#)

GROSERY GROSERY

GROSERY Massaging Recliner User Manual

Model: GROSERY

1. PRODUCT OVERVIEW

The GROSERY Massaging Recliner is designed to provide comfort and relaxation with its adjustable reclining function and integrated vibration massage system. This recliner features durable fabric upholstery, thick padding for enhanced comfort, and a convenient side pocket for the remote control. It includes a USB connector for an optional 5V USB power source (sold separately) to power the massage functions.



Figure 1.1: The GROSERY Massaging Recliner in a typical living room environment, showcasing its light gray fabric and comfortable design.

2. SAFETY INSTRUCTIONS

- Read all instructions carefully before assembly and use.
- Ensure all components are securely fastened before using the recliner.
- Keep children and pets away from the reclining mechanism during operation.
- Do not expose the electrical components (USB connector, remote) to water or excessive moisture.
- Only use a certified 5V USB power source (not included) with the USB connector. Using an uncertified or incorrect voltage power source may damage the product or pose a safety risk.
- Do not stand on the recliner or use it as a step stool.
- Avoid placing heavy objects on the recliner, especially on the backrest or footrest when extended.
- If any part is damaged or missing, do not use the product. Contact customer support for replacement parts.

3. PACKAGE CONTENTS

Please verify that all components are present and undamaged before beginning assembly.

- Recliner Base
- Backrest Section
- Armrests (pre-attached or separate, depending on model)
- Remote Control with attached USB cable
- Assembly Hardware (screws, bolts, washers, Allen key)
- Assembly Manual

4. SETUP AND ASSEMBLY

The GROSERY Massaging Recliner is designed for easy assembly. Refer to the detailed assembly manual included in your product packaging for step-by-step instructions specific to your model. The general assembly process involves:

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, soft surface to prevent scratches.
2. **Attach Backrest:** Slide the backrest onto the metal brackets located on the recliner base until it clicks securely into place.
3. **Connect Wiring:** Locate the wiring from the backrest and the base. Connect them firmly. Ensure the USB cable for the remote is accessible from the side pocket.
4. **Attach Legs/Feet:** If separate, screw or attach the recliner feet to the designated points on the base.
5. **Final Check:** Ensure all connections are secure and the recliner is stable before use.



Figure 4.1: Side view of the recliner, highlighting the integrated side pocket where the remote control can be stored and its USB cable connected.

5. OPERATING INSTRUCTIONS

5.1. Reclining Function

The recliner features an adjustable backrest and footrest for personalized comfort. To recline, gently push back on the backrest while applying slight pressure with your feet on the footrest. To return to the upright position, lean forward and push the footrest down with your legs.



Figure 5.1: Illustration of the recliner's adjustable backrest and footrest, demonstrating the range of motion for personalized comfort.

5.2. Vibration Massage Function

The recliner is equipped with 6 vibration massage points located in the back, seat, and legs. The massage function is controlled via the wired remote control.



Figure 5.2: Visual representation of the 6 vibration massage points distributed across the back, seat, and leg areas of the recliner.



Figure 5.3: Detailed view of the remote control for the massage function, showing buttons for mode, intensity, and target areas.

To use the massage function:

1. **Connect Power:** Plug the USB connector from the remote control into a certified 5V USB power source (e.g., a USB wall adapter, power bank, or computer USB port). *Note: The 5V USB power source is sold separately.*
2. **Turn On/Off:** Press the "ON/OFF" button on the remote control to activate or deactivate the massage function.
3. **Select Mode:** Use the "MODE" button to cycle through different massage programs (e.g., continuous, pulsating, waving). The indicator lights (1-5) will show the selected mode.
4. **Adjust Intensity:** Press the "INTENSITY" button to adjust the vibration strength (Low, Mid, Hi).
5. **Target Areas:** Use the "BACK", "THIGHS", and "LUMBAR" buttons to activate or deactivate massage in specific areas.

6. MAINTENANCE

- **Cleaning Fabric:** For general cleaning, use a soft cloth dampened with mild soap and water. Blot spills immediately. Do not use harsh chemicals or abrasive cleaners.
- **Dusting:** Regularly dust the recliner with a soft, dry cloth.
- **Inspection:** Periodically check all bolts and screws to ensure they are tight. Re-tighten if necessary.

- **Electrical Components:** Keep the USB connector and remote control clean and dry. Do not attempt to open or repair the electrical components yourself.



Figure 6.1: Close-up view of the recliner's durable fabric upholstery, illustrating its texture and quality.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Massage function not working.	USB power source not connected or faulty. Remote control not properly connected to the recliner. Remote control is off.	Ensure the USB cable is securely plugged into a working 5V USB power source. Try a different power source. Check all internal wiring connections within the recliner. Press the "ON/OFF" button on the remote.
Recliner does not recline smoothly.	Obstruction in the reclining mechanism. Loose assembly bolts.	Check for any objects obstructing the mechanism under the chair. Inspect and tighten all assembly bolts.
Unusual noises during operation.	Loose connections or components.	Inspect all assembly points and tighten any loose hardware.

8. SPECIFICATIONS

Feature	Detail
Brand	GROSERY
Model Name	GROSERY
Color	Light Gray
Material	Fabric (100% polyester), Plywood, Iron
Filling Material	Sponge, PP cotton
Overall Dimensions (W x D x H)	29.1" x 39" x 40.2"
Seat Dimensions (W x D x H)	17.7" x 21.3" x 18.1"
Voltage	DC 5 V (USB powered)
Massage Type	6-point vibration massage
Features	Adjustable backrest and footrest, USB connector, Remote control, Side pocket
Assembly Required	Yes

9. WARRANTY AND SUPPORT

For information regarding warranty coverage, returns, or technical support, please refer to the warranty card included with your product or contact the retailer/manufacturer directly. Keep your purchase receipt as proof of purchase.

Manufacturer: GROSERY