

- Manuals.plus /
- › Tribesigns /
- › Tribesigns C-Shaped End Table (Model RY0138) User Manual

Tribesigns RY0138

Tribesigns C-Shaped End Table (Model RY0138) User Manual

Detailed instructions for assembly, usage, and maintenance of your Tribesigns C-Shaped End Table.

1. PRODUCT OVERVIEW

The Tribesigns C-Shaped End Table (Model RY0138) is designed for versatility and convenience in small spaces. Its unique C-shape allows it to slide under sofas or beds, providing a stable surface for various activities. Constructed from high-grade engineered wood, this table offers durability and a rustic brown finish.



Image 1.1: The Tribesigns C-Shaped End Table in a living room setting, showcasing its design and functionality.

Key Features:

- **Space-Saving Design:** C-shaped base slides under furniture.
- **Durable Construction:** Made from engineered wood for stability.
- **Adjustable Feet:** Ensures stability on uneven surfaces.
- **Versatile Use:** Ideal for laptops, drinks, snacks, or decorative items.

2. PACKAGE CONTENTS

Please verify that all components listed below are present in your package before beginning assembly. If any parts are missing or damaged, please contact customer support.



Image 2.1: All individual components of the C-shaped end table.

List of Components:

- Top Panel (1)
- Curved Support Panel (2)
- Side Panel (3)
- Base Panel (4)
- Assembly Hardware (screws, dowels, adjustable feet)
- Assembly Guide
- Small Screwdriver (tool)

3. SETUP INSTRUCTIONS

Assembly:

Follow these steps carefully to assemble your C-Shaped End Table. A screwdriver is included for your convenience.

1. Identify all components and hardware using the provided list and diagrams.
2. Attach the Curved Support Panel (2) to the Side Panel (3) using the designated screws and dowels. Ensure a secure fit.
3. Connect the assembled Side and Curved Support Panels to the Base Panel (4).
4. Finally, attach the Top Panel (1) to the assembled structure.
5. Install the adjustable feet into the pre-drilled holes on the underside of the Base Panel.



Image 3.1: Installation of adjustable feet for stability.

Adjusting for Stability:

After assembly, place the table in its desired location. If the table wobbles, gently turn the adjustable feet clockwise or counter-clockwise until the table is stable and level on the floor.

4. OPERATING INSTRUCTIONS

The C-Shaped End Table is designed for flexible use in various indoor settings. Its primary function is to provide a convenient surface that can be easily accessed while seated.

Typical Usage Scenarios:

- **Sofa Side Table:** Slide the base under your sofa to bring the tabletop closer for drinks, snacks, or remote controls.
- **Laptop Workstation:** Position the table over your lap while sitting on a couch or chair to comfortably use a laptop or tablet.
- **Bedside Table:** Use it next to your bed for books, a lamp, or personal items.
- **Reading Nook:** Create a cozy reading spot by placing the table next to an armchair.



Image 4.1: Using the table as a laptop workstation over a sofa.



Image 4.2: The table positioned as a convenient bedside surface.

5. MAINTENANCE AND CARE

Proper care will ensure the longevity and appearance of your Tribesigns C-Shaped End Table.

- **Cleaning:** Wipe the surface with a damp cloth. Avoid harsh chemicals or abrasive cleaners, as these can damage the finish.
- **Spills:** Immediately wipe up any spills to prevent staining or water damage to the engineered wood.
- **Heat Protection:** Use coasters for hot beverages and placemats for warm dishes to protect the tabletop from heat marks.
- **Sunlight Exposure:** Avoid prolonged direct sunlight exposure to prevent fading or discoloration of the finish.
- **Weight Capacity:** Do not exceed the recommended maximum weight of 7 kilograms (approximately 15.4 lbs) on the tabletop.

6. TROUBLESHOOTING

This section addresses common issues you might encounter with your C-Shaped End Table.

Problem	Possible Cause	Solution
Table wobbles after assembly.	Uneven floor surface or improperly adjusted feet.	Adjust the leveling feet on the bottom of the base until the table is stable.
Difficulty inserting screws during assembly.	Misalignment of parts or pre-drilled holes.	Ensure all parts are correctly aligned before tightening screws. Do not overtighten. If holes appear too large, contact customer support for assistance.
Surface appears dull or stained.	Accumulated dust, dirt, or dried spills.	Clean the surface with a soft, damp cloth. For stubborn marks, use a mild wood cleaner designed for engineered wood, then wipe dry.

7. SPECIFICATIONS

Detailed technical specifications for the Tribesigns C-Shaped End Table (Model RY0138).



Image 7.1: Product dimensions for the C-Shaped End Table.

Feature	Detail
Brand	Tribesigns
Model Name	C-Shaped End Table

Feature	Detail
Model Number	RY0138
Product Dimensions (D x W x H)	11.81"D x 23.62"W x 25.59"H
Item Weight	6.5 Kilograms (14.3 lbs)
Maximum Weight Recommendation	7 Kilograms (15.4 lbs)
Color	Rustic Brown
Material Type	Engineered Wood
Tabletop Thickness	1.1 Inches
Indoor Outdoor Usage	Indoor
Recommended Number of People for Assembly	1
Includes All Assembly Tools	Yes

8. WARRANTY AND SUPPORT

Your Tribesigns C-Shaped End Table comes with a limited warranty, covering manufacturing defects under normal use. For specific warranty details, please refer to the documentation included with your purchase or contact Tribesigns customer service.

Customer Support:

For any questions regarding assembly, missing parts, or product issues, please contact Tribesigns customer service. Our team is dedicated to providing post-purchase support.

Please have your model number (RY0138) and purchase information ready when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DBZ49GTR>

More documents and user manuals: <https://manuals.plus/>