

## Beedove GH041-1

# Beedove GH041-1 2500W Handheld Portable Steam Cleaner User Manual

Brand: Beedove | Model: GH041-1

## 1. IMPORTANT SAFETY INSTRUCTIONS

Please read and understand all safety instructions before operating the Beedove GH041-1 Steam Cleaner. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- **High Temperature Warning:** The steam cleaner operates at high temperatures (up to 221°F/105°C) and produces high-pressure steam.
- **Avoid Contact:** Do not touch the metal nozzle or the steam directly. Do not spray steam on people, pets, or the unit itself.
- **Wear Protective Gear:** Always wear heat-resistant gloves (included) to prevent burns when operating the device.
- **Power Control:** To stop steaming, turn off the main power switch on the machine's body. There is no button or trigger on the handle to pause steam.
- **Water Safety:** Ensure the water tank is securely closed before operation. Do not overfill.
- **Electrical Safety:** Ensure the power cord is not damaged and is connected to a suitable power outlet. Keep the unit away from water sources when plugged in.

## 2. PRODUCT OVERVIEW AND COMPONENTS

The Beedove GH041-1 is a 2500W handheld portable steam cleaner designed for various cleaning tasks. It features a compact design and a range of accessories for versatile use.



Image: Beedove GH041-1 Steam Cleaner with all included accessories, including the main unit, hose, power cord, various brushes, and an extended sprayer rod.

### Included Accessories:

- 1 x Steam Cleaner Machine with 1100ml Water Tank
- 1 x 2M Steam Hose
- 1 x 1.5M Power Cord
- 3 x Different Brush Heads (Steel brush, Large plastic brush, Small plastic brush)
- 1 x Extended Sprayer Rod
- 1 x Pair of Heat-Insulating Gloves
- 1 x Glass Brush with Towel Cover
- 2 x Sealing Rings
- 1 x User Manual

### Key Features:

- **Smart Touch Adjustable Button:** Features a touch panel with 6 adjustable gears for steam output control.
- **Powerful Steaming:** 2500W high power, generates 221°F/105°C high-temperature and 3 Bar high

steam in approximately 15 seconds.

- **Large Water Tank:** 1100ml capacity allows for up to 30 minutes of continuous use without frequent refilling.
- **Easy Refill:** Top opening design for convenient water refilling, even during operation.
- **Versatile Application:** Suitable for deep cleaning hard floors, tile, carpet, grout, upholstery, furniture, toilets, windows, showers, sofas, and car interiors.

Image: Close-up of the steam cleaner's smart touch screen, illustrating the 6 adjustable steam output gears.

### 3. SETUP INSTRUCTIONS

Follow these steps to set up your Beedove GH041-1 Steam Cleaner for first use:

1. **Attach Accessories:** Connect the steam hose to the main unit. Select the appropriate brush head or the extended sprayer rod for your cleaning task and attach it securely to the steam hose handle. Ensure all connections are tight to prevent steam leakage.
2. **Fill Water Tank:** Unscrew the water tank cap. Carefully pour clean water into the 1100ml water tank. Do not exceed the maximum fill line. The tank can be refilled during operation if needed.
3. **Secure Cap:** Replace the water tank cap and ensure it is tightly sealed.
4. **Connect Power:** Plug the 1.5M power cord into a standard electrical outlet.



Image: Step-by-step visual guide for adding water, connecting power, turning on, and adjusting steam output.

### 4. OPERATING INSTRUCTIONS

Operating your steam cleaner for effective cleaning:

1. **Power On:** Flip the waterproof power switch to the 'ON' position. The unit will begin heating up. It typically takes about 15 seconds to reach operating temperature (221°F/105°C) and 3 Bar pressure.
2. **Adjust Steam Output:** Use the '+' and '-' buttons on the smart touch panel to select one of the 6 adjustable steam gears. The screen will display the current gear.
3. **Begin Cleaning:** Hold the spray handle firmly and aim the nozzle at the surface you wish to clean. Move the nozzle slowly over the area to allow the steam to penetrate and loosen dirt.
4. **Application Specifics:**
  - **High Temperature Nozzle:** Ideal for removing dust from gaps and new stains (e.g., refrigerators,

toys).

- **Steel Brush:** Use for stubborn stains on metal surfaces (e.g., stoves, range hoods, sinks).
- **Small Nylon Brush:** Suitable for small stains (e.g., toilets, air conditioners, pots).
- **Large Nylon Brush:** Best for cleaning larger areas (e.g., bathroom floors, countertops).
- **Glass Brush:** For cleaning large countertops, glass, and windows.
- **Extended Sprayer Rod:** Use to clean distant stains, corners, and crevices. Remember to remove the nylon adapter before installing the extension pole and ensure the waterproof O-ring is in place.

5. **Continuous Steam:** Note that the steam output is continuous once the unit is powered on and heated. There is no trigger on the handle to pause steam.

6. **After Cleaning:** Once finished, turn off the machine switch and unplug the power cord.



Image: Visual guide showing different brush heads (high temperature nozzle, steel brush, small nylon brush, large nylon brush, glass brush) and their suitable cleaning applications.

Video: This video demonstrates the assembly of the steam cleaner, filling the water tank, powering on, adjusting steam settings, and various cleaning applications using different attachments, including cleaning a pot, tiles, window tracks, car interior, and engine bay.

## 5. MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your steam cleaner:

- **Empty Water Tank:** After each use, ensure the unit is unplugged and cooled down. Pull out the stopper at the bottom of the tank to drain all remaining water.
- **Clean Exterior:** Wipe the machine's exterior with a dry cloth.
- **Storage:** Store the steam cleaner and its accessories in a cool, dry place.



Image: Illustration of filling the 1100ml water tank and emptying it after use by pulling out the bottom stopper.

## 6. TROUBLESHOOTING

This section provides solutions to common issues you might encounter with your steam cleaner.

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
No steam or low steam output	Water tank empty or low. Unit not fully heated. Nozzle/hose blockage.	Refill water tank. Allow 15 seconds for heating. Check for and clear any blockages in the nozzle or hose.
Water spitting instead of steam	Unit not fully heated. Loose connections.	Allow more time for the unit to heat up completely. Ensure all hose and nozzle connections are tight.
Unit does not power on	Power cord not properly plugged in. Power switch off. No power from outlet.	Check power cord connection. Ensure power switch is ON. Test outlet with another device.
Steam leakage from connections	Loose connections. Damaged sealing rings.	Tighten all connections. Replace sealing rings if damaged (2 spare rings included).

## 7. SPECIFICATIONS

Feature	Detail
Brand	Beedove
Model Number	GH041-1
Power/Wattage	2500 watts
Capacity (Water Tank)	1100 Milliliters
Steam Temperature	Up to 221°F / 105°C
Steam Pressure	3 Bar
Heat-up Time	Approx. 15 seconds
Form Factor	Handheld
Power Source	Corded Electric
Item Weight	2.13 kg
Parcel Dimensions	28.8 x 19.5 x 16.7 cm
Included Components	Hose, Nozzle, Plastic Brush, Steel Brush, Extended Sprayer Rod, Gloves, Glass Brush, Sealing Rings

## 8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or contact Beedove customer service directly. Specific warranty terms and conditions may vary.

