Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- Logitech /
- > Logitech POP Icon Keys Wireless Bluetooth Keyboard User Manual

Logitech 920-013073

Logitech POP Icon Keys Wireless Bluetooth Keyboard User Manual

Model: 920-013073

NTRODUCTION

This user manual provides comprehensive instructions for setting up, operating, and maintaining your Logitech POP Icon Keys Wireless Bluetooth Keyboard. Please read this manual thoroughly before using the product to ensure proper functionality and to maximize your user experience.

The Logitech POP Icon Keys keyboard is designed for comfortable typing with contoured, ultra-flat keys, offering a quiet and familiar laptop-like experience. It features customizable action keys and supports connection to up to three devices simultaneously via Bluetooth, allowing seamless switching between Windows, macOS, iPadOS, iOS, ChromeOS, and Android operating systems.

SAFETY INFORMATION

- Do not expose the keyboard to extreme temperatures or humidity.
- · Avoid dropping or subjecting the keyboard to strong impacts.
- Keep the keyboard away from liquids and corrosive substances.
- Do not attempt to disassemble or repair the keyboard yourself. Refer to qualified service personnel.
- Dispose of batteries according to local regulations.

PACKAGE CONTENTS

Verify that all items are present in your package:

- · Logitech POP Icon Keys Wireless Bluetooth Keyboard
- 2 x AAA Batteries (pre-installed or included separately)

Contenu du coffret







Emballage responsable

Longueur: 324,51 mm (12,88 po)

Hauteur: 22 mm (0,86 po) Largeur: 136,96 mm (5,39 po)

Poids: 530 g (18,69 onces) avec les piles

Image: The Logitech POP Icon Keys keyboard shown alongside two AAA batteries, illustrating the typical package contents. The image also displays the keyboard's dimensions and weight.

SETUP

1. Installing Batteries

- 1. Locate the battery compartment on the underside of the keyboard.
- 2. Open the battery compartment cover.
- 3. Insert the two AAA batteries, ensuring correct polarity (+/-).
- 4. Close the battery compartment cover securely.

2. Connecting via Bluetooth

- 1. Turn on the keyboard by sliding the power switch located on the top right edge. The LED indicator will light up.
- 2. Press and hold one of the Easy-Switch keys (F1, F2, or F3) for 3 seconds until the LED indicator above the key starts blinking rapidly. This indicates the keyboard is in pairing mode.
- 3. On your device (computer, tablet, or smartphone), go to Bluetooth settings.
- 4. Select "Logitech POP Keys" from the list of available devices.
- 5. Follow any on-screen prompts to complete the pairing process. The LED indicator on the keyboard will turn solid for 5 seconds and then turn off, indicating a successful connection.
- 6. Repeat these steps for up to two additional devices using the other Easy-Switch keys (F2 and F3).



Image: A top-down view of the Logitech POP Icon Keys Wireless Bluetooth Keyboard in Rose color, highlighting its compact layout and key design.

OPERATING THE KEYBOARD

Basic Functions

The Logitech POP Icon Keys keyboard features a standard QWERTY layout with additional function keys and customizable action keys.

- Typing: Use the main alphanumeric keys for text input.
- Function Keys (F1-F12): These keys have dual functions. By default, they perform media control or system functions (e.g., volume, brightness). To use them as standard F-keys, press the **Fn** key simultaneously.
- Easy-Switch Keys (F1, F2, F3): Quickly switch between up to three paired devices by pressing the corresponding Easy-Switch key.

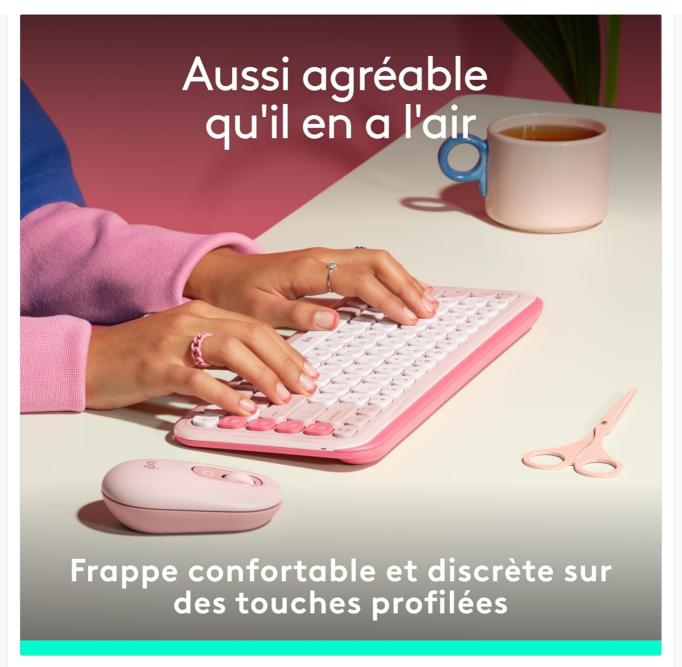


Image: A close-up view of hands typing on the Logitech POP Icon Keys keyboard, demonstrating the comfortable and quiet typing experience on its contoured keys.

Des raccourcis à portée de clic



Image: A detailed view of the top row of the Logitech POP Icon Keys keyboard, showing the function keys (F1-F12) and their secondary media control and system functions.

Customizable Action Keys

The Logitech POP Icon Keys keyboard includes dedicated action keys (Home, End, Pg Up, Pg Dn, and a Star key) on the right side. These keys can be customized using the Logi Options+ application to perform various shortcuts or launch applications.

Changez de mode en moins d'une seconde^[4]



Accédez à vos applications préférées d'une simple pression^[2]

Image: A detailed view of the right side of the Logitech POP Icon Keys keyboard, highlighting the dedicated Home, End, Page Up, Page Down, and Star action keys, which are customizable.

Customization with Logi Options+

To unlock the full potential of your Logitech POP Icon Keys keyboard, download and install the Logi Options+ application. This software allows you to:

- Customize the action keys to perform specific functions, launch applications, or insert text.
- Reassign function keys (F1-F12) to your preferred shortcuts.
- Adjust keyboard settings and check battery status.

Logi Options+ is available for recent versions of Windows and macOS. Visit the official Logitech website to download the application.



Image: A desk setup featuring the Logitech POP Icon Keys keyboard and a monitor displaying the Logi Options+ application interface, demonstrating how users can customize keyboard settings.



Image: A user seated at a desk, actively using the Logitech POP Icon Keys keyboard while the Logi Options+ application is visible on the monitor, illustrating the ease of customizing shortcuts.

CONNECTIVITY AND COMPATIBILITY

The Logitech POP Icon Keys keyboard utilizes Bluetooth wireless technology for connection. It supports simultaneous connection to up to three devices and is compatible with a wide range of operating systems:

- Windows
- macOS
- iPadOS
- iOS
- ChromeOS
- Android

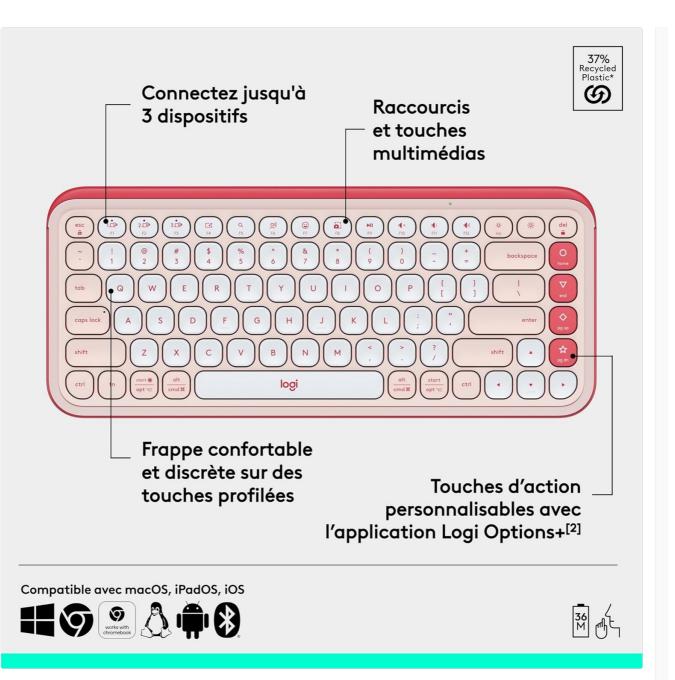


Image: A comprehensive diagram of the Logitech POP Icon Keys keyboard, highlighting key features such as multi-device connectivity (up to 3), media shortcuts, comfortable typing, customizable action keys, and broad compatibility with various operating systems including macOS, iPadOS, iOS, Windows, ChromeOS, and Android.

MAINTENANCE

Cleaning

- To clean the keyboard, use a soft, lint-free cloth.
- For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaning solution.
- Do not spray cleaners directly onto the keyboard.
- Avoid using harsh chemicals, solvents, or abrasive materials.

Battery Replacement

When the keyboard's battery indicator signals low power, replace the AAA batteries following the instructions in

TROUBLESHOOTING

Problem	Possible Cause	Solution
Keyboard not turning on.	Batteries are dead or incorrectly installed.	Check battery polarity or replace batteries. Ensure power switch is ON.
Keyboard not connecting via Bluetooth.	Not in pairing mode; device's Bluetooth is off; too many devices connected; interference.	Ensure keyboard is in pairing mode (blinking LED). Turn device's Bluetooth ON. Disconnect other Bluetooth devices. Move closer to the device.
Keys are not responding or typing incorrectly.	Low battery; software issue; debris under keys.	Replace batteries. Restart your device. Clean the keyboard. Re-pair the keyboard.
Custom action keys not working.	Logi Options+ not installed or configured.	Download and install Logi Options+. Ensure the keys are configured correctly within the application.

SPECIFICATIONS

Model Number	920-013073
Connectivity	Bluetooth
Wireless Range	Up to 10 meters (33 feet)
Battery Type	2 x AAA Alkaline batteries
Battery Life	Up to 36 months (may vary based on usage)
Compatible OS	Windows, macOS, iPadOS, iOS, ChromeOS, Android
Dimensions (L x W x H)	324.51 mm x 136.96 mm x 22 mm (12.88 in x 5.39 in x 0.86 in)
Weight (with batteries)	530 g (18.69 oz)
Material	Plastic (37% to 70% recycled plastic, excluding PCB and packaging)

 
WARRANTY AND SUPPORT

Your Logitech POP Icon Keys Wireless Bluetooth Keyboard comes with a 2-year manufacturer's warranty. For technical support, warranty claims, or additional information, please visit the official Logitech support website or contact their customer service. Keep your proof of purchase for warranty purposes.

Logitech Support Website: support.logi.com

© 2024 Logitech. All rights reserved.

Related Documents - 920-013073



Logitech POP Icon Combo: Setup and Easy Switch Guide

A concise guide to setting up your Logitech POP Icon Combo keyboard and mouse using Bluetooth and the Logi App, including instructions for the Easy Switch feature.



Logitech MX Keys Advanced Wireless Illuminated Keyboard

Discover the Logitech MX Keys, an advanced wireless illuminated keyboard designed for efficiency, stability, and precision. Featuring perfect-stroke keys, smart illumination, and multi-device connectivity for a seamless workflow.



Logitech MX Keys Advanced Wireless Illuminated Keyboard Setup and Features

A comprehensive guide to setting up and using the Logitech MX Keys wireless keyboard, covering quick and detailed setup, connectivity options, software installation, multi-OS compatibility, battery status, smart backlighting, and Logitech Flow technology.



Logitech MX Keys Keyboard: Getting Started and Features

A comprehensive guide to setting up and using the Logitech MX Keys wireless keyboard, covering pairing, software installation, smart backlighting, battery status, and Logitech Flow technology for multi-computer productivity.



Logitech MX Keys Mini Keyboard: Bluetooth Pairing & Setup Guide

Comprehensive user manual for the Logitech MX Keys Mini Keyboard, covering Bluetooth pairing, setup, software installation, multi-device connectivity, and feature details for creators.



Logitech MX Keys Advanced Wireless Keyboard Setup and Features Guide

A comprehensive guide to setting up and using the Logitech MX Keys Advanced Wireless Illuminated Keyboard, covering quick setup, detailed setup, pairing, software installation, multi-OS compatibility, battery status, smart backlighting, and Logitech Flow.