

Greenworks GPW2101A

Greenworks 2100 PSI 1.2 GPM 13Amp Compact Electric Pressure Washer Instruction Manual

Model: GPW2101A

IMPORTANT SAFETY INFORMATION

Please read and understand all safety warnings and instructions before operating this pressure washer. Failure to follow the warnings and instructions may result in electric shock, fire, and/or serious injury.

- Avoid spraying electrical components.
- Never point the nozzle at people or animals.
- Ensure all connections are secure before operation to prevent leaks.
- Always wear appropriate personal protective equipment (PPE) during operation.
- Store the unit in a dry, frost-free environment.

PRODUCT OVERVIEW

The Greenworks 2100 PSI 1.2 GPM 13Amp Compact Electric Pressure Washer is designed for residential outdoor cleaning tasks. It offers powerful cleaning performance for various surfaces with convenient features for ease of use and storage.

Key Features

- **Power:** 2100 MAX PSI at 1.2 GPM for effective cleaning.
- **Motor:** 13 Amp Universal Motor suitable for medium-duty projects.
- **Start:** Push-button start for quick and reliable operation.
- **Soap Applicator:** Integrated soap applicator for applying detergents.
- **Accessories:** Easy-to-grip spray nozzle, metal quick-connect wand, and multiple nozzles (25°, 40°, soap, & turbo).
- **Portability:** Telescoping handle and wheels for easy transport and storage.



Figure 1: Greenworks 2100 PSI Electric Pressure Washer with included accessories.

SETUP AND ASSEMBLY

Follow these steps to set up your pressure washer for first use.

1. **Attach the Handle:** Secure the telescoping handle to the main unit.
2. **Connect High-Pressure Hose:** Connect one end of the high-pressure hose to the pressure washer's outlet and the other end to the spray gun. Ensure connections are hand-tight and leak-free.
3. **Connect Water Supply:** Attach your garden hose to the water inlet on the pressure washer. Turn on the water supply completely.
4. **Connect Power:** Plug the 35' power cord with in-line GFCI into a suitable weatherproof outdoor outlet.



25' KINK-RESISTANT HIGH-PRESSURE HOSE

STRONG, VERSATILE, AND HASSLE-FREE

Figure 2: The pressure washer features a telescoping handle and wheels for enhanced portability.



35' POWER CORD WITH IN-LINE GFCI

SUITABLE FOR WEATHERPROOF OUTDOOR OUTLETS

Figure 3: Quick-connect universal coupler for easy attachment of accessories.



ENJOY HASSLE-FREE SERVICING WITH GREENWORKS.

OUR EQUIPMENT FEATURES EASILY REPLACEABLE PARTS
(HOSES, WHEELS, NOZZLES, SPRAY WAND).

Figure 4: The 35-foot power cord includes an in-line GFCI, suitable for weatherproof outdoor outlets.

Video: Greenworks 2100 PSI Portable Pressure Washer Overview

Video 1: This video provides a comprehensive overview of the Greenworks 2100 PSI Portable Pressure Washer, demonstrating its features and assembly process.

OPERATING INSTRUCTIONS

Nozzle Selection

The pressure washer comes with various quick-connect nozzles for different cleaning tasks:

- **25° Nozzle (Green):** Ideal for general cleaning of wood and outdoor furniture.
- **40° Nozzle (White):** Best for multipurpose cleaning, such as house siding and windows.
- **Soap Nozzle (Black):** Used with the soap applicator for detergent application.
- **Turbo Nozzle:** Provides a concentrated, oscillating stream for tough jobs and stubborn dirt.



25° SPRAY ANGLE

BEST FOR CLEANING WOOD AND
OUTDOOR FURNITURE

Figure 5: A selection of quick-connect nozzles for different cleaning applications.



40° SPRAY ANGLE

BEST FOR MULTIPURPOSE, HOUSE AND
WINDOW CLEANING

Figure 6: The 25° spray angle is effective for cleaning wood and outdoor furniture.



TURBO NOZZLE

FOR TOUGH JOBS

Figure 7: The 40° spray angle is suitable for multipurpose cleaning, including house siding and windows.



ADJUSTABLE HIGH-PRESSURE SOAP APPLICATOR

ADJUSTABLE KNOB SPRAYS UP TO 20' FOR
MAXIMUM COVERAGE AND VERSATILITY

Figure 8: The turbo nozzle provides concentrated power for removing stubborn dirt from hard surfaces.

Starting and Stopping

1. **To Start:** Ensure water and power are connected. Press the push-button start on the unit. Squeeze the trigger on the spray gun to begin spraying.
2. **Total Stop System:** The unit features a Total Stop System (TSS) which automatically pauses operation when the trigger is released, saving energy and prolonging pump life. The motor will restart when the trigger is squeezed again.
3. **To Stop:** Release the spray gun trigger. For complete shutdown, press the power button on the unit and turn off the water supply.



25° SPRAY ANGLE

BEST FOR CLEANING WOOD AND
OUTDOOR FURNITURE

Figure 9: The Total Stop System pauses operation when the trigger is released, conserving energy.

Using the Soap Applicator

To apply soap, fill the integrated soap applicator with appropriate pressure washer detergent. Attach the black soap nozzle to the spray gun. The adjustable knob allows for maximum coverage and versatility.



ULTIMATE PORTABILITY

TELESCOPING HANDLE AND WHEELS FOR EASY TRANSPORT, WITH GUN MOUNT, NOZZLE STORAGE, AND HOSE ORGANIZER

Figure 10: The adjustable high-pressure soap applicator allows for broad coverage of cleaning solutions.

Video: Greenworks 2000 PSI 1.2 GPM Pressure Washer in Action

Video 2: This seller video demonstrates the Greenworks pressure washer (2000 PSI model) in various cleaning scenarios, showcasing its operational capabilities.

MAINTENANCE

The Greenworks Electric Pressure Washer is designed for minimal maintenance.

- **Zero Maintenance:** No oil changes, no filters, no belts, and no fumes.
- **Hassle-Free Servicing:** Equipment features easily replaceable parts such as hoses, wheels, nozzles, and spray wand.



QUICK-CONNECT

1/4" UNIVERSAL COUPLER

Figure 11: The electric design eliminates the need for traditional engine maintenance.

Storage

For optimal longevity, store the pressure washer in a dry, indoor location where temperatures remain above freezing. Drain all water from the unit and hoses before storing to prevent damage from freezing.

TROUBLESHOOTING

If you encounter issues with your pressure washer, consider the following common troubleshooting steps:

- **No Pressure:** Ensure the water supply is fully open and the garden hose is not kinked. Check for air in the pump by running the unit with the trigger open until a steady stream of water appears.
- **Unit Not Starting:** Verify the power cord is securely plugged into a working GFCI outlet. Check if the GFCI has tripped.
- **Leaks:** Tighten all hose connections. Inspect O-rings for damage and replace if necessary.

PRODUCT SPECIFICATIONS

Specification	Value
Brand	Greenworks

Model Number	GPW2101A
Power Source	Corded Electric
Maximum Pressure	2100 PSI
Maximum Flow Rate	1.2 Gallons Per Minute
Motor Amperage	13 Amp
Hose Length	25 Feet
Power Cord Length	35 Feet
Item Weight	1.5 Pounds
Product Dimensions	16.93"L x 13.11"W x 36.22"H
Certification	SGS Certified

WARRANTY AND SUPPORT


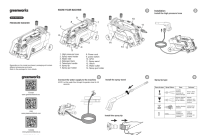
Greenworks stands behind its products with a comprehensive warranty.





- **3-Year Tool Warranty:** This product is covered by a 3-year limited warranty. Please refer to the warranty card included with your product for full details and terms.



Figure 12: The Greenworks 3-Year Tool Warranty ensures product reliability and customer satisfaction.

Related Documents - GPW2101A

 <p>2000 PSI 1.2 GPM ELECTRIC PRESSURE WASHER GPW 2002</p> <p>OPERATOR'S MANUAL TOLL FREE HELP LINE: 1-888-336-6765 (800-855-8571) Read all safety rules and instructions carefully before operating this tool. www.greenworkstools.com</p>	<p>Greenworks GPW 2002 Electric Pressure Washer Operator's Manual</p> <p>Operator's manual for the Greenworks GPW 2002 electric pressure washer, detailing safety instructions, assembly, operation, maintenance, and troubleshooting.</p>
	<p>Greenworks Pressure Washer Quick Start Guide: Installation, Operation, and Maintenance</p> <p>A quick start guide for Greenworks pressure washers, covering installation steps, operation instructions, and maintenance tips for optimal performance. Includes diagrams explained in text.</p>

 <p>greenworks 1800 PSI / 1.1 GPM ELECTRIC PRESSURE WASHER GPW 1800</p> <p>OPERATOR'S MANUAL TOLL FREE HELP LINE: 1-888-806WORKS (866-687-7575) Read all safety rules and instructions carefully before operating this tool. www.greenworkstools.com</p>	<p>Greenworks GPW 1800 Electric Pressure Washer Operator's Manual</p> <p>This operator's manual provides comprehensive instructions for the Greenworks GPW 1800 Electric Pressure Washer, covering essential safety guidelines, assembly procedures, operational details, maintenance tips, troubleshooting solutions, and warranty information.</p>
 <p>greenworks 2000 PSI / 1.2 GPM ELECTRIC PRESSURE WASHER GPW 2002</p> <p>OPERATOR'S MANUAL TOLL FREE HELP LINE: 1-888-806WORKS (866-687-7575) Read all safety rules and instructions carefully before operating this tool. www.greenworkstools.com</p>	<p>Greenworks GPW 2002 Electric Pressure Washer Operator's Manual</p> <p>User manual for the Greenworks GPW 2002 Electric Pressure Washer, covering safety, assembly, operation, maintenance, and troubleshooting. Includes product specifications and support information.</p>
 <p>greenworks</p>	<p>Greenworks GPW 1803 Electric Pressure Washer: Quick Start Guide and Setup</p> <p>A concise guide to setting up and using the Greenworks GPW 1803 Electric Pressure Washer, including assembly instructions, detergent usage, spray tip applications, and safety information.</p>
 <p>User Manual of Product 1: Greenworks GPW1501 12 Amp 1500 PSI 1.2 GPM Electric Pressure Washer</p>	<p>Greenworks GPW1501 Electric Pressure Washer User Manual</p> <p>Comprehensive user manual for the Greenworks GPW1501 Electric Pressure Washer, covering safety instructions, assembly, operation, maintenance, troubleshooting, and warranty information.</p>