

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Crosley](#) /
- › [Crosley Nocturne CR7501A-CL Turntable Instruction Manual](#)

Crosley CR7501A-CL

Crosley Nocturne CR7501A-CL Turntable Instruction Manual

Model: CR7501A-CL

[Introduction](#)
[What's in the Box](#)
[Features](#)
[Setup](#)
[Operating](#)
[Maintenance](#)
[Troubleshooting](#)
[Specifications](#)
[Warranty & Support](#)

1. INTRODUCTION

Welcome to the world of vinyl with your new Crosley Nocturne CR7501A-CL 2-Speed Bluetooth Record Player Turntable. This manual provides essential information for setting up, operating, and maintaining your turntable and matching stereo speakers. Please read these instructions carefully before use to ensure optimal performance and longevity of your product.



2. WHAT'S IN THE BOX

Verify that all components are present before proceeding with setup:

- Turntable Unit
- Matching Stereo Speakers (2 units)
- Tonearm
- Adjustable Counterweight
- 45 RPM Adapter
- Slip Mat
- Tinted Dust Cover
- Power Adapter
- Speaker Cables

3. KEY FEATURES

- **Two-Speed Belt-Drive Turntable with Auto Stop:** Plays 33 1/3 and 45 RPM records on a full-size aluminum platter. Includes a tinted dust cover, 12-inch slipmat, and a 45 adapter.



Image 3.1: The turntable features a full-size aluminum platter and two-speed operation.

- **Exceptional Sound Control:** Boost bass and balance treble using the built-in controls. The cueing lever facilitates smooth playback with a high-performance Audio-Technica needle and vibration-control feet.



Image 3.2: Dedicated bass and treble controls allow for sound profile adjustment.

- **High-End Components:** Features a carbon fiber tonearm for reduced vibration, an adjustable counterweight, and anti-skate for precise needle placement. The pre-mounted moving magnet cartridge is a standard 1/2-inch mount for easy upgrades.



Bass and Treble Controls
easily adjust sound profile

Image 3.3: The carbon fiber tonearm and Audio-Technica cartridge ensure high-fidelity audio.

- **Bluetooth Connectivity:** Stream music through the included matching full-range bookshelf speakers from your mobile device, or stream vinyl playback to your own Bluetooth-enabled speakers. The included speakers offer 80W Peak, 40W RMS (20W RMS x 2) with a frequency response of 20Hz-20Khz.

- Standard Half-inch Mount with Replaceable Cartridge
- Pre-Mounted Moving Magnet Audio Technica Cartridge



Image 3.4: Bluetooth functionality allows for wireless audio streaming.

- **Versatile Connection Options:** Connect to your stereo system, active speakers, or other external devices using the line in/out audio jacks.



Image 3.5: Rear panel connections for external audio devices.

Product Overview Video

Your browser does not support the video tag.

Video 3.1: A detailed walkthrough of the Crosley Nocturne turntable's features and design.

Your browser does not support the video tag.

Video 3.2: An overview highlighting the key aspects of the Crosley Nocturne 2-Speed Bluetooth Turntable.

4. SETUP INSTRUCTIONS

1. **Unpacking:** Carefully remove all components from the packaging. Retain packaging for future transport or storage.
2. **Placement:** Place the turntable on a stable, level surface away from direct sunlight, heat sources, and excessive vibration. Position the speakers on either side of the turntable for optimal stereo separation.



Image 4.1: Proper placement of the turntable and speakers on a stable surface.

3. **Platter and Belt Installation:** Place the aluminum platter onto the turntable spindle. Locate the drive belt and carefully loop it around the motor pulley and the inner rim of the platter. Ensure the belt is not twisted.
4. **Dust Cover:** Attach the tinted dust cover to the hinges at the back of the turntable.
5. **Tonearm Assembly:** Install the adjustable counterweight onto the rear of the tonearm. Adjust the counterweight and anti-skate settings according to the included quick start guide or detailed instructions for optimal tracking force. The pre-mounted Audio-Technica cartridge is ready for use.
6. **Speaker Connection:** Connect the included speaker cables from the turntable's speaker outputs to the corresponding inputs on the matching stereo speakers. Ensure correct polarity (red to red, black to black).
7. **Power Connection:** Connect the power adapter to the DC IN port on the turntable and then plug it into a wall outlet.

5. OPERATING INSTRUCTIONS

5.1 Playing a Record

1. **Power On:** Press and hold the POWER/MODE knob for a few seconds to turn on the unit.

2. **Select Speed:** Set the speed selector switch (33 1/3 or 45 RPM) to match the record you are playing. Use the 45 RPM adapter for singles if needed.
3. **Place Record:** Place your record on the platter and ensure the slipmat is underneath.
4. **Lift Tonearm:** Gently lift the tonearm using the cueing lever.
5. **Position Needle:** Move the tonearm over the desired track on the record.
6. **Lower Tonearm:** Slowly lower the tonearm using the cueing lever. The needle will make contact with the record, and playback will begin.
7. **Adjust Sound:** Use the BASS and TREBLE knobs to fine-tune the audio output to your preference.
8. **Auto Stop:** The turntable features an auto-stop function that will stop the platter rotation when the record reaches the end. This can be toggled on/off via a switch on the rear panel.

5.2 Bluetooth Streaming (Input)

To stream music from your mobile device to the Nocturne's speakers:

1. **Activate Bluetooth Mode:** Press the POWER/MODE knob until the Bluetooth indicator light illuminates (usually blue).
2. **Pair Device:** On your mobile device, enable Bluetooth and search for "Crosley Nocturne" in the list of available devices. Select it to pair.
3. **Play Music:** Once paired, you can play audio from your device, and it will output through the Nocturne's speakers.

5.3 Bluetooth Streaming (Output)

To stream vinyl playback from the Nocturne to external Bluetooth speakers (not included):

1. **Enable External Speaker Pairing:** Ensure your external Bluetooth speaker is in pairing mode.
2. **Activate Turntable Bluetooth Output:** Refer to the specific instructions for activating Bluetooth output on your Nocturne turntable. This typically involves a dedicated button or a specific mode selection.
3. **Connect:** The turntable will search for and connect to your external Bluetooth speaker.

6. MAINTENANCE

- **Cleaning the Dust Cover:** Use a soft, dry cloth to wipe the dust cover. Avoid abrasive cleaners.
- **Cleaning the Stylus (Needle):** Gently brush the stylus from back to front using a soft brush designed for stylus cleaning. Do not use excessive force.
- **Cleaning the Cabinet:** Wipe the turntable and speaker cabinets with a soft, slightly damp cloth. Do not use harsh chemicals or solvents.
- **Record Care:** Keep your records clean and stored vertically in their sleeves to prevent dust accumulation and warping.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power adapter not connected; outlet not active.	Ensure power adapter is securely connected and plugged into a working outlet. Press and hold POWER/MODE knob to turn on.
No sound from speakers	Speakers not connected; volume too low; incorrect mode.	Check speaker cable connections. Increase volume. Ensure correct input mode (Phono for records, Bluetooth for streaming).
Skipping or distorted sound	Dirty record; dirty or damaged stylus; incorrect tracking force/anti-skate.	Clean record. Clean stylus. Check stylus for damage. Re-adjust counterweight and anti-skate settings.
Bluetooth pairing issues	Device too far; incorrect pairing mode; interference.	Ensure devices are within range. Put both devices in pairing mode. Turn off other Bluetooth devices.

8. SPECIFICATIONS

Feature	Detail
Model Name	CR7501A-CL
Brand	Crosley
Product Dimensions	12.75 x 29.75 x 9.75 inches
Item Weight	18.34 pounds
Maximum Rotational Speed	45 RPM (also supports 33 1/3 RPM)
Material	Metal, Plastic, Wood
Color	Charcoal
Speaker Output	80W Peak, 40W RMS (20W RMS x 2)
Frequency Response	20Hz-20Khz
Max Power Consumption	50 watts
Special Feature	Adjustable Counterweight, Bluetooth, Auto Stop






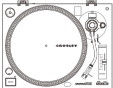
Image 8.1: Detailed dimensions of the turntable and speakers for placement planning.

9. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the official Crosley website or contact their customer service department. Keep your purchase receipt as proof of purchase for warranty claims. Online resources and FAQs may also be available on the manufacturer's website to assist with common inquiries.

© 2024 Crosley. All rights reserved.

Related Documents - CR7501A-CL

<div> CR7501A Nocturne Record Player with Speakers Instruction Manual</div> <div> <small>Questions, problems, missing parts? Before contacting us for help, call Customer Service 8 a.m. - 5 p.m. EST, Monday - Friday 1-800-255-2627 www.crosleyusa.com</small></div>	<p>Crosley CR7501A Nocturne Record Player with Speakers Instruction Manual</p> <p>This instruction manual for the Crosley CR7501A Nocturne Record Player with Speakers provides comprehensive guidance on setup, operation, maintenance, and troubleshooting for this consumer audio device.</p>
<div> C100BT C100 TURNTABLE</div> <div> OPERATING INSTRUCTIONS CROSLEY</div>	<p>Crosley C100BT C100 Turntable: Operating Instructions and Specifications</p> <p>Comprehensive operating instructions, safety guidelines, features, assembly, maintenance, and technical specifications for the Crosley C100BT C100 Belt Driven Two Speed Stereo Turntable.</p>

<div><div>CROSLEY</div><div>C62A Turntable Instruction Manual</div><div></div></div>	<p>Crosley C62A Turntable: Official Instruction Manual & User Guide</p> <p>Download the official Crosley C62A turntable instruction manual. This guide provides detailed steps for setup, operation, needle replacement, maintenance, troubleshooting, and technical specifications for your Crosley C62A record player.</p>
<div><div>CROSLEY</div><div>T150B Stereo Turntable System Instruction Manual</div><div></div><div><small>Questions, problems, missing parts? Before returning to the store, call Customer Service 8 a.m. - 5 p.m. EST, Monday - Friday 1-800-CROSLEY www.crosleyusa.com</small></div></div>	<p>Crosley T150B Stereo Turntable System: Instruction Manual</p> <p>Comprehensive guide for the Crosley T150B Stereo Turntable System, covering setup, operation, and maintenance for optimal vinyl playback.</p>
<div><div>CROSLEY</div><div>CR6253B Anthology Turntable Instruction Manual</div><div></div><div><small>Questions, problems, missing parts? Before returning to the store, call Customer Service 8 a.m. - 5 p.m. EST, Monday - Friday 1-800-CROSLEY www.crosleyusa.com</small></div></div>	<p>Crosley CR6253B Anthology Turntable: User Manual, Setup, and Operation Guide</p> <p>Get started with your Crosley CR6253B Anthology Turntable. This comprehensive guide covers setup, operation, Bluetooth connectivity, maintenance, troubleshooting, and safety instructions for your record player.</p>
<div><div>CROSLEY</div><div>CR8017B Voyager Turntable Instruction Manual</div><div></div><div><small>Questions, problems, missing parts? Contact us at 1-800-CROSLEY or visit us online at www.crosleyusa.com or call 1-800-CROSLEY Crosley products are manufactured primarily in China, Taiwan, and the Philippines. © 2017 Crosley The information www.crosleyusa.com</small></div></div>	<p>Crosley CR8017B Voyager Turntable Instruction Manual</p> <p>This instruction manual provides detailed guidance on setting up, operating, and maintaining the Crosley CR8017B Voyager Turntable. Learn about its features, connections, and troubleshooting.</p>