

[Manuals.plus](#) /

> [INFINI FUN](#) /

> INFINI FUN - My First 2-in-1 Tablet - Electronic Learning Toy - Imitation Toy - Various Themes Such as Animals, Numbers and The Alphabet - from 2 Years

INFINI FUN 1121500126

INFINI FUN - My First 2-in-1 Tablet User Manual

Model: 1121500126

PRODUCT OVERVIEW

The INFINI FUN My First 2-in-1 Tablet is an electronic learning toy designed to introduce children to various educational concepts through interactive play. It functions as both a standalone tablet and a fully functional learning laptop when connected to its removable keyboard.

Key features include:

- A 2-in-1 computer with a tablet and a removable keyboard, mimicking adult devices.
- Three distinct game modes for versatile learning.
- Content covering colours, animals, shapes, numbers, and the full alphabet.
- Designed to encourage imagination and fine motor skills.
- Includes 2 x 1.5 V AAA batteries for immediate use.

SAFETY INFORMATION

Please read and understand the following safety guidelines before use:

- The included batteries are for demonstration purposes only. Replace them with fresh batteries for optimal performance.
- Retain the packaging for future reference.
- Product contents may vary slightly from images shown.
- Remove all packaging materials, including plastic bags, ties, and labels, before giving the toy to a child to prevent choking hazards.

SETUP

Follow these steps to set up your INFINI FUN My First 2-in-1 Tablet:

1. **Battery Installation:** The tablet requires 2 x 1.5 V AAA batteries. These are included for initial demonstration. Locate the battery compartment on the back of the tablet, open it with a small

screwdriver, insert the batteries observing the correct polarity (+/-), and close the compartment securely.

2. **Connecting the Keyboard:** To transform the tablet into a laptop, align the tablet with the designated slot on the keyboard base. Gently slide the tablet into place until it clicks securely. The connection is designed for easy attachment and detachment.
3. **Power On:** Press the power button, typically located on the tablet's frame, to turn on the device.



Image: The INFINI FUN My First 2-in-1 Tablet, illustrating its design with the tablet and detachable keyboard, as seen in its packaging.

OPERATING INSTRUCTIONS

The INFINI FUN My First 2-in-1 Tablet offers multiple modes for engaging learning:

- **Tablet Mode:** Use the tablet as a standalone device. Interact with the touch-sensitive icons on the screen to explore various themes such as animals, numbers, shapes, and colours.
- **Laptop Mode:** Once the tablet is connected to the keyboard, it functions as a learning laptop. The keyboard allows children to learn and practice all letters of the alphabet, enhancing their early literacy skills.
- **Game Modes:** The tablet features three distinct game modes designed to make learning fun and interactive. Navigate through these modes using the on-screen controls or keyboard inputs to discover different activities and challenges.

Encourage your child to explore the different interactive elements and sounds to maximize their learning experience.



Image: A detailed view of the tablet's screen, showcasing its interactive interface with icons for animals, numbers, and shapes, indicating its diverse learning themes.

MAINTENANCE

To ensure the longevity and proper functioning of your INFINI FUN My First 2-in-1 Tablet, follow these simple maintenance guidelines:

- **Cleaning:** Wipe the surface of the tablet and keyboard with a soft, dry cloth. For stubborn marks, a slightly damp cloth can be used, but ensure no moisture enters the electronic components. Do not use abrasive cleaners or solvents.
- **Storage:** Store the device in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** If the device will not be used for an extended period, remove the batteries to prevent leakage and potential damage.

TROUBLESHOOTING

If you encounter any issues with your INFINI FUN My First 2-in-1 Tablet, refer to the following common solutions:

- **Device Not Turning On:**

- Check if the batteries are inserted correctly with the correct polarity (+/-).
 - Replace the batteries with fresh ones, as the included batteries are for demonstration.
 - Ensure the power button is pressed firmly.
- **No Sound or Low Sound:**
 - Verify that the volume is not set to minimum or muted.
 - Replace the batteries.
- **Keyboard Not Responding:**
 - Ensure the tablet is securely connected to the keyboard base. Detach and reattach to confirm proper connection.
 - Check if the tablet is powered on.
- **Screen Unresponsive:**
 - Ensure the screen is clean and free of debris.
 - Try turning the device off and on again.

If problems persist after attempting these solutions, please contact the manufacturer for further assistance.

SPECIFICATIONS

Feature	Detail
Model Number	1121500126
Brand	Infini Fun
Product Dimensions	22 x 19.3 x 0.1 cm
Item Weight	579 Grams
Material Type	Plastic
Batteries Required	Yes (2 x AAA)
Batteries Included	Yes (for demonstration)
Manufacturer Recommended Age	24 months and up
Languages Supported	Dutch, English, French, German
Manufacturer	Jumbo Group

WARRANTY AND SUPPORT

For information regarding product warranty, please refer to the documentation provided with your purchase or contact the manufacturer directly. The manufacturer is Jumbo Group.

For technical support, troubleshooting assistance beyond this manual, or inquiries about replacement parts, please contact the manufacturer's customer service department. Contact details can typically be found on the product packaging or the manufacturer's official website.

