

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Mattel](#) /

› [Mattel Jurassic World Rebirth Power Devour Tyrannosaurus Rex Dinosaur Figure Instruction Manual](#)

Mattel JGB50

Mattel Jurassic World Rebirth Power Devour Tyrannosaurus Rex Dinosaur Figure Instruction Manual

Model: JGB50

INTRODUCTION

This manual provides essential information for the setup, operation, and maintenance of your Mattel Jurassic World Rebirth Power Devour Tyrannosaurus Rex Dinosaur Figure. Please read these instructions carefully to ensure proper use and enjoyment of the product.

SETUP

1. Unboxing and Initial Inspection

Carefully remove the Tyrannosaurus Rex figure from its packaging. Inspect the figure for any visible damage or missing parts. Ensure all packaging ties are removed before proceeding.



Figure in its original packaging.

2. Battery Installation

The figure requires 3 AA batteries (included). Locate the battery compartment on the underside of the dinosaur. Use a Phillips head screwdriver to open the compartment, insert the batteries according to the polarity indicators, and securely close the cover.



The underside of the dinosaur figure, indicating battery placement.

OPERATING INSTRUCTIONS

1. Tongue-Activated Chomp, Lights, and Sounds

Pressing the dinosaur's tongue once will activate a roar. Holding the tongue down for an extended period will initiate a continuous frenzy of chomping action, accompanied by lights and sounds.




Hold down tongue for a Chomp & Devour!

Activating the chomp and devour feature by pressing the tongue.

2. Tail Manipulation for Head Movement

The tail of the figure can be manipulated to control the head's movement. Move the tail up and down to make the head move vertically, opening and closing the jaw. Twist the tail side to side to change the direction of the head's attack.

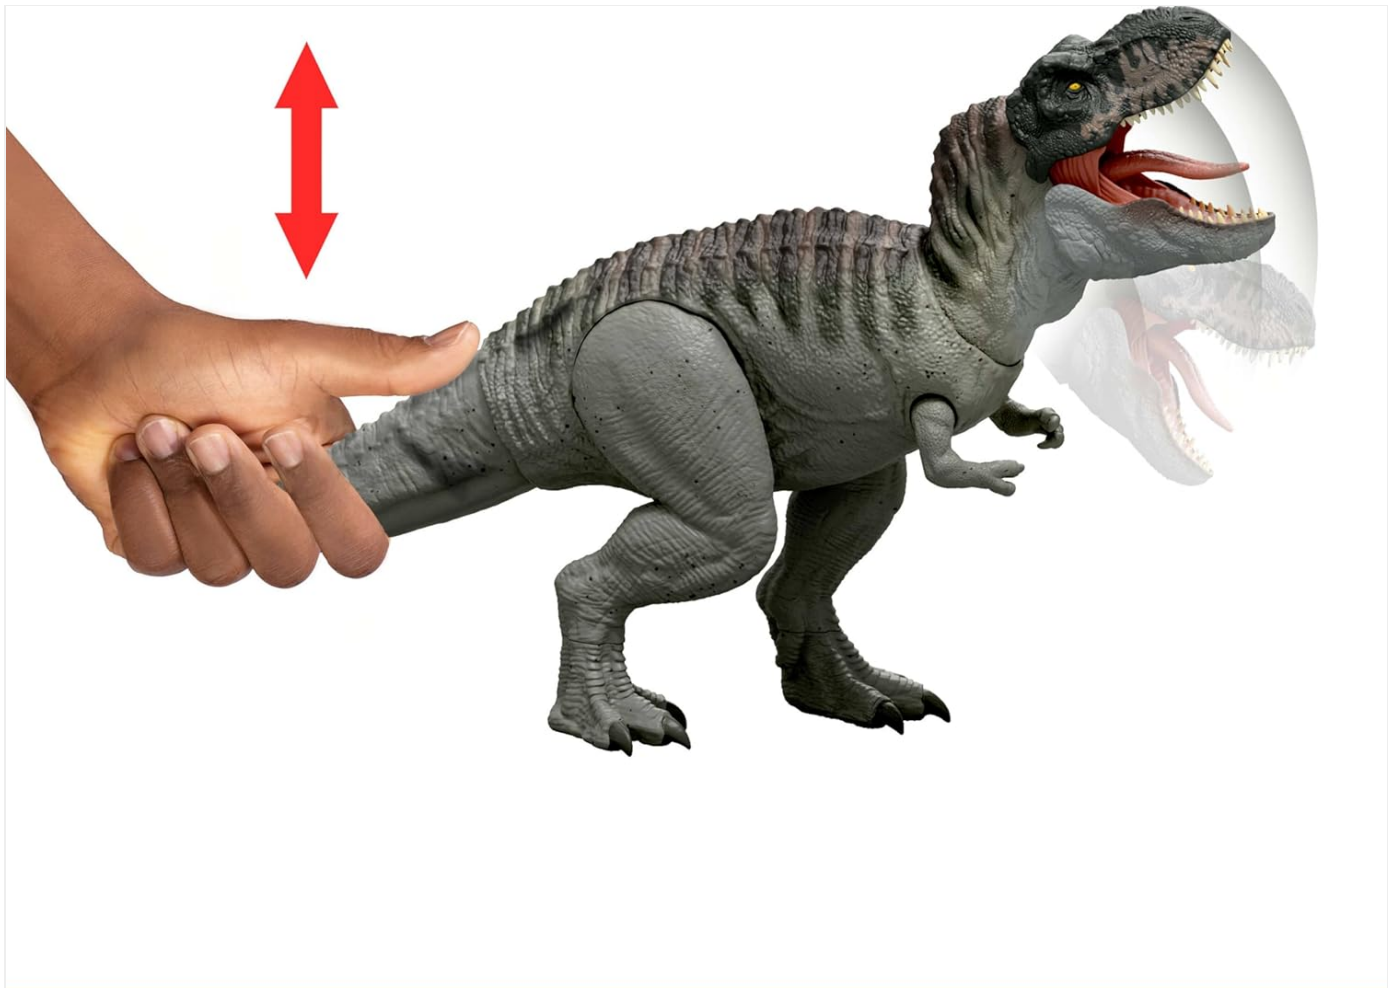

**Move tail
up and down for fierce chomping!**

Moving the tail up and down for fierce chomping action.



Twist tail to change the direction of attack!

Twisting the tail to change the direction of attack.

3. Jurassic World Play App Integration

Enhance your play experience by downloading the free Jurassic World Play App on a compatible smart device (Android or iOS, not included). Scan the Tracking Code located on the dinosaur's foot to unlock a digital version of your dinosaur. The app offers augmented reality (AR) activities and a fiercely fun game called 'Ride 'N Rampage: Colossal Chase!' where you can race vehicles and extract DNA from dinosaurs.

Your browser does not support the video tag.

Official demonstration of the Jurassic World Power Devour Tyrannosaurus Rex features, including app integration.

MAINTENANCE

To ensure the longevity of your dinosaur figure, wipe it clean with a damp cloth as needed. Do not submerge the figure in water. Avoid exposing the figure to extreme temperatures or direct sunlight for prolonged periods.

TROUBLESHOOTING

No Sound or Lights

If the dinosaur is not producing sound or lights, ensure that the batteries are correctly installed and are not depleted. Replace batteries if necessary. Check that the plastic pull-tab for initial activation has been removed from the battery compartment.

SPECIFICATIONS

- **Brand:** Mattel
- **Model Number:** JGB50
- **Product Dimensions:** 20 x 20 x 20 inches (approximate)
- **Item Weight:** 1.1 pounds
- **Manufacturer Recommended Age:** 4 years and up
- **Batteries:** 3 AA batteries (included)

WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the contact details provided on the product packaging or visit the official Mattel website. Keep your purchase receipt for warranty claims.

