



Manuals.plus /

› FocoMyLord /

› FocoMyLord L50 ANC Active Noise Cancelling Headphones User Manual

FocoMyLord L50 ANC

User Manual

FocoMyLord L50 ANC Active Noise Cancelling Headphones

INTRODUCTION

Thank you for choosing the FocoMyLord L50 ANC Active Noise Cancelling Headphones. These headphones are designed to provide an immersive audio experience with advanced Active Noise Cancelling (ANC) technology, blocking up to 95% of ambient noise. They also feature a Transparency Mode to keep you aware of your surroundings when needed. This manual will guide you through the setup, operation, and maintenance of your new headphones.



Image: FocoMyLord L50 ANC Active Noise Cancelling Headphones, showcasing their sleek black design and over-ear form factor.


WHAT'S IN THE BOX

Please check the package contents to ensure all items are present:

- Advanced Active Noise Cancelling Headphones (1)
- Type-C Charging Cable (1)
- 3.5 mm Audio Cable (1)
- User Manual (1)

PRODUCT OVERVIEW

Familiarize yourself with the various parts and controls of your L50 ANC headphones.

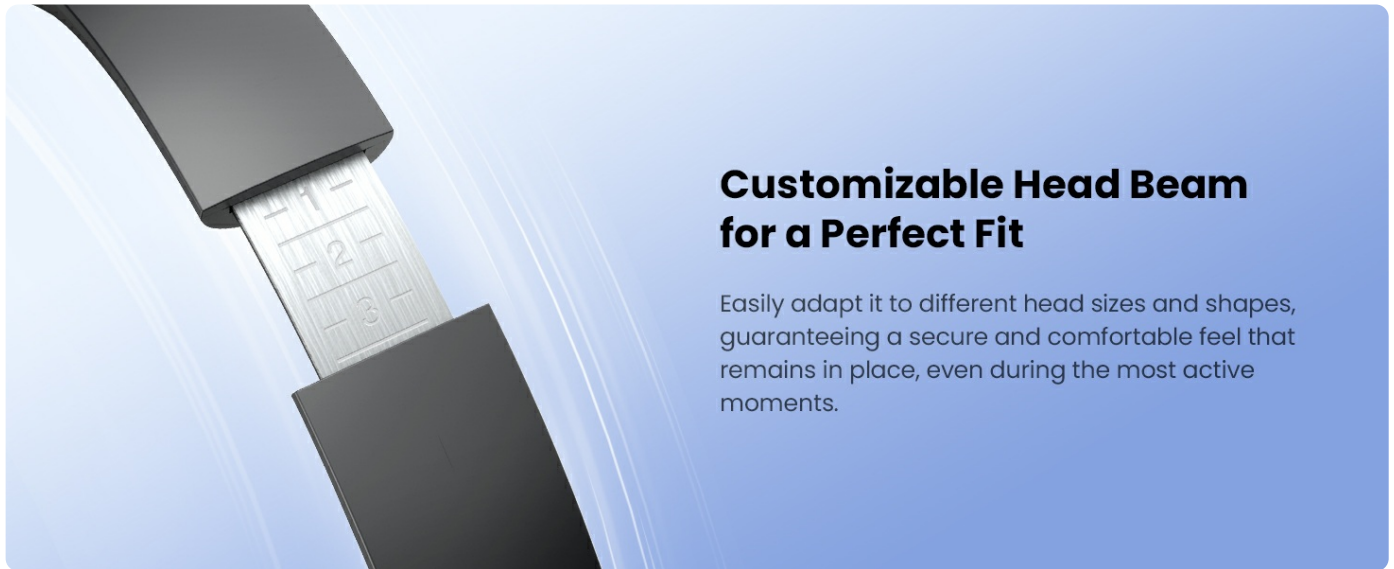

Customizable Head Beam for a Perfect Fit

Easily adapt it to different head sizes and shapes, guaranteeing a secure and comfortable feel that remains in place, even during the most active moments.

Image: Diagram illustrating the location of buttons and ports on the L50 ANC headphones, including the ANC switch, charging port, and audio jack.

Key Components:

- **Power Button:** Used for powering on/off and Bluetooth pairing.
- **Volume Up/Next Track Button:** Short press for volume up, long press for next track.
- **Volume Down/Previous Track Button:** Short press for volume down, long press for previous track.
- **Multi-function Button (MFB):** Play/Pause, Answer/End calls, activate voice assistant.
- **ANC/Transparency Mode Switch:** Toggles between Active Noise Cancellation, Transparency Mode, and normal mode.
- **USB-C Charging Port:** For charging the headphones.
- **3.5mm Audio Jack:** For wired connection.
- **LED Indicator:** Shows power, pairing, and charging status.

SETUP

1. Charging the Headphones

Before first use, fully charge your headphones. A full charge provides up to 80 hours of playtime (ANC off) or 50 hours (ANC on).

- Connect the supplied Type-C charging cable to the USB-C port on the headphones and the other end to a USB power adapter (not included) or a computer's USB port.

- The LED indicator will show charging status (specific color/behavior not provided, assume standard red for charging, off/blue for full).
- A 10-minute charge provides approximately 6 hours of listening time.

Toggle Switch Noise Cancellation Mode

You can easily adjust the noise cancellation modes to suit your surroundings, ensuring that you get the perfect balance between immersive sound and peace.

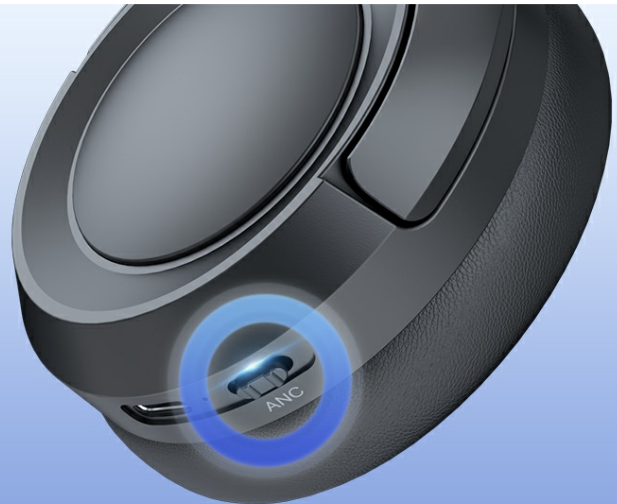


Image: Graphic illustrating the impressive battery life of the L50 ANC headphones, showing up to 80 hours of playtime.

2. Powering On/Off

- **Power On:** Press and hold the Power button for 3 seconds until the LED indicator flashes red and blue alternately. A voice prompt "Turn on/Off" will confirm.
- **Power Off:** Press and hold the Power button for 3 seconds until the red light flashes 3 times and then turns off.

3. Bluetooth Pairing

The headphones will automatically enter pairing mode when powered on for the first time or if no device is connected.

1. Ensure the headphones are powered off.
2. Press and hold the Power button for 3 seconds until the LED indicator flashes red and blue alternately. This indicates pairing mode.
3. On your device (smartphone, laptop, tablet), enable Bluetooth and search for available devices.
4. Select "L50 ANC" from the list of devices.
5. Once connected, a voice prompt "Your BT is connected" will be heard, and the LED indicator will stop flashing.
6. The headphones will automatically reconnect to the last paired device when powered on, if within range.

BT 5.4 QUICK CONNECT

Quicker and more stable connection
with your phone, laptop, tablet



Image: A close-up graphic of a Bluetooth 5.4 chipset, representing the quick and stable connection technology used in the headphones.

4. Wired Connection (3.5mm Audio Cable)

You can use the headphones with non-Bluetooth devices or when the battery is depleted.

- Connect one end of the 3.5mm audio cable to the audio jack on the headphones.
- Connect the other end to the 3.5mm audio output of your device.
- **Note:** ANC function and microphone are not available when using the headphones in wired mode. To maximize battery life in wired mode, ensure ANC is disabled.

OPERATING INSTRUCTIONS

1. Active Noise Cancellation (ANC) & Transparency Mode

The L50 ANC headphones offer three modes: ANC On, Transparency Mode, and Normal Mode (ANC Off).

- Locate the ANC/Transparency Mode switch on the headphone earcup.
- **ANC On:** Slide the switch to activate Active Noise Cancellation. This mode significantly reduces ambient noise, ideal for travel or noisy environments.
- **Transparency Mode:** Slide the switch again to enter Transparency Mode. This mode allows you to hear your surroundings clearly without removing the headphones, useful for announcements or conversations.
- **Normal Mode (ANC Off):** Slide the switch a third time to turn off both ANC and Transparency Mode.

Unmatched Endurance Up to 80H

A robust 800mAh battery lies within, offering a staggering 80 hours of continuous playtime. It's not just about listening; it's about experiencing an entire audio universe without worrying about running out of power. Your soundscapes will accompany you on every adventure, whether short or long.



Image: Close-up of the toggle switch for Active Noise Cancellation and Transparency Mode on the headphone earcup.

Stay Connected with Transparency Mode

While exploring the great outdoors, activate Transparency Mode to stay connected with surroundings.



Image: A person wearing the headphones in an outdoor setting, demonstrating the utility of Transparency Mode for situational awareness.

2. Music Playback Controls

- **Play/Pause:** Click the Multi-function Button (MFB) once.
- **Next Song:** Long press the Volume Up button.
- **Previous Song:** Long press the Volume Down button.
- **Volume Up:** Short press the Volume Up button.
- **Volume Down:** Short press the Volume Down button.

3. Call Management

- **Answer Incoming Call:** Click the MFB once.

- **Reject Incoming Call:** Click the MFB once.
- **End Call:** Press the MFB for 2 seconds.
- **Call-back Last Number:** Click the MFB twice.

4. Voice Assistant

- **Activate Voice Assistant:** Click the MFB three times.

5. Wearing the Headphones

For optimal comfort and sound quality, adjust the headphones properly.

- Extend or retract the adjustable headband to fit your head size.
- Ensure the earcups fully cover your ears for effective noise cancellation and sound delivery.
- The earcups can swivel 90 degrees and fold for easy storage and transport.

COMFORT FOR HOURS

Suitable for long time wearing
and convenient to carry everywhere



90° Swiving



Foldable Design



Adjustable Headband

Image: Visual representation of the comfort features, including 90-degree swiveling earcups, foldable design, and adjustable headband.

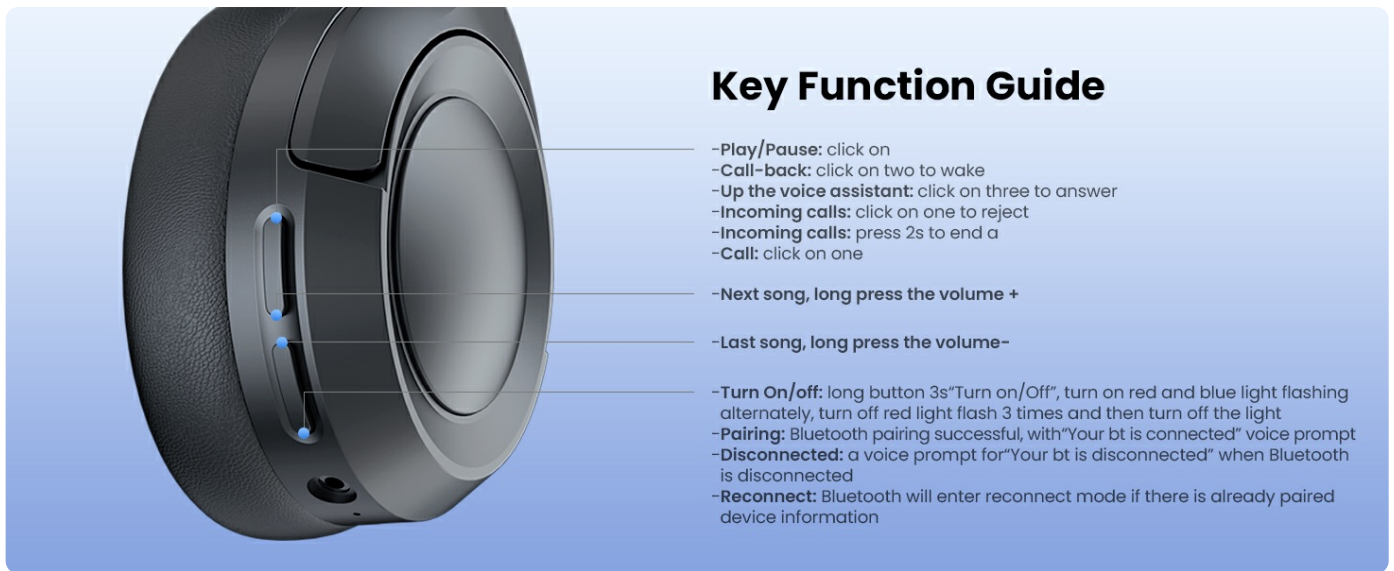


Image: Close-up of the adjustable head beam mechanism, showing numbered markings for precise fit adjustment.

MAINTENANCE

Cleaning

- Wipe the headphones with a soft, dry, lint-free cloth.
- Do not use abrasive cleaners, alcohol, or chemical solvents.
- Keep the charging port and audio jack free of dust and debris.

Storage

- When not in use, store the headphones in a cool, dry place, away from direct sunlight and extreme temperatures.
- Utilize the foldable design for compact storage.

Battery Care

- To preserve battery life, charge the headphones regularly, even if not used frequently.
- Avoid fully discharging the battery for extended periods.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Headphones do not power on.	Low battery.	Charge the headphones fully.
Cannot pair with device.	Headphones not in pairing mode; Device Bluetooth off; Too far from device.	Ensure headphones are in pairing mode (flashing red/blue LED). Turn on Bluetooth on your device. Move headphones closer to device (within 10 meters). Forget "L50 ANC" on your device and try pairing again.
No sound or low volume.	Volume too low on headphones/device; Incorrect audio source; Wired connection issues.	Increase volume on both headphones and connected device. Ensure correct audio output is selected on your device. If wired, check cable connection and ensure it's fully inserted.
ANC not working effectively.	ANC not activated; Improper fit.	Ensure the ANC switch is in the "ANC On" position. Adjust headphones for a snug fit over your ears.
Microphone not working in wired mode.	Microphone is not supported in wired mode.	This is normal operation. Use Bluetooth mode for microphone functionality.

SPECIFICATIONS

Feature	Detail
Model Name	L50 ANC
Noise Control	Active Noise Cancellation, Transparency Mode
Connectivity Technology	Bluetooth, Wired (3.5mm)
Bluetooth Version	5.4
Bluetooth Range	Up to 10 meters (33 feet)
Battery Life	Up to 80 hours (ANC off), 50 hours (ANC on)
Charging Port	USB Type-C
Quick Charge	10 minutes charge for 6 hours playtime
Driver Size	40mm Dynamic Drivers
Frequency Range	20 Hz - 20,000 Hz
Impedance	35 Ohm
Ear Placement	Over Ear
Weight	0.634 ounces (approx. 18g)
Material	Acrylonitrile Butadiene Styrene (ABS)

WARRANTY AND SUPPORT

FocoMyLord is committed to providing quality products and customer satisfaction. If you encounter any issues or have questions regarding your L50 ANC headphones, please contact our customer support team.

- **Customer Support:** Our team is available to assist you and aims to respond within 10 hours. Please refer to your purchase platform for specific contact details.
- **Warranty Information:** Specific warranty terms may vary by region and retailer. Please retain your proof of purchase for any warranty claims.