

[manuals.plus](#) /

› [MgaoLo](#) /

› [MgaoLo P79 Kids Instant Print Camera Instruction Manual](#)

**MgaoLo P79**

# MgaoLo P79 Kids Instant Print Camera Instruction Manual

Model: P79

## INTRODUCTION

---

Thank you for choosing the MgaoLo P79 Kids Instant Print Camera. This digital camera is designed to provide children aged 3-12 with a fun and interactive way to capture memories, offering instant printing, HD video recording, and various creative features. Please read this manual carefully to ensure proper use and maintenance of your camera.



Image: The Mgaolo P79 Kids Instant Print Camera in blue, shown with included accessories such as a 32GB SD card, USB cable, and print paper rolls.

## WHAT'S IN THE Box

- Mgaolo P79 Kids Instant Print Camera
- 32GB SD Card (pre-installed)
- Type-C Charging Cable
- Lanyard
- 3 Rolls of Print Paper
- User Manual (this document)

# High Capacity Battery

Up to 3.5 Hours of Usage Time



32GB TF Card  
(Pre-loaded in card slot)



Type-C Charging



## Package Accessories



1\*User Manual



1\*Lanyard



1\*Type-c Cable



3\*Print Paper Roll

Image: A visual representation of the camera and its included accessories, such as the lanyard, Type-C cable, and three rolls of print paper.

## KEY FEATURES

- Instant Printing:** Equipped with 2 print modes (grayscale and dot matrix) and 3 color depth options for varied effects.
- Dual Cameras:** Front and rear cameras for easy selfies and capturing different perspectives.
- HD Video Recording:** Capture moments in 1080p high-definition video.

- **2.4-inch IPS Screen:** Clear display for viewing photos and videos.
- **16x Digital Zoom:** Magnify subjects for detailed shots.
- **Built-in Flashlight:** For improved visibility in low-light conditions.
- **Creative Modes:** Includes 20+ filter frames, time-lapse, and continuous shooting.
- **Entertainment:** Features 3 puzzle games and a music player.
- **Durable Design:** High-quality ABS material for effective drop protection.
- **Long Battery Life:** Up to 3-4 hours of continuous photo taking on a full charge, with Type-C charging.
- **Ample Storage:** Comes with a pre-installed 32GB SD card to store thousands of photos and videos.

# Multi Functions

## Kids Instant Print Camera

48MP Dual Cameras

Instant Printing

1080P Video

16X Zoom

Puzzle Games

Music Player

Play Back

2.4 IPS Screen

Fun Frames

Time Lapse

Image: An infographic showcasing the various functions of the Mgaolo P79 camera, including its dual cameras, instant printing, video capabilities, and entertainment features.

Your browser does not support the video tag.

Video: An overview of the Mgaolo Instant Print Camera for Kids, demonstrating its features and ease of use.

## SETUP

## 1. Installing Print Paper

1. Open the paper slot on the bottom front of the camera.
2. Insert a roll of thermal print paper, ensuring the paper feeds correctly. Pull out approximately 1 inch of paper.
3. Close the paper slot securely.



Image: A step-by-step visual guide demonstrating the installation of thermal print paper into the camera.

## 2. Charging the Camera

The camera uses a Type-C charging port. Connect the provided Type-C cable to the camera and a compatible USB power adapter (not included). The charging indicator light will show the charging status. A full charge typically takes 3-4 hours.

### 3. SD Card Installation

A 32GB SD card is pre-installed in the camera. If you need to replace it, gently push the existing card to eject it, then insert a new card with the metal contacts facing down until it clicks into place.

## OPERATING INSTRUCTIONS

---

### 1. Power On/Off

Press and hold the Power button (usually located on the top or side) to turn the camera on or off.

### 2. Taking Photos

- **Switching Cameras:** The camera features dual lenses. Use the designated button (refer to on-screen icons) to switch between the front and rear cameras for regular photos or selfies.
- **Capture:** Frame your shot using the 2.4-inch IPS screen. Press the Shutter/OK button to take a photo.
- **Instant Print:** After taking a photo, the camera will automatically print it if instant print mode is enabled. You can select between grayscale or dot matrix printing and adjust print density (low, medium, high) in the settings.
- **Flashlight:** Activate the built-in flashlight for brighter photos in dim environments.
- **Digital Zoom:** Use the Up/Down navigation buttons to adjust the 16x digital zoom.

# Capture the Beautiful Moment



**20 Frames & 5 Filters & 5 Mirror Effects**



Image: The camera displaying options for grayscale and lattice printing, along with a selection of creative frames and filters.

## 3. Recording Videos

Navigate to the video mode icon on the screen. Press the Shutter/OK button to start recording 1080p HD video. Press it again to stop recording.

# Upgraded Dual Cameras

1080P HD Video Recording



16X Digital Zoom



Image: The camera's screen showing video recording in progress, highlighting the dual camera feature and flash options.

## 4. Special Shooting Modes

- **Time-Lapse:** Select the time-lapse option in the settings to automatically take photos at set intervals (e.g., 2s, 5s, 10s).
- **Continuous Shooting:** Enable continuous shooting to capture multiple photos in quick succession.



Image: An illustration showing the time-lapse and continuous shooting functions of the camera.

## 5. Playback and Transfer

- **On-Camera Playback:** Access the gallery icon to view captured photos and videos directly on the camera's screen.
- **USB Transfer:** Connect the camera to a computer using the Type-C cable to download images and videos from the SD card.



Image: The camera screen displaying a video in playback mode, and an illustration of connecting the camera to a laptop for USB transfer.

## 6. Games and Music

Select the game or music player icons from the main menu to access the built-in puzzle games or play music files stored on the SD card.



Image: Children interacting with the camera's game and music player functions.

## MAINTENANCE

- Cleaning:** Use a soft, dry cloth to clean the camera body and screen. Do not use liquid cleaners or abrasive materials.
- Storage:** Store the camera in a cool, dry place away from direct sunlight and extreme temperatures.
- Paper Replacement:** Refer to the "Installing Print Paper" section in Setup for instructions on replacing thermal paper rolls.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Camera does not turn on.	Low battery.	Charge the camera using the provided Type-C cable.
Photos are not printing.	No print paper, paper incorrectly installed, or paper jam.	Check paper supply and installation. Gently remove any jammed paper. Ensure instant print mode is enabled.
Poor print quality.	Low print density setting, or dirty print head.	Adjust print density in settings. Clean the print head with a soft cloth.
Cannot save photos/videos.	SD card full or not inserted correctly.	Check SD card insertion. Delete unnecessary files or replace the SD card.
Camera freezes or becomes unresponsive.	Software glitch.	Press and hold the Power button for 10 seconds to force a restart.

## SPECIFICATIONS

Feature	Detail
Brand	MgaoLo

Feature	Detail
Model Name	P79
Maximum Webcam Image Resolution	48 MP
Video Resolution	1080p
Optical Zoom	16 x
Digital Zoom	16 x
Screen Size	2.4 Inches
Display Type	LCD
Photo Sensor Technology	CMOS
Supported File Format	JPEG (Images), MP4 (Video)
Image Stabilization	Digital
Connectivity Technology	USB (Type-C)
External Memory Size	32 GB (SD Card)
Battery Type	Rechargeable (Built-in)
Age Range Description	Kid
Color	Blue

## WARRANTY AND SUPPORT

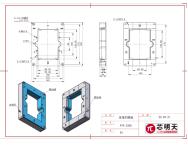
The Mgaolo P79 Kids Instant Print Camera comes with a **1-year warranty** from the date of purchase. For any product inquiries, technical support, or warranty claims, please contact Mgaolo customer service through the retailer's platform or the official Mgaolo website.



© 2024 Mgaolo. All rights reserved.

## Related Documents - P79

	<p><a href="#">LEGO 10245 Santa's Workshop Lighting Kit Installation Guide</a>          Detailed, step-by-step instructions for installing the official LEGO lighting kit for the 10245 Santa's Workshop set. Includes component checks, testing, and assembly guidance.</p>
---	--

 <p>CE August 2010</p>	<p><a href="#">Garmin 12-Pin Transducer Adapter Box Installation Instructions</a></p> <p>Comprehensive guide for installing the Garmin 12-pin transducer adapter box, detailing safety precautions, mounting considerations, tools required, and step-by-step instructions for connecting various Garmin and Airmar transducers.</p>
 <p>CE August 2010</p>	<p><a href="#">Garmin 12-Pin Transducer Adapter Box Installation Instructions</a></p> <p>This document provides installation instructions for the Garmin 12-Pin Transducer Adapter Box, including important safety information, mounting considerations, and wiring details for connecting various Garmin and Airmar transducers.</p>
 <p>CE February 2009</p>	<p><a href="#">Garmin 8-Pin Transducer Adapter Box Installation Instructions</a></p> <p>Detailed installation guide for the Garmin 8-Pin Transducer Adapter Box, including safety precautions, mounting instructions, wiring diagrams, and compatibility tables for various Garmin and Airmar transducers.</p>
	<p><a href="#">P79.Z200 Piezo Scanner Outline Dimensions</a></p> <p>Technical drawing and specifications for the CoreMorrow P79.Z200 piezo scanner, detailing dimensions and mounting features.</p>
	<p><a href="#">INIU Power Bank Model Differences and FCC ID Information</a></p> <p>This document from Shenzhen Topstar Industry Co.,Ltd. details the model differences for INIU power banks, including models P43-E1 through P79-E2. It confirms that all listed models share the same circuit and RF module, with variations only in name and appearance, and provides the FCC ID 2A2ND-P43.</p>