

OXVAC SV008

OXVAC Cordless Vacuum Cleaner SV008 User Manual

Model: SV008

1. INTRODUCTION

This manual provides essential information for the safe and effective operation, maintenance, and troubleshooting of your OXVAC SV008 Cordless Vacuum Cleaner. Please read this manual thoroughly before first use and retain it for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury, observe the following safety precautions:

- Read all instructions before using the appliance.
- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.

- Do not pick up toxic material (e.g., chlorine bleach, ammonia cleaner, drain cleaner).
 - Do not use without dust cup and/or filters in place.
 - Turn off all controls before unplugging.
 - Use extra care when cleaning on stairs.
 - Do not charge the unit outdoors.
 - Use only the charger specified by the manufacturer.
 - Store the appliance indoors in a cool, dry area.
-

3. PACKAGE CONTENTS

Verify that all components are present in the package:

- Cordless Vacuum Main Unit
- LED Roller Brush (Power Floor Brush with LED light)
- Adjustable Telescopic Alloy Tube
- Long Crevice Tool
- 2-in-1 Dust Brush
- Power Adapter
- Wall Mount Bracket
- 2 x HEPA Filters (additional)
- Cleaning Tool
- User Manual (this document)

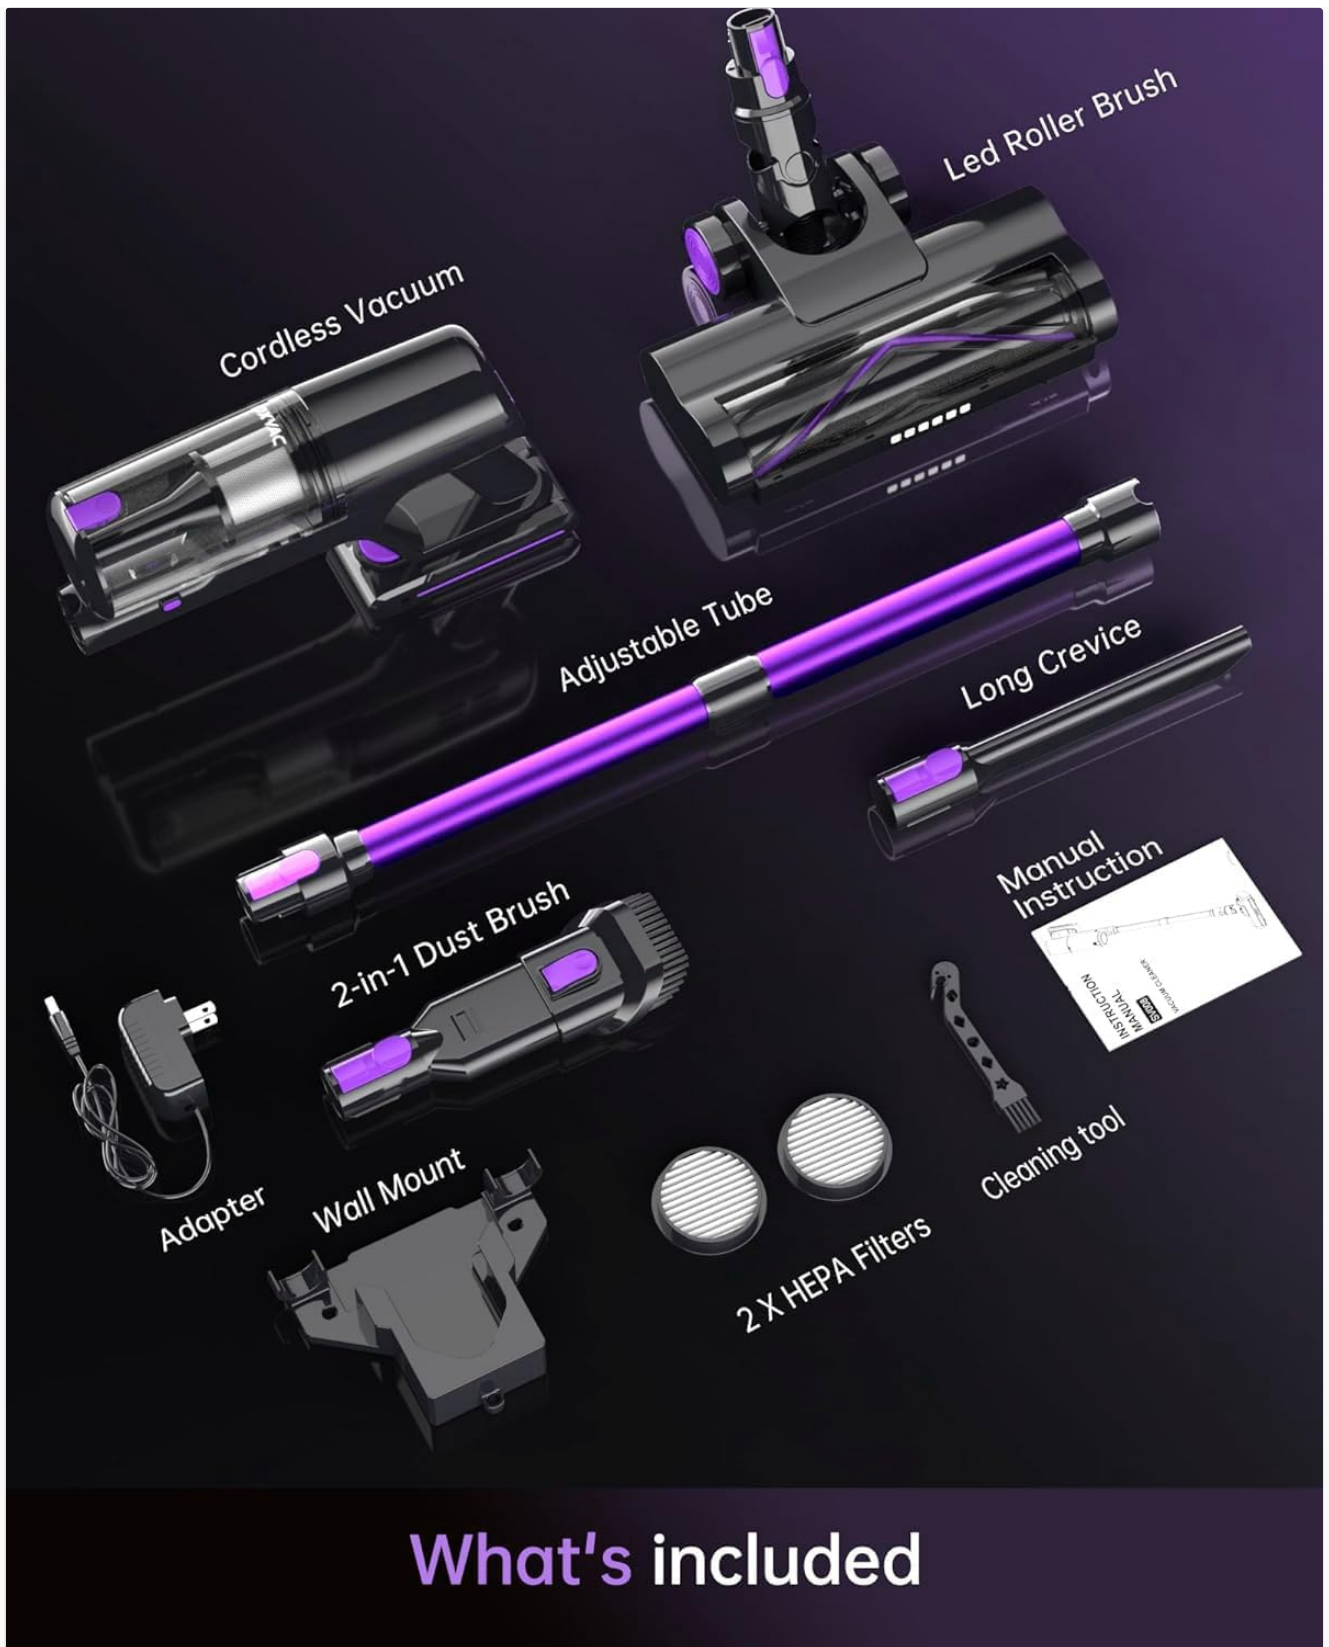


Image: All components included in the OXVAC SV008 package, laid out for identification.

4. PRODUCT OVERVIEW

The OXVAC SV008 Cordless Vacuum Cleaner is designed for versatile cleaning with its powerful motor, multi-stage filtration, and user-friendly features.



Image: The OXVAC SV008 main unit, extension tube, floor brush, and various accessories, demonstrating different assembly options.

LED Display

The integrated LED display provides real-time information about the vacuum cleaner's status.

- **Battery Level:** Shows the remaining power percentage.

- **Suction Mode Indicator:** Displays the current suction mode (Eco, Standard, Max).
- **Maintenance Reminders:** Alerts for cleaning the filter, dust cup, or floor brush.



Led Display Screen & Smart button

Image: Detailed view of the vacuum's LED display, indicating battery percentage and operational status.

5. ASSEMBLY

Follow these steps to assemble your OXVAC SV008 Cordless Vacuum Cleaner:

1. **Attach the Extension Tube:** Insert the top end of the adjustable telescopic alloy tube into the main vacuum unit until it clicks into place.
 2. **Attach the Floor Brush:** Insert the bottom end of the extension tube into the LED roller brush until it clicks into place.
 3. **Install Battery:** Ensure the detachable battery is fully charged. Slide the battery into the slot on the main unit until it locks securely.
 4. **Attach Accessories:** For handheld use or specific cleaning tasks, detach the extension tube and directly attach the long crevice tool or 2-in-1 dust brush to the main unit.
-

6. OPERATION

Power On/Off and Suction Modes

- Press the power button on the main unit to turn the vacuum cleaner on or off.
- Use the mode selection button to cycle through the three suction modes: Eco, Standard, and Max. The LED display will indicate the current mode.

Cleaning Performance

The 550W brushless motor provides up to 45kpa suction on Max mode, suitable for various debris including dust, dirt, and pet hair on hard floors and low-pile carpets.



Max **45Kpa** Powerful Suction
Great for Cleaning Hardfloors and Carpets

Image: The vacuum cleaner in operation, demonstrating its ability to pick up various types of debris from both hard floors and carpets.

Flexible Floor Brush

The floor brush features 180° sideways rotation and 90° up and down rotation, allowing for easy maneuverability under furniture and into tight spaces. The integrated LED lights illuminate dark areas for thorough cleaning.



Flexible Rotating LED Floor Brush

Let the dust in dark corners have nowhere to escape

Image: Visual representation of the floor brush's flexible movement, highlighting its ability to swivel and tilt for reaching difficult areas.

7. CHARGING AND BATTERY

The OXVAC SV008 features a detachable 7x2200mAh lithium-ion battery.

- **Charging:** Connect the power adapter to the charging port on the battery or the main unit. A full charge takes approximately 4 hours.
- **Runtime:** Provides up to 50 minutes of cleaning in Eco Mode and approximately 16 minutes in Max Mode. Actual

runtime may vary based on power mode, dust level, floor type, and attachments used.

- **Detachable Design:** The battery can be removed for convenient charging or replacement.



Image: The main vacuum unit with its detachable battery pack clearly visible, illustrating the ease of removal and charging.

8. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

Emptying the Dust Cup

The 1.5L dust cup can be emptied with a single click.

1. Hold the main unit over a trash bin.
2. Press the dust cup release button to open the bottom flap and empty the contents.
3. Close the flap securely after emptying.



Empty the Dust Cup with One Click
1.5L Capacity

Image: Two-panel illustration showing the process of emptying the dust cup by pressing a release button.

Cleaning the Filtration System

The 5-stage fully sealed cyclone filtration system captures 99.99% of dust particles. Regular cleaning of the filters is

crucial.

- **Filter Components:** The system includes a stainless steel filter, HEPA filter, and high-density sponge filter.
- **Cleaning Frequency:** The LED display will remind you when to clean the filters. It is recommended to clean the HEPA and metal filters periodically, typically after 100 uses, or when suction power decreases.
- **Washing:** All filter components are washable. Rinse them under running water and ensure they are completely dry before reassembling.



High Efficiency Filtration

The 5-stage fully sealed cyclone filter system keeps your vacuum cleaner clean and fresh, effectively prevents odor occurrence

Image: Exploded view diagram illustrating the layers of the 5-stage filtration system within the vacuum cleaner.

Cleaning the Floor Brush

Periodically check the roller brush for tangled hair or debris and remove it using the provided cleaning tool.

9. TROUBLESHOOTING

Refer to this section for common issues and their solutions.

Problem	Possible Cause	Solution
Vacuum does not turn on	Battery is not charged or not properly installed.	Ensure battery is fully charged and securely inserted.
Low suction power	Dust cup is full, filters are clogged, or blockage in the nozzle/tube.	Empty dust cup. Clean filters. Check for and remove any blockages.
Floor brush not rotating	Roller brush is tangled with hair/debris or blocked.	Turn off the vacuum. Remove the roller brush and clear any obstructions.
Short runtime	Using Max mode frequently, battery not fully charged, or battery degradation.	Use lower suction modes for longer runtime. Ensure full charge. Consider battery replacement if runtime significantly decreases over time.

10. SPECIFICATIONS

Feature	Detail
Brand	OXVAC
Model Name	SV008
Motor	550W Brushless Motor
Maximum Suction Power	45kpa (MAX mode)
Suction Power Modes	3 (Eco, Standard, Max)
Battery Type	7x2200mAh Lithium Ion (Detachable)
Charging Time	Approx. 4 hours
Maximum Runtime	Up to 50 minutes (Eco Mode)
Filtration System	5-stage fully sealed cyclone filtration with HEPA filter
Dust Cup Capacity	1.5 Liters
Noise Level	75 dB (Max)

Feature	Detail
Product Dimensions	12.81"L x 7.69"W x 17.1"H
Item Weight	5.79 pounds
Special Features	LED Display, Flexible 180°/90° Floor Brush, Wall Mount

11. WARRANTY AND CUSTOMER SUPPORT

OXVAC provides a 12-month customer service warranty and 24-hour after-sales support for the SV008 Cordless Vacuum Cleaner.

For assistance with any questions or concerns, please contact our dedicated customer service team via email or phone. When contacting support, please have your order number and product model (SV008) ready to facilitate a quicker resolution.

