

Lukasa GS074

Lukasa Candle Warmer Lamp Model GS074 User Manual

Your Guide to Safe and Enjoyable Candle Warming

1. INTRODUCTION

Thank you for choosing the Lukasa Candle Warmer Lamp Model GS074. This innovative lamp is designed to safely melt scented candles, releasing their fragrance without an open flame. It features adjustable height, dimmable light settings, and a convenient timer function, making it a versatile addition to any indoor space.

2. IMPORTANT SAFETY INFORMATION

Please read all instructions carefully before use and retain this manual for future reference. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- This appliance is for indoor use only.
- Do not immerse the lamp or cord in water or other liquids.
- Always place the lamp on a stable, level, heat-resistant surface.
- Keep out of reach of children and pets.
- Do not operate if the cord or plug is damaged.
- Use only the specified 50-watt GU10 halogen bulb.
- Allow the lamp and candle to cool completely before handling or moving.
- Never leave the lamp unattended for extended periods, especially when operating without the timer function.
- Ensure the candle is placed centrally on the wooden base and directly beneath the bulb.
- If the unit is defective or damaged during delivery, please contact customer support for replacement.

3. PRODUCT OVERVIEW

The Lukasa Candle Warmer Lamp consists of the following main components:

- **Lamp Unit:** Features a golden metal arm, a decorative glass lampshade, and a bulb socket.
- **Wooden Base:** A sturdy wooden platform designed to hold your candle.
- **Wired Control:** An inline control unit on the power cord for operating the lamp's functions.
- **50W GU10 Halogen Bulb:** The heat source for melting candles.



Image: The Lukasa Candle Warmer Lamp in Golden finish, showcasing its elegant design with a candle placed on the wooden base.

4. SETUP

1. **Unpack:** Carefully remove all components from the packaging.
2. **Bulb Installation:** Gently insert the provided 50W GU10 halogen bulb into the socket located inside the glass lampshade. Ensure it is securely twisted into place.
3. **Placement:** Place the candle warmer lamp on a stable, flat surface.
4. **Candle Placement:** Position your desired scented candle (within the recommended height range) centrally on the wooden base.
5. **Connect Power:** Plug the power cord into a standard 120V electrical outlet.

 
5. OPERATING INSTRUCTIONS

Operate the lamp using the inline wired control unit.

- **Power On/Off:** Press the power button () to turn the lamp on or off.
- **Adjusting Brightness (Dimmer):** Use the '+' and '-' buttons to cycle through 4 levels of brightness. Higher brightness settings will melt the wax faster and release a more intense fragrance.
- **Setting Timer:** Press the timer button (⌚) to set the lamp to automatically turn off after 2, 4, or 8 hours. The corresponding indicator light will illuminate.
- **Adjusting Height:** The height of the lamp arm is adjustable to accommodate candles of various sizes. Loosen the knob on the lamp arm, adjust the height between 3.6 inches and 6.1 inches from the base to the lampshade, and then tighten the knob to secure it.

Adjustable Brightness

Brighter light release more intense fragrance



10% light

30% light

70% light

100% light



Image: Visual representation of the 4 adjustable brightness levels of the lamp.

Convenient Timer Function

3 timer setting for auto shut off



2 hour



4 hour



8 hour



Image: The candle warmer lamp illustrating its convenient timer function with 2, 4, and 8-hour auto-shutoff options.

Adjustable Height

For different type of candles



Image: A diagram detailing the adjustable height feature, accommodating candles between 3.6 to 6.1 inches tall.

6. MAINTENANCE

- **Cleaning:** Ensure the lamp is unplugged and completely cool before cleaning. Wipe the lamp and base with a soft, dry cloth. Do not use abrasive cleaners or immerse in water.
- **Bulb Replacement:** When the bulb needs replacing, ensure the lamp is unplugged and cool. Carefully remove the old GU10 50W halogen bulb and insert a new one by aligning the pins and twisting gently until secure.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Lamp does not turn on.	Not plugged in; power outage; faulty bulb; faulty wired control.	Ensure plug is securely in outlet. Check household circuit breaker. Replace bulb. If issue persists, contact support.
Candle wax not melting or fragrance is weak.	Bulb too far from candle; low brightness setting; candle too large.	Adjust lamp height to bring bulb closer to candle (3.6-6.1 inches from base to shade). Increase brightness setting. Ensure candle fits within the base and is not excessively large.
Lamp is unstable.	Uneven surface; loose height adjustment knob.	Place on a flat, stable surface. Ensure height adjustment knob is securely tightened.

8. SPECIFICATIONS

Feature	Detail
Model Name	GS074
Brand	Lukasa
Color	Golden
Product Dimensions	2.36"D x 4.7"W x 12"H
Item Weight	1.74 pounds
Material	Metal, Wood, Glass
Power Source	Corded Electric
Voltage	120 Volts
Wattage	50 watts
Bulb Type	GU10 Halogen (BT37 shape)
Control Method	Wired Control (Touch)
Special Features	Adjustable Height, Dimmable (4 levels), Timer (2/4/8 hours)
Indoor/Outdoor Usage	Indoor
Water Resistance Level	Not Water Resistant

9. WARRANTY AND SUPPORT

This Lukasa Candle Warmer Lamp comes with a **12-month warranty** from the date of purchase. For any product inquiries, troubleshooting assistance, or warranty claims, please contact Lukasa customer support through your retailer or the official Lukasa website.



[Lukasa SN004 Bluetooth/CD/MP3/USB Playback User Manual](#)

User manual for the Lukasa SN004, a Bluetooth, CD, MP3, and USB playback device. This guide provides information on product features, precautions, and technical specifications.