

Lukasa GS074

Lukasa GS074 Candle Warmer Lamp User Manual

Model: GS074

1. INTRODUCTION

Thank you for choosing the Lukasa GS074 Candle Warmer Lamp. This innovative lamp provides a safe and efficient way to enjoy your favorite scented candles without an open flame. Featuring adjustable height, a four-grade dimmer, and a convenient timer function, it creates a comfortable and fragrant atmosphere in any indoor space. Please read this manual thoroughly before use to ensure proper operation and safety.

2. SAFETY INSTRUCTIONS

- **Indoor Use Only:** This product is designed for indoor use in dry environments. Do not use outdoors or in wet conditions.
- **No Open Flame:** The candle warmer operates by melting wax with heat from the bulb, eliminating the need for an open flame. This reduces the risk of fire, making it ideal for homes with children or pets.
- **Stable Surface:** Always place the candle warmer on a stable, flat, and heat-resistant surface.
- **Proper Candle Placement:** Ensure the candle is centered directly beneath the warming bulb.
- **Unplug When Not in Use:** Disconnect the power cord from the outlet when the lamp is not in use or before cleaning.
- **Avoid Overheating:** Do not leave the lamp unattended for extended periods. Utilize the timer function for automatic shut-off.
- **Bulb Handling:** Allow the bulb to cool completely before touching or replacing it. Use only the specified bulb type (50W LED).
- **Keep Away from Flammables:** Do not place the lamp near curtains, paper, or other flammable materials.
- **Damaged Units:** If the unit is defective or damaged during delivery, do not attempt to repair it. Contact customer support for a replacement.

3. PACKAGE CONTENTS

Please check the package for the following items:

- Lukasa GS074 Candle Warmer Lamp (Black)
- 50W LED Bulb (pre-installed or included separately)
- User Manual (this document)

4. PRODUCT FEATURES

- **Adjustable Height:** The lamp's height can be adjusted from 3.6 inches to 6.1 inches, accommodating various candle sizes.
- **4-Grade Dimmer Brightness:** Control the intensity of the light and the rate of wax melting with four distinct brightness levels. Higher settings melt wax faster and release a stronger fragrance.
- **Convenient Timer Function:** Set the lamp to automatically turn off after 2, 4, or 8 hours, providing peace of mind.
- **Safe Wax Melting:** Enjoy fragrant candles without an open flame, smoke, or soot, creating a cleaner and safer environment.
- **Elegant Design:** Features a polished finish, glass shade, and durable base, suitable for various home decor styles.

5. SETUP

1. **Unpack:** Carefully remove all components from the packaging.
2. **Placement:** Place the candle warmer on a flat, stable, and heat-resistant surface.
3. **Insert Bulb:** If not pre-installed, gently screw the 50W LED bulb into the lamp socket.
4. **Position Candle:** Place your desired scented candle (without lighting the wick) on the base directly beneath the bulb.
5. **Adjust Height:** Loosen the adjustment knob on the lamp's stem and slide the upper arm up or down to position the bulb approximately 1-2 inches above the candle. Tighten the knob to secure the height.
6. **Connect Power:** Plug the power cord into a standard electrical outlet.



Image: The lamp's height can be adjusted to fit various candle sizes, ensuring optimal warming.

6. OPERATING INSTRUCTIONS

The Lukasa GS074 Candle Warmer Lamp is controlled via an inline remote on the power cord.

1. **Power On/Off:** Press the power button (**O/I**) to turn the lamp on or off.
2. **Adjust Brightness (Dimmer):** Use the '+' and '-' buttons to cycle through the four brightness levels. Higher brightness increases the heat and fragrance release.
3. **Set Timer:** Press the timer button (clock icon) to select an automatic shut-off time of 2, 4, or 8 hours. The corresponding indicator light will illuminate.



Image: The remote control features buttons for power, brightness adjustment, and timer settings (2H, 4H, 8H).



Image: Demonstrates the four brightness levels, from dim to bright, affecting the light output and warming intensity.

7. MAINTENANCE

- **Cleaning:** Ensure the lamp is unplugged and completely cool before cleaning. Wipe the lamp and base with a soft, dry cloth. Do not use abrasive cleaners or immerse in water.
- **Bulb Replacement:** If the bulb needs replacement, ensure the lamp is unplugged and cool. Carefully unscrew the old bulb and replace it with a new 50W LED bulb (Wedge base).
- **Wax Management:** As the top layer of wax loses its scent, you can pour off the melted wax (once cooled and solidified) to expose fresh wax below, extending the candle's life.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Lamp does not turn on.	Power cord not plugged in; Bulb loose or burnt out; Power outlet malfunction.	Ensure power cord is securely plugged in. Check if the bulb is screwed in tightly or needs replacement. Test the outlet with another device.
Candle wax is not melting or scent is weak.	Bulb brightness too low; Bulb too far from candle; Candle wax is old or scent has dissipated.	Increase the brightness using the '+' button. Adjust the lamp height to bring the bulb closer to the candle (1-2 inches above). Consider replacing the candle or pouring off the top layer of wax.
Timer function not working.	Timer not set correctly.	Press the timer button repeatedly until the desired 2H, 4H, or 8H indicator light is illuminated.

9. SPECIFICATIONS

- **Brand:** Lukasa
- **Model Name:** GS074

- **Color:** Black
- **Product Dimensions:** 7.1"D x 5.08"W x 9.48"H
- **Item Weight:** 1.1 Pounds
- **Light Source Type:** LED
- **Wattage:** 50 watts
- **Bulb Base:** Wedge
- **Material:** Glass (Shade)
- **Finish Type:** Polished
- **Switch Type:** Dimmer (Inline Remote)
- **Indoor/Outdoor Usage:** Indoor
- **Assembly Required:** No

10. WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the product packaging or contact the seller directly. If you received a defective unit or have any issues, please reach out to the manufacturer or seller for assistance and replacement options.