

Pukomc HD-ZG021M

Pukomc 4QT Air Fryer HD-ZG021M Instruction Manual

Model: HD-ZG021M

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Pukomc 4QT Air Fryer. Please read these instructions carefully before first use and retain for future reference. Proper use and maintenance will ensure optimal performance and longevity of your appliance.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons.

- Read all instructions before operating the air fryer.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the main unit in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'off', then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Ensure the frying basket is properly inserted before operating.
- An automatic shut-off function is included for safety, activating if the unit overheats or if other appliances in the circuit are overloaded.

PRODUCT OVERVIEW

Components

- Main Unit with Control Panel
- Removable Frying Basket
- Crisper Plate (inside frying basket)
- Viewing Window

EASY COOKING WITH VIEWING WINDOW AND 2 KNOBS



Viewing Window



Temperature Knob
(0-395°F)



Time knob
(0-30min)



Image: The Pukomc 4QT Air Fryer showing the main unit and the removable frying basket.

8 FUNCTIONS CHOICE FOR YOU



French fries
15min



Chicken wings
15min



shrimp
20min



Fish
20min



Steak
20min



Image: Close-up of the Pukomc Air Fryer's control panel with temperature and time knobs, and the viewing window.

SETUP AND FIRST USE

Unpacking

- Remove all packaging materials, stickers, and labels from the appliance.
- Check that all components are present and undamaged.

Before First Use

- Clean the frying basket and crisper plate with hot water, dish soap, and a non-abrasive sponge. Rinse thoroughly and dry completely.
- Wipe the inside and outside of the main unit with a damp cloth.
- Place the air fryer on a stable, heat-resistant, and level surface, away from walls or other appliances to allow for proper air circulation.
- Plug the appliance into a grounded wall outlet.

OPERATING INSTRUCTIONS

Basic Operation

1. Place the crisper plate into the frying basket.
2. Place your ingredients into the frying basket. Do not overfill.
3. Slide the frying basket back into the air fryer until it clicks into place.
4. Turn the temperature knob to your desired temperature (80°F to 395°F).
5. Turn the timer knob to your desired cooking time (0-30 minutes). The air fryer will begin heating automatically.
6. Monitor cooking progress through the viewing window.
7. When the timer reaches zero, the air fryer will automatically shut off. Carefully remove the basket and transfer food.

The air fryer features a viewing window to monitor cooking progress without opening the basket, helping to maintain consistent cooking temperatures.

EASILY SERVE YOUR DAILY LIFE



Image: The Pukomc Air Fryer with its dimensions indicated, showing its compact design.

Using Preset Menus

The air fryer includes 8 convenient preset menus for common foods. Simply select the desired preset, and the air fryer will automatically set the optimal temperature and time. You can adjust these settings manually at any point during cooking.

Preset Cooking Guide

Food Item	Temperature	Time
French Fries	395°F	15 min
Sweet Potato	395°F	30 min
Castanea Mollissima	355°F	10 min
Cake	320°F	30 min
Chicken Wings	395°F	15 min
Shrimp	320°F	20 min
Fish	320°F	20 min
Steak	355°F	20 min



PRODUCT DIMENSIONS

Image: The control panel displaying the 8 preset cooking options with recommended temperatures and times.

Official Product Videos

Video: Demonstrates the Pukomc Air Fryer's 8-in-1 functionality and 4QT capacity. This video provides a visual guide to the appliance's features and how to use it for various cooking tasks.

Video: A general overview of the Pukomc Air Fryer in operation. This video highlights the ease of use and cooking capabilities of the appliance.

CLEANING AND MAINTENANCE

Cleaning the Frying Basket and Crisper Plate

The non-stick frying basket and crisper plate are designed for easy cleaning and are dishwasher-safe.

- After each use, unplug the air fryer and allow it to cool completely.
- Remove the frying basket and crisper plate.
- Wash them in hot soapy water using a non-abrasive sponge, or place them in the dishwasher.
- Ensure all food residue is removed.
- Dry all parts thoroughly before reassembling or storing.



Image: Demonstrates cleaning the air fryer basket by hand and its compatibility with dishwashers.

Cleaning the Main Unit

- Wipe the exterior of the air fryer with a damp cloth. Do not use abrasive cleaners.
- Never immerse the main unit in water or any other liquid.
- Clean the interior of the air fryer with a damp cloth and mild detergent if necessary.

TROUBLESHOOTING

If you encounter issues with your air fryer, please consult the following common problems and solutions:

- **Appliance does not turn on:**
Ensure the power cord is securely plugged into a grounded electrical outlet. Check if the circuit breaker has tripped. Ensure the frying basket is fully inserted into the main unit.
- **Food is not cooked evenly:**
Shake the basket halfway through the cooking process for even results. Do not overfill the basket; cook in smaller

batches if necessary. Adjust temperature or cooking time as needed.

- **White smoke comes from the appliance:**
This may indicate that you are frying greasy ingredients. Ensure the crisper plate and basket are clean and free of oil residue from previous use. Excessive oil can cause smoke.
- **Food is not crispy:**
Ensure food is patted dry before cooking. A light coating of oil can help achieve crispiness. Do not overcrowd the basket.
- **Basket does not slide into the appliance properly:**
Ensure the basket is not overfilled and that the crisper plate is correctly positioned. Push the basket firmly until it clicks into place.

SPECIFICATIONS

Feature	Detail
Model Name	HD-ZG021M Air Fryer
Capacity	4 Quarts
Product Dimensions (D x W x H)	10.4"D x 13.7"W x 12.9"H
Item Weight	10 pounds
Color	Beige
Material	Acrylonitrile Butadiene Styrene (ABS), Polypropylene (PP)
Inner Material	Stainless Steel with Non-Stick Coating
Output Wattage	1400 watts
Voltage	110 volts
Control Method	Touch, Hand Control
Min Temperature Setting	80 °F
Max Temperature Setting	395 °F
Special Features	Automatic Shut-Off, Programmable, Temperature Control, Timer, Viewing Window
Included Components	Removable frying basket
Recommended Uses	Bake, Defrost, Dehydrate, Reheat, Roast

WARRANTY AND SUPPORT

For warranty information, product registration, or technical support, please refer to the documentation included with your purchase or visit the official Pukomc website. Keep your purchase receipt as proof of purchase for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question