

[Manuals.plus](#) /

› [Everest](#) /

› Everest SM-BT09 2-in-1 Bluetooth and 2.4GHz Wireless Mouse User Manual

Everest SM-BT09

Everest SM-BT09 2-in-1 Bluetooth and 2.4GHz Wireless Mouse User Manual

Model: SM-BT09

INTRODUCTION

Thank you for choosing the Everest SM-BT09 2-in-1 Wireless Mouse. This mouse offers versatile connectivity options, supporting both Bluetooth and 2.4GHz wireless modes, providing flexibility for various devices. This manual will guide you through the setup, operation, and maintenance of your new mouse.

PACKAGE CONTENTS

- Everest SM-BT09 Wireless Mouse
- USB 2.4GHz Receiver
- User Manual

Note: 2 AAA batteries are required for operation and are not included in the package.

PRODUCT OVERVIEW

Familiarize yourself with the components of your Everest SM-BT09 mouse.



Image 1: Top and side view of the Everest SM-BT09 mouse, showing the left and right click buttons, scroll wheel, DPI button, and two side buttons.

1. **Left Click Button:** Standard primary function.
2. **Right Click Button:** Standard secondary function.
3. **Scroll Wheel:** For vertical scrolling and middle-click function.
4. **DPI Adjustment Button:** Cycles through different cursor speeds (DPI settings).
5. **Forward/Backward Buttons:** Located on the side for navigation in web browsers and file explorers.



Image 2: Bottom view of the Everest SM-BT09 mouse, showing the optical sensor, battery compartment, and connectivity mode switch.

1. **Optical Sensor:** Tracks mouse movement.
2. **Battery Compartment:** Holds 2 AAA batteries.
3. **Connectivity Mode Switch:** Allows switching between 2.4GHz wireless and Bluetooth modes.
4. **USB Receiver Storage:** A slot to store the 2.4GHz USB receiver when not in use.

SETUP

1. Battery Installation

- I. Locate the battery compartment on the bottom of the mouse.
- II. Open the battery compartment cover.
- III. Insert two AAA batteries, ensuring correct polarity (+/-).
- IV. Close the battery compartment cover securely.

2. Connecting via 2.4GHz Wireless Mode

- I. Take out the USB receiver from its storage slot on the bottom of the mouse.
- II. Plug the USB receiver into an available USB port on your computer.
- III. Slide the connectivity mode switch on the bottom of the mouse to the 2.4GHz position (usually indicated by a USB dongle icon).
- IV. Your computer should automatically detect and install the necessary drivers. The mouse will be ready for use.

3. Connecting via Bluetooth Mode

- I. Slide the connectivity mode switch on the bottom of the mouse to the Bluetooth position (usually indicated by a

Bluetooth icon).

- II. The mouse will enter pairing mode, and an indicator light (if present) may flash.
- III. On your computer or device, open Bluetooth settings.
- IV. Search for new devices. The mouse should appear as "Everest SM-BT09" or similar.
- V. Select the mouse to pair. Once paired, the indicator light will stop flashing, and the mouse will be ready for use.

OPERATING INSTRUCTIONS

- **Basic Functions:** Use the left and right click buttons for primary and secondary actions. The scroll wheel allows for vertical navigation.
- **DPI Adjustment:** Press the DPI button (located behind the scroll wheel) to cycle through different cursor speeds. This allows you to adjust the mouse sensitivity to your preference.
- **Side Buttons:** The two side buttons typically function as 'Forward' and 'Backward' in web browsers and file explorers, enhancing navigation efficiency.
- **Automatic Sleep Mode:** The mouse is designed to enter sleep mode when inactive to conserve battery power. Click any button to wake it up.
- **Power Off:** When not in use for extended periods, it is recommended to switch the mouse off using the power switch on the bottom to further conserve battery life.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the mouse. For stubborn dirt, a slightly damp cloth can be used, but ensure no moisture enters the device. Avoid harsh chemicals or abrasive cleaners.
- **Battery Replacement:** When the mouse performance degrades or it stops responding, replace the AAA batteries. Always use fresh batteries and dispose of old ones responsibly.
- **Storage:** When transporting or storing the mouse, ensure the USB receiver is placed in its dedicated storage slot to prevent loss.

TROUBLESHOOTING

Problem	Possible Solution
Mouse not responding	◦ Check if batteries are correctly installed and have sufficient charge. Replace if necessary. ◦ Ensure the mouse is switched ON. ◦ For 2.4GHz mode, ensure the USB receiver is securely plugged into a working USB port. Try a different USB port. ◦ For Bluetooth mode, ensure Bluetooth is enabled on your device and the mouse is paired. Try re-pairing. ◦ Ensure the connectivity mode switch on the mouse is set to the correct mode (2.4GHz or Bluetooth).

Problem	Possible Solution
Erratic cursor movement or no movement	◦ Clean the optical sensor on the bottom of the mouse. ◦ Ensure you are using the mouse on a suitable surface. Highly reflective or transparent surfaces may cause issues. A mouse pad is recommended. ◦ Check for interference from other wireless devices.
Cannot pair in Bluetooth mode	◦ Ensure the mouse is in Bluetooth pairing mode (indicator light flashing). ◦ Make sure your device's Bluetooth is turned on and discoverable. ◦ Remove any previous pairings of the mouse from your device's Bluetooth settings and try pairing again. ◦ Ensure the mouse is within the effective range of your device's Bluetooth.

SPECIFICATIONS

Brand	Everest
Model	SM-BT09
Connectivity Technology	Bluetooth, 2.4GHz Wireless
Battery Type	2 x AAA batteries (not included)
Special Feature	Wireless
Origin Country	Turkey

WARRANTY INFORMATION

The Everest SM-BT09 Wireless Mouse comes with a **2-year warranty** from the date of purchase. This warranty covers manufacturing defects and malfunctions under normal use. Please retain your proof of purchase for warranty claims. The warranty does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear.

SUPPORT

For further assistance, technical support, or warranty inquiries, please contact your retailer or the Everest customer service department. Refer to the product packaging or the official Everest website for contact details.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DC6W2Y93>

More documents and user manuals: **<https://manuals.plus/>**