

## AEG AB31C1GG

# AEG AB31C1GG Vacuum Cleaner User Manual

Model: AB31C1GG | Brand: AEG

## 1. INTRODUCTION

Thank you for choosing the AEG AB31C1GG Vacuum Cleaner. This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your appliance. Please read these instructions carefully before using the vacuum cleaner and retain them for future reference.

### Important Safety Instructions

- Always ensure the power supply voltage matches the rating indicated on the vacuum cleaner.
- Do not use the vacuum cleaner to pick up water or other liquids, flammable substances, or hot ashes.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Unplug the appliance from the power outlet before cleaning or performing maintenance.
- Do not operate the vacuum cleaner with a damaged cord or plug.
- This appliance is intended for domestic use only.

## 2. PRODUCT OVERVIEW

The AEG AB31C1GG is a powerful and efficient bagged vacuum cleaner designed for effective cleaning of various surfaces, particularly carpets. It features a 750W motor, a 3-liter dust bag capacity, and a HEPA filter for improved air quality.

### Components

- Main Unit (Vacuum Cleaner Body)
- Flexible Hose
- Telescopic Tube
- Floor Nozzle
- Crevice Tool

- Upholstery/Brush Tool
- Dust Bag (pre-installed or separate)



Figure 2.1: The AEG AB31C1GG vacuum cleaner with its main components including the flexible hose, telescopic tube, floor nozzle, and additional cleaning tools.



Figure 2.2: Detailed view of the control panel, showing the power button, cord rewind button, and the rotary dial for adjusting suction power from minimum (MIN) to maximum (MAX).



Figure 2.3: The included crevice tool (right) for narrow spaces and the brush tool (left) for delicate surfaces or upholstery.

### 3. SETUP AND ASSEMBLY

---

Follow these steps to assemble your vacuum cleaner before first use:

1. **Unpack Components:** Carefully remove all parts from the packaging. Ensure all components listed in Section 2.2 are present.
2. **Attach Flexible Hose:** Insert the hose end into the suction inlet on the main unit until it clicks securely into place.
3. **Assemble Telescopic Tube:** Connect the handle end of the flexible hose to the wider end of the telescopic tube. Extend the telescopic tube to your desired length by pressing the release button and pulling.
4. **Attach Floor Nozzle:** Connect the floor nozzle to the narrower end of the telescopic tube. Ensure it is firmly attached.
5. **Check Dust Bag:** Open the dust bag compartment (usually located at the front or top of the main unit) and ensure a dust bag is correctly installed. Refer to Section 5.1 for dust bag replacement instructions.

### 4. OPERATING INSTRUCTIONS

---

Once assembled, your AEG AB31C1GG vacuum cleaner is ready for use.

#### 4.1 Power Connection and On/Off

1. Pull out the power cord from the main unit to the desired length. The cord has a maximum length of 5 meters. Do not pull beyond the yellow marker.

2. Insert the plug into a suitable electrical outlet (230V).
3. Press the On/Off button (usually marked with a power symbol) on the main unit to start the vacuum cleaner.
4. To switch off, press the On/Off button again.
5. To rewind the cord, press the cord rewind button (usually marked with a cord symbol). Hold the plug to prevent it from whipping.

## 4.2 Adjusting Suction Power

The suction power can be adjusted using the rotary dial on the main unit:

- Turn the dial towards 'MIN' for reduced suction, suitable for delicate surfaces like curtains or light rugs.
- Turn the dial towards 'MAX' for maximum suction, ideal for heavily soiled carpets or hard floors.

## 4.3 Using Attachments

- **Floor Nozzle:** Use for general cleaning of carpets and hard floors. Some floor nozzles have a switch to adjust for different floor types.
- **Crevice Tool:** Ideal for cleaning in narrow gaps, corners, and along edges.
- **Upholstery/Brush Tool:** Use for cleaning upholstery, curtains, and other delicate surfaces. The brush helps to dislodge dirt.

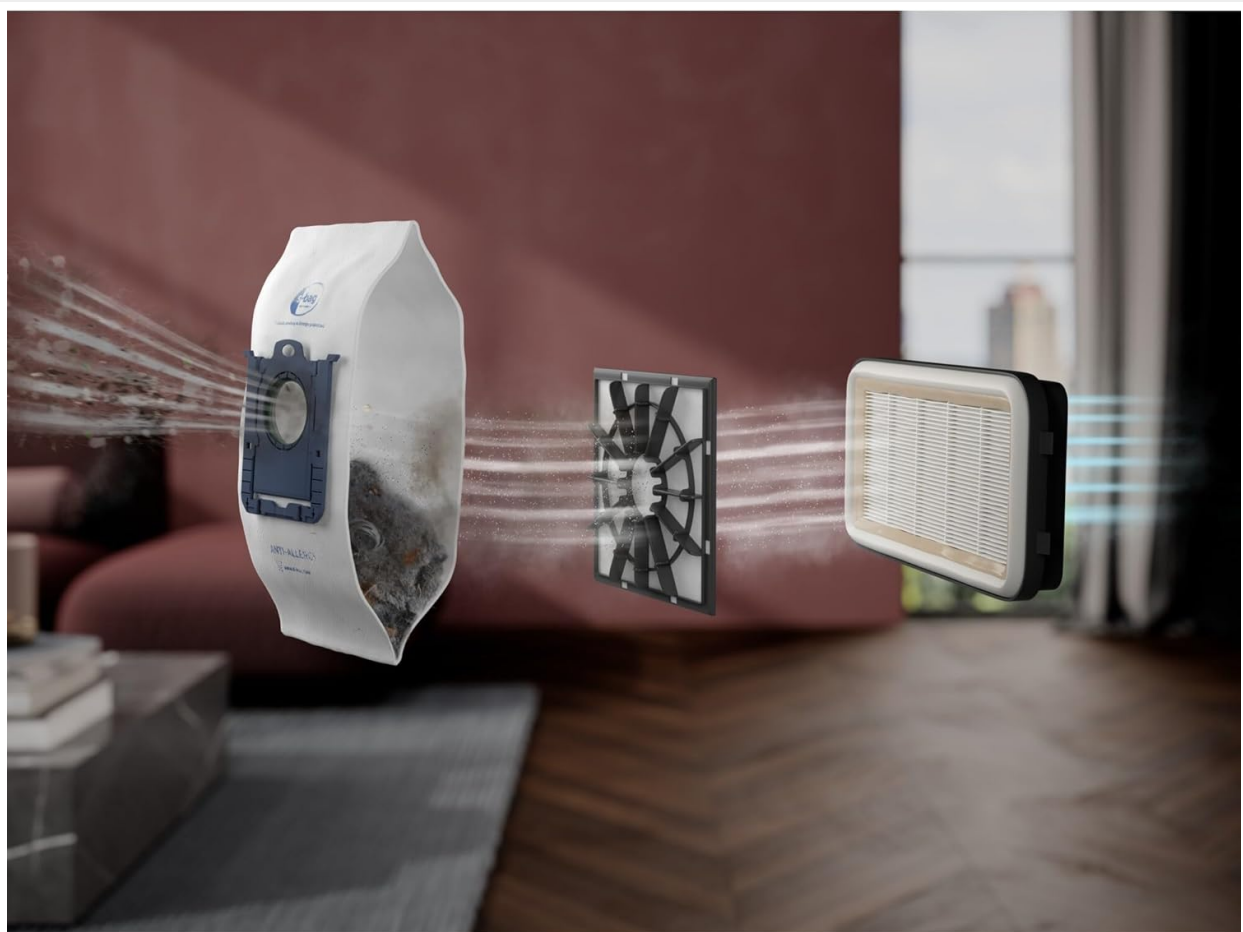


Figure 4.1: The vacuum cleaner in operation, effectively cleaning debris from a wooden floor using the main floor nozzle.





Figure 4.2: An illustration demonstrating the vacuum cleaner's operational reach, indicating a 7.5-meter cleaning radius from the power outlet.

## 5. MAINTENANCE

---

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner. Always unplug the appliance before performing any maintenance.

### 5.1 Dust Bag Replacement

The dust bag should be replaced when the dust bag indicator (if present) shows full, or when suction power noticeably decreases. The capacity of the dust bag is 3 liters.

1. Open the dust bag compartment cover.
2. Carefully remove the full dust bag from its holder. Dispose of the bag according to local waste regulations.
3. Insert a new AEG compatible dust bag into the holder, ensuring it is correctly seated and sealed.
4. Close the dust bag compartment cover until it clicks shut.

### 5.2 Filter Maintenance

The AEG AB31C1GG is equipped with a HEPA filter, which should be cleaned or replaced periodically to maintain filtration efficiency and suction power.

1. Locate the HEPA filter compartment, typically near the exhaust vent or within the dust bag compartment.
2. Remove the HEPA filter. Depending on the filter type, it may be washable or require replacement.
3. If washable, rinse under cold running water and allow it to air dry completely for at least 24 hours before

reinserting. Do not use detergents or heat to dry.

4. If non-washable, replace with a new AEG compatible HEPA filter.
5. Reinsert the clean or new filter and close the compartment cover.



Figure 5.1: An illustration depicting the vacuum cleaner's filtration process, showing air passing through the dust bag, motor filter, and finally the HEPA exhaust filter.

## 6. TROUBLESHOOTING

Before contacting customer service, please check the following common issues and solutions:

Problem	Possible Cause	Solution
Vacuum cleaner does not start.	No power supply.	Check if the plug is correctly inserted into the outlet. Check the fuse or circuit breaker.
Reduced suction power.	Full dust bag. Clogged filter. Blockage in hose or nozzle.	Replace the dust bag. Clean or replace filters. Check hose, telescopic tube, and nozzle for blockages and remove them.
Unusual noise.	Blockage in the system. Damaged motor.	Check for and remove any blockages. If the noise persists, contact customer support.
Overheating and automatic shutdown.	Clogged filters or full dust bag.	Replace dust bag and clean/replace filters. Allow the appliance to cool down for at least 30 minutes before restarting.

## 7. TECHNICAL SPECIFICATIONS

Feature	Specification
Model	AB31C1GG
Brand	AEG
Power	750 Watts
Voltage	230 Volts
Frequency	50 Hz
Dust Bag Capacity	3 Litres
Filter Type	HEPA Filter
Noise Level	78 Decibels
Cable Length	5 meters
Dimensions (L x W x H)	39.42 x 40.17 x 32.01 cm
Weight	4 Kilograms
Power Source	Corded Electric
Country of Origin	Spain

## 8. WARRANTY AND SUPPORT

### 8.1 Warranty Information

Your AEG AB31C1GG Vacuum Cleaner comes with a manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms, conditions, and duration. Keep your proof of purchase for warranty claims.

### 8.2 Customer Support

For technical assistance, spare parts, or service, please contact your retailer or the official AEG customer support in your region. Contact details can typically be found on the AEG website or in the product documentation.





SK 9999330B  
BSK999330M

USER  
MANUAL



AEG

[AEG BSK999330B/BSK999330M Steam Oven User Manual](#)

This user manual provides comprehensive guidance for the AEG BSK999330B and BSK999330M steam oven, covering installation, operation, daily use, care, troubleshooting, and energy-saving tips.