

## PHILIPS QP6652/30

# Philips OneBlade Pro 360 Face + Body Hybrid Trimmer - QP6652/30 User Manual

[Introduction](#)   [Safety Information](#)   [Package Contents](#)   [Setup](#)   [Operating Instructions](#)   [Maintenance](#)  
[Troubleshooting](#)   [Specifications](#)   [Warranty & Support](#)

## 1. INTRODUCTION

---

The Philips OneBlade Pro 360 Face + Body (model QP6652/30) is a versatile hybrid grooming tool designed for trimming, shaving, and creating precise lines and edges on both face and body, regardless of hair length. Its advanced shaving technology features an ultra-fast cutting element that performs up to 12,000 movements per minute, ensuring efficient hair removal. The dual protection system, with a smooth coating and rounded edges, enhances comfort during use. The innovative 360 blade pivots in all directions, adapting to facial and body contours for consistent skin contact and control, making it easier to groom hard-to-reach areas with fewer passes.



Image 1.1: Philips OneBlade Pro 360 Face + Body with its complete set of accessories, including the device, blades, combs, charging stand, and travel case.

## 2. SAFETY INFORMATION

Please read this instruction manual carefully before using the Philips OneBlade Pro 360. Keep it for future reference.

- **Warning:** Avoid direct contact with the blade.
- **Warning:** Do not immerse the charger in water or any other liquid.
- Always clean the device according to the manufacturer's instructions to prevent bacterial growth and maintain hygiene.
- This appliance is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

## 3. PACKAGE CONTENTS

The Philips OneBlade Pro 360 Face + Body package includes the following items:

- 1x Philips OneBlade Pro 360 Face & Body device
- 2x 360 blades (one pre-installed, one spare)
- 1x Precision comb with 14 length settings (0.4-10mm)
- 1x Body kit (includes 1x click-on body comb and 1x skin protector)
- 1x Charging stand
- 1x Travel case



Image 3.1: Overview of all items included in the Philips OneBlade Pro 360 Face + Body package.

## 4. SETUP

### 4.1 Charging the Device

Before first use, fully charge your OneBlade Pro 360. The device features a rechargeable Li-ion battery that provides up to 120 minutes of continuous use after a 1-hour charge.

1. Place the OneBlade device onto the charging stand.
2. Connect the charging stand to a power outlet using the provided USB cable and adapter (if included).

3. The digital LED display on the device will indicate the battery charging status. A full charge is indicated by 100%.

## Batterie Li-ion rechargeable

offrant 120 minutes d'autonomie  
continue pour 1 heure de charge



*Image 4.1: Connecting the Philips OneBlade Pro 360 to its charging cable. The LED display shows battery percentage.*

### 4.2 Attaching Blades and Combs

The OneBlade Pro 360 comes with interchangeable blades and combs for different grooming needs.

1. To attach a blade: Align the blade with the handle and push it until it clicks into place.
2. To attach the precision comb: Slide the comb onto the blade until it securely locks. The precision comb offers 14 length settings from 0.4mm to 10mm. Rotate the dial on the comb to select your desired length.
3. To attach the body comb or skin protector: Click the desired accessory onto the blade.
4. To remove an accessory: Gently pull it off the blade. To remove the blade, press the release button (if present) or pull it away from the handle.



## 20 hauteurs de coupe

Le sabot réglable ne s'obstrue pas,  
même lorsque les poils sont longs et  
épais

*Image 4.2: Attaching the adjustable precision comb to the OneBlade device. The comb allows for various cutting lengths.*

## 5. OPERATING INSTRUCTIONS

The Philips OneBlade Pro 360 is 100% waterproof, allowing for both wet and dry use, with or without foam, and even in the shower.

### 5.1 For Face Grooming (Trimming, Shaving, Edging)

Use the precision comb for trimming or the bare blade for shaving and edging.

- **Trimming:** Attach the precision comb and select your desired length. Move the OneBlade against the direction of hair growth, keeping the blade flat against your skin.
- **Shaving:** For a close shave, remove any comb. Hold the blade flat against your skin and move it in long, even strokes against the direction of hair growth. The OneBlade is designed to cut hair, not skin, providing a comfortable shave without getting too close.
- **Edging:** Use the dual-sided blade to create precise lines and sharp edges. Hold the blade perpendicular to your skin and move it along the desired line.

## Pour le visage


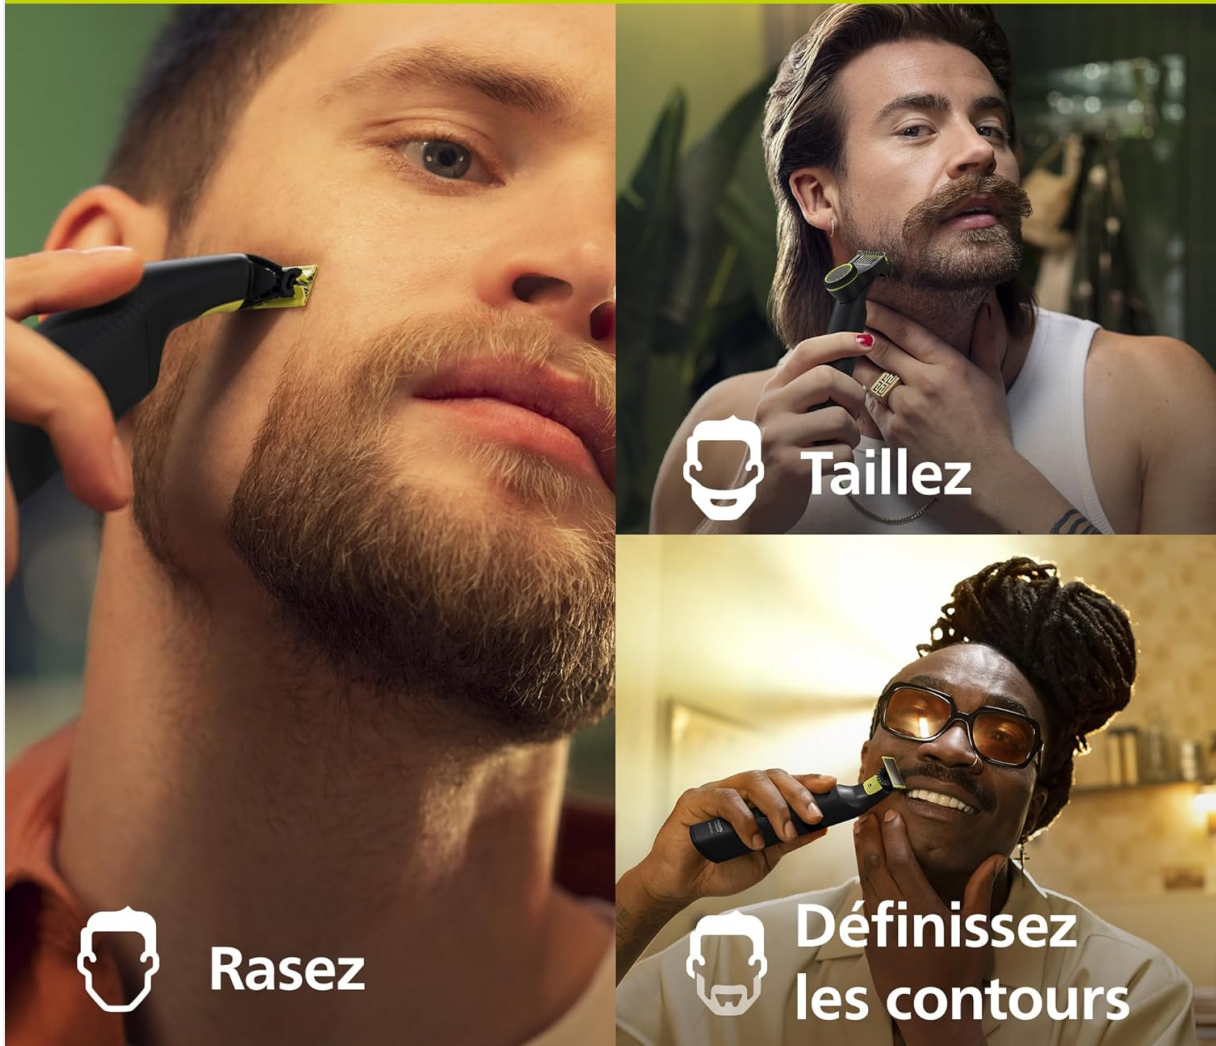


Image 5.1: Demonstrating facial grooming with the Philips OneBlade Pro 360, including trimming, shaving, and defining edges.

### 5.2 For Body Grooming

Use the body comb or skin protector for sensitive areas.

- **Trimming Body Hair:** Attach the body comb (3mm) for an even trim. Move the OneBlade against the direction of hair growth.
- **Sensitive Areas:** Use the skin protector attachment for extra comfort and safety when grooming sensitive areas.

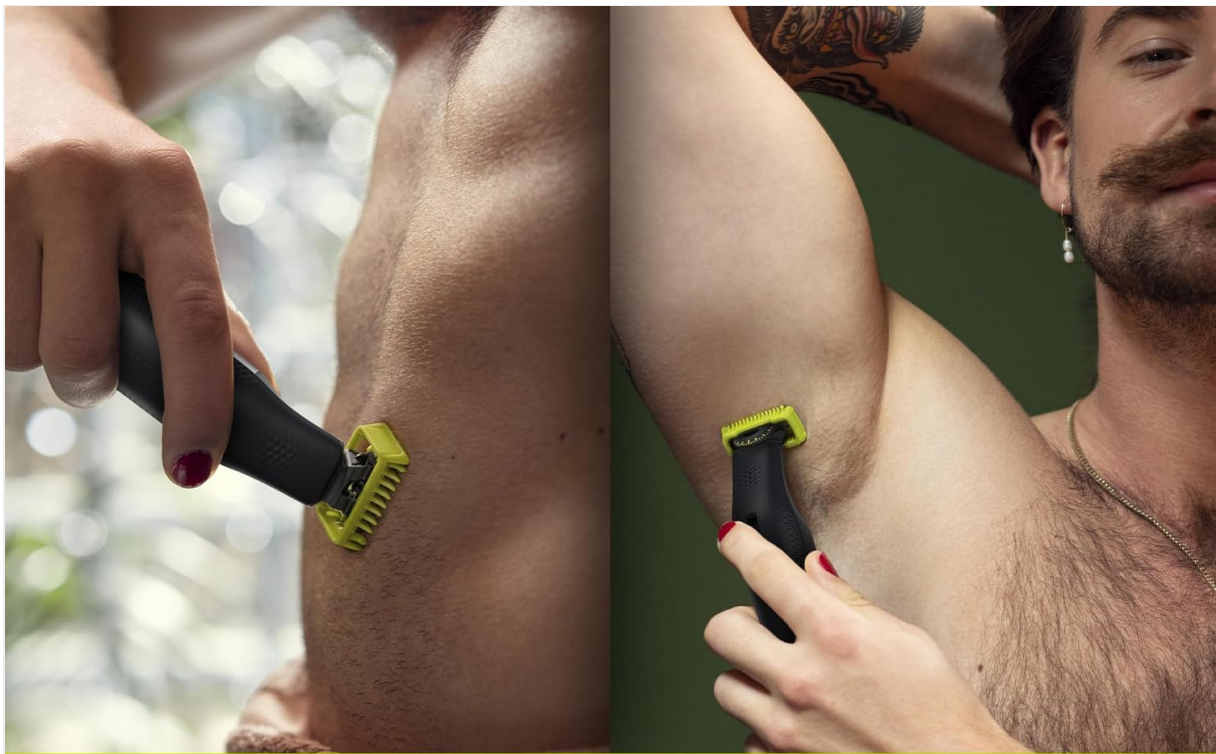

## Pour le corps

Taillez et rasez les zones sensibles,  
même en dessous de la ceinture

*Image 5.2: A user demonstrating body grooming with the Philips OneBlade Pro 360, suitable for various body areas.*

## 6. MAINTENANCE

### 6.1 Cleaning

Regular cleaning ensures optimal performance and hygiene.

1. After each use, turn off the device and remove any attached comb.
2. Rinse the blade and the device under warm running water.
3. Shake off excess water and allow the device and blade to air dry completely before storing.

### 6.2 Blade Replacement

For optimal performance, it is recommended to replace the OneBlade blade every 4 months, based on 2 full shaves per week. An icon will appear on the blade itself when it's time for replacement.

1. To remove an old blade, gently pull it away from the handle.
2. To attach a new blade, align it with the handle and push until it clicks into place.



Image 6.1: Step-by-step visual guide for replacing the OneBlade blade.

## 7. TROUBLESHOOTING

If you encounter any issues with your Philips OneBlade Pro 360, please refer to the following common solutions:

- **Device not turning on:** Ensure the device is fully charged. Check the charging connection.
- **Poor trimming/shaving performance:** The blade might be dull. Replace the blade if it has been used for more than 4 months or if performance has degraded. Ensure the comb is correctly attached.
- **Irritation after use:** Ensure you are using the device correctly, holding the blade flat against the skin. For sensitive areas, use the skin protector. Clean the blade thoroughly after each use.
- **Charging issues:** Verify the charging cable and adapter are functioning correctly. Ensure the charging stand is clean and free of debris.

For further assistance, please contact Philips customer support.

## 8. SPECIFICATIONS

Feature	Detail
Model Number	QP6652/30
Brand	PHILIPS
Power Source	Battery powered (Rechargeable Li-ion)
Battery Type	1 x 12V (included)
Blade Material	Stainless Steel
Special Feature	Waterproof (100% wet & dry use)
Cutting Heights	14 lengths (0.4-10mm) with precision comb
Body Comb	1x 3mm click-on body comb
Recommended Uses	Trimming, facial hair, beard, shaving, hair cutting, face and body care
Color	Black
Country of Origin	Indonesia

## 9. WARRANTY & SUPPORT

For warranty information, please refer to the documentation provided with your purchase or visit the official Philips website. Philips offers customer support for any questions or issues you may have regarding your OneBlade Pro 360.

**Online Support:** Visit the Philips support page for FAQs, troubleshooting guides, and contact options.

**Contact Information:** Refer to your product packaging or the Philips website for local customer service contact details.