

## Xbox QAU-00157

# Xbox Special Edition Wireless Gaming Controller – Ghost Cipher User Manual

Model: QAU-00157

## 1. PRODUCT OVERVIEW

The Xbox Wireless Controller – Ghost Cipher Special Edition offers a unique transparent design, revealing metallic silver interior components. It features rubberized Ash Gray grips for enhanced comfort and control, along with bronze metallic triggers and a matching D-pad for precise input. This controller is designed for seamless connectivity across various gaming platforms.



Figure 1: Front view of the Xbox Ghost Cipher Wireless Controller.

## 2. KEY FEATURES

- **Transparent Clear Design:** Features a transparent clear top case and side caps, showcasing metallic, silver interior parts.
- **Enhanced Grip:** Equipped with rubberized, Ash Gray grips on the back-case for secure and comfortable handling during extended gaming sessions.
- **Metallic Accents:** Includes bronze metallic triggers and a matching bronze metallic D-pad for a premium feel and precise control.
- **Dedicated Share Button:** Allows for seamless capture and sharing of screenshots, game clips, and other content.
- **Multi-Device Connectivity:** Supports Xbox Wireless and Bluetooth technology for easy pairing and switching between Xbox Series X|S, Xbox One, Windows PC, Android, and iOS devices.
- **USB-C Port:** Provides direct plug-and-play connectivity to consoles and PCs.

- **3.5mm Audio Jack:** Compatible with most gaming headsets for integrated audio.
- **Customizable Button Mapping:** Utilize the Xbox Accessories app to personalize button layouts and create custom profiles.



**Rubberized, Ash Gray grips  
on the back-case**

Figure 2: Transparent clear design revealing internal components.



## **Xbox Wireless and Bluetooth technology**

Figure 3: Close-up of the bronze metallic hybrid D-pad.





Figure 4: Detail of the rubberized Ash Gray grips.

## 3. SETUP GUIDE

### 3.1 Battery Installation

The controller operates on two AA batteries (included). To install, open the battery compartment located on the rear of the controller. Insert the batteries, ensuring correct polarity, then close the compartment securely.



## Two-tone thumbsticks featuring white bases and Ash Gray tops

Figure 5: Rear view of the controller with battery compartment.

### 3.2 Initial Pairing

To pair your controller with a device (Xbox console, PC, or mobile), press and hold the pairing button on the top edge of the controller until the Xbox button flashes rapidly. Then, activate the pairing mode on your device and select the controller from the list of available devices. The Xbox button will glow solid when successfully connected.

Video 1: This video demonstrates the versatility of the Xbox controller across different gaming platforms, including its use with Game Pass.

## 4. OPERATING INSTRUCTIONS

### 4.1 Using the Share Button

The dedicated Share button, located centrally on the controller, allows you to quickly capture in-game moments. A single press takes a screenshot, while holding it down records a video clip. Captured content can then be accessed and shared through your console or device's respective media gallery.

## 4.2 Custom Button Mapping

For a personalized gaming experience, download the Xbox Accessories app on your Xbox console or Windows PC. Within the app, you can remap buttons, adjust trigger sensitivity, and create custom controller profiles for different games. These profiles can be saved and switched between as needed.

## 4.3 Audio Connectivity

Connect any compatible 3.5mm audio headset directly to the audio jack located at the bottom of the controller. This allows for in-game audio and voice chat functionality.

# 5. MAINTENANCE AND CARE

To ensure the longevity of your Xbox Wireless Controller, keep it clean and free from dust and debris. Use a soft, dry cloth for general cleaning. For stubborn dirt, a slightly damp cloth can be used, but avoid excessive moisture. Do not use harsh chemicals or abrasive cleaners. Store the controller in a cool, dry place when not in use.

## 6. TROUBLESHOOTING

If you encounter issues with your controller, try the following steps:

- **Connectivity Issues:** Ensure the controller has fresh batteries. Re-attempt pairing with your device. If using Bluetooth, ensure your device's Bluetooth is enabled and visible.
- **Input Lag or Disconnections:** Move closer to your console or PC to reduce interference. Ensure no other wireless devices are causing interference. Update controller firmware via the Xbox Accessories app.
- **Buttons Not Responding:** Check for physical obstructions. If the issue persists, try resetting the controller by removing and reinserting the batteries.

For more detailed troubleshooting or persistent issues, please refer to the official Xbox support website.

## 7. TECHNICAL SPECIFICATIONS

Specification	Detail
Model Number	QAU-00157
Product Dimensions	6.91 x 5.61 x 2.76 inches
Item Weight	14.9 ounces
Batteries	2 AA batteries (included)
Connectivity	Xbox Wireless, Bluetooth, USB-C
Audio Port	3.5mm audio jack
Manufacturer	Microsoft

## 8. WARRANTY AND SUPPORT

This Xbox Wireless Controller is covered by a manufacturer's warranty. For specific warranty terms, registration, and support, please visit the official Xbox support website or refer to the documentation included with your purchase.

You can also find additional resources and FAQs on the [Xbox Brand Store on Amazon](#).

© 2024 Xbox. All rights reserved. Xbox, Xbox Series X|S, Xbox One, and the Xbox logos are trademarks of the Microsoft group of companies.

Related Documents - QAU-00157

<div><div><div>①</div><div>URL: <a href="https://www.t1-2ysg9ffoc">https://www.t1-2ysg9ffoc</a></div><div>Enter URL</div><div><div>Transfer Ideas</div><div>Transform the world.</div></div></div><div><div>②</div><div>Download</div><div><div>Ready when you are</div><div>Your brand is your best asset</div></div><div>Download</div></div><div><div>③</div><div>Unzip</div><div>Open the application: DemoSDK</div><div>File Path: Adulstall -- bin -- DemoSDK.exe</div></div><div><div>④</div><div>Step 1: Connect the cable to the computer</div><div>Step 2: Press and hold the "X" key</div><div>Step 3: Plug in the USB-C cable</div><div>The controller is successfully connected to the computer, click to download</div><div>The program can not be recognized, first double-click "Adulstall.exe", and then upgrade!</div><div>Upgrade Successful</div><div>Note!!!</div><div>After upgrading, first connect the Xbox console with cable before you can subsequently connect to the Xbox console wirelessly normally!</div></div></div>	<p><a href="#">Guide to Upgrading Xbox Controller Firmware with DemoSDK</a></p> <p>Step-by-step instructions for downloading and using the DemoSDK application to upgrade your wireless Xbox controller firmware. Includes connection steps and troubleshooting tips.</p>
<div><div>Wireless Controller</div><div>Operation Manual</div><div></div><div>RH-008/RH-010</div><div>Please read the manual carefully before use, and use it strictly according to the requirements of the manual. After reading, please keep it properly for future reference.</div></div>	<p><a href="#">RH-008/RH-010 Wireless Controller Operation Manual</a></p> <p>User guide for the RH-008 and RH-010 Wireless Controllers. Learn how to connect the gamepad to Xbox consoles, PCs (Windows), and mobile devices (iOS, Android) via wired or Bluetooth connections. Includes instructions on TURBO function.</p>



