

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Citizen](#) /

› [Citizen Eco-Drive Weekender Avion Watch BM7550-52L User Manual](#)

Citizen BM7550-52L

Citizen Eco-Drive Weekender Avion Watch BM7550-52L User Manual

Model: BM7550-52L

INTRODUCTION

This manual provides instructions for the proper setup, operation, and maintenance of your Citizen Eco-Drive Weekender Avion watch, Model BM7550-52L. This timepiece features Citizen's Eco-Drive technology, which converts light into energy, eliminating the need for battery replacement.



Image: Front view of the Citizen Eco-Drive Weekender Avion watch (Model BM7550-52L), showcasing its blue dial, silver-tone stainless steel case and bracelet, and clear hour markers.

SETUP

1. Initial Charging

Your Eco-Drive watch is powered by light. Before initial use, or if the watch has stopped, ensure it is fully charged. Expose the watch dial to bright light (natural sunlight or fluorescent light) for several hours. A full charge can provide a power reserve of several months, even in darkness.



Image: Diagram explaining Eco-Drive technology, showing how light is converted into energy by solar cells to power the watch and store surplus in a power cell, eliminating battery replacement.

2. Setting the Time

1. Pull the crown out to the second click position.
2. Rotate the crown to move the hour and minute hands to the correct time. Ensure AM/PM is correctly set, especially when setting the date.
3. Push the crown back into the normal position to start the watch.

3. Setting the Date

1. Pull the crown out to the first click position.
2. Rotate the crown to set the correct date. Avoid setting the date between 9:00 PM and 1:00 AM, as this may interfere with the automatic date change mechanism.
3. Push the crown back into the normal position.



Image: Side view of the Citizen Eco-Drive Weekender Avion watch, highlighting the textured crown used for time and date adjustments.

4. Bracelet Adjustment

For proper fit and comfort, the stainless steel bracelet may need adjustment. It is recommended to have this procedure performed by a qualified jeweler or a Citizen service center to prevent damage to the watch or bracelet.

OPERATING YOUR WATCH

Basic Timekeeping

Once set, your watch will continuously display the current time (hours, minutes, seconds) and date. The Eco-Drive movement ensures accurate timekeeping as long as the watch receives sufficient light exposure.

Date Display

The date display automatically advances once every 24 hours. If the watch stops due to insufficient charge, the date may need to be reset once power is restored.

Water Resistance

This watch is rated for 100 meters (10 ATM) water resistance. This means it is suitable for swimming, showering, and snorkeling. However, it is not recommended for scuba diving. Ensure the crown is fully pushed in before any contact with water.

MAINTENANCE

Cleaning

Wipe the watch case and bracelet regularly with a soft, dry cloth to remove dirt and moisture. For stainless steel, a slightly damp cloth can be used, followed by drying. Avoid using harsh chemicals or abrasive materials.

Storage

When storing your watch for extended periods, ensure it is exposed to light periodically to maintain its charge. Storing it in complete darkness for very long durations may cause it to stop, requiring a full recharge.

Power Reserve

After a full charge, your Eco-Drive watch can operate for several months in complete darkness. If the watch enters a low power state, the second hand may move in two-second intervals as a warning. Expose the watch to light immediately to recharge it.

TROUBLESHOOTING

- Watch Not Running:** If the watch has stopped, it likely needs charging. Expose the dial to bright light for several hours.
- Date Not Changing Correctly:** Check if the time is set correctly for AM/PM. The date changes around midnight. If the watch stopped and restarted, the date may need manual adjustment.
- Inaccurate Time:** Ensure the watch is fully charged. If the issue persists after adequate charging and time setting, contact Citizen customer support for assistance.

SPECIFICATIONS

Feature	Detail
Model Number	BM7550-52L
Movement	Eco-Drive (Light-Powered)
Functions	3-Hand, Date
Case Material	Silver-Tone Stainless Steel
Bracelet Material	Silver-Tone Stainless Steel
Crystal	Spherical Mineral Crystal
Water Resistance	100 Meters (10 ATM)
Battery	1 Lithium Ion battery required (included, internal Eco-Drive power cell)



Image: Back view of the Citizen Eco-Drive Weekender Avion watch, displaying the stainless steel case back with model and water resistance markings.

WARRANTY

This Citizen watch comes with a 5-Year Limited Warranty. For complete details regarding warranty coverage, terms, and conditions, please refer to the official Citizen website or the warranty card included with your purchase.

SUPPORT

For further assistance, service, or inquiries, please visit the official Citizen Watch website or contact their customer support directly. You can find contact information and frequently asked questions on their support

pages.

[Visit Citizen Support Website](#)