

[Manuals.plus](#) /

› [U-MAX](#) /

› U-MAX 3-Seat Patio Swing with Adjustable Backrest & Canopy - Instruction Manual

U-MAX 3 Seats Swing Bed

U-MAX 3-Seat Patio Swing with Adjustable Backrest & Canopy

Model: 3 Seats Swing Bed

Brand: U-MAX

1. SAFETY INFORMATION

Please read and understand all instructions before assembly and use of this product. Failure to follow these instructions may result in injury or damage.

- **Weight Capacity:** Do not exceed the maximum weight capacity of 750 lbs (approximately 340 kg). This swing is designed for up to three adults.
- **Assembly:** Ensure all parts are correctly assembled and tightened before use. Periodically check all bolts and nuts for tightness.
- **Placement:** Place the swing on a flat, stable surface. Avoid placing it on uneven ground or slopes.
- **Weather Conditions:** In strong winds or severe weather, remove the canopy and cushions to prevent damage. Consider securing the swing to the ground if high winds are anticipated.
- **Children:** Supervise children when they are using the swing. Do not allow them to stand on the swing or engage in rough play.
- **Maintenance:** Regularly inspect the swing for any signs of wear, damage, or corrosion. Replace damaged parts immediately.

2. SETUP AND ASSEMBLY

Assembly is required for this U-MAX Patio Swing. While specific step-by-step instructions are provided in the product packaging, here are general guidelines:

1. **Unpack Components:** Carefully unpack all parts and hardware. Verify that all components listed in

the included parts list are present.

2. **Frame Assembly:** Begin by assembling the main frame structure. Ensure all connections are secure but do not fully tighten bolts until the entire frame is assembled.
3. **Seat and Backrest Assembly:** Attach the seat and backrest components to the frame. Pay attention to the orientation of parts to ensure proper function of the 2-in-1 conversion mechanism.
4. **Canopy Installation:** Install the canopy frame and fabric. The canopy is adjustable, so ensure the adjustment knob is accessible.
5. **Final Tightening:** Once all components are in place, systematically tighten all bolts and nuts. Do not overtighten.
6. **Cushion Placement:** Place the removable cushions on the seat and backrest.

For detailed assembly steps, refer to the illustrated instruction manual included in your product packaging.

3. OPERATING INSTRUCTIONS

3.1. 2-in-1 Conversion (Swing Chair to Daybed)

This patio swing features a versatile 2-in-1 design, allowing it to easily convert from a 3-seater swing chair to a comfortable daybed.

1. **Release Backrest Buckle:** Locate the buckle mechanism at the base of the backrest frame. Pull the buckle to release the backrest.
2. **Adjust Seat Frame:** Gently push the backrest down until it aligns with the seat frame, forming a flat surface.
3. **Fasten Buckle:** Secure the buckle to fix the backrest in the flat, daybed position.



Image: Steps for converting the swing chair into a daybed. This involves releasing a buckle, adjusting the backrest to align with the seat, and then fastening the buckle to secure the daybed configuration.

3.2. Adjustable Canopy

The canopy can be adjusted to provide optimal shade throughout the day.

1. **Loosen Knob:** Locate the adjustment knobs on either side of the canopy frame. Loosen these knobs.
2. **Adjust Angle:** Carefully adjust the canopy to your desired angle to block sunlight.
3. **Tighten Knob:** Once the desired angle is achieved, tighten the knobs securely to lock the canopy in place.

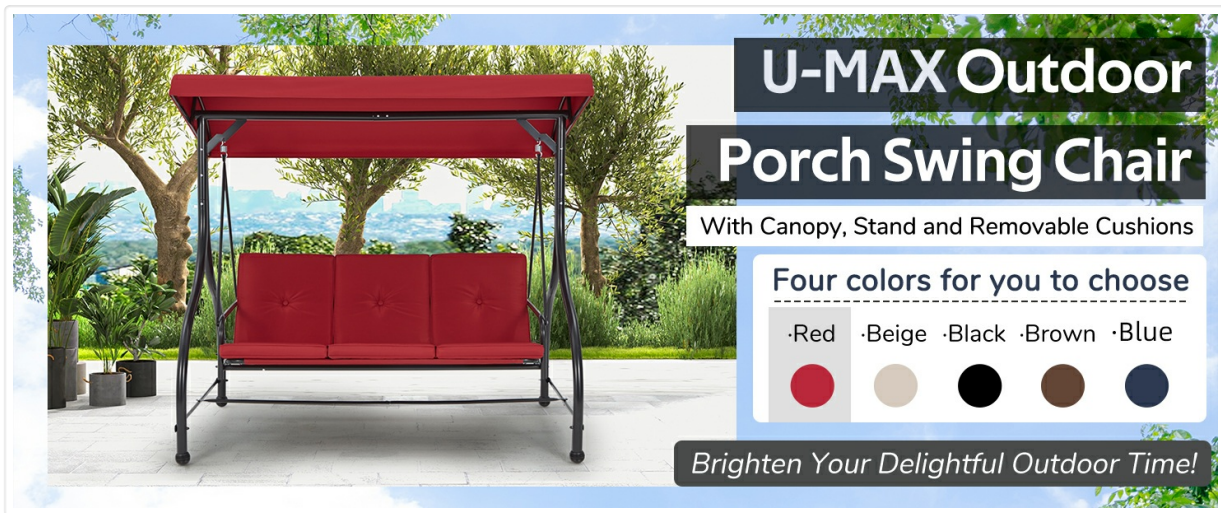


Image: The adjustable canopy feature, highlighting the knob used to change the canopy's angle for sun protection. The image also shows the stable triangular frame structure.

3.3. Fixed Bar Design

The swing incorporates a fixed bar design to ensure stability. This feature holds the outdoor swing firmly in place, preventing it from falling back when transitioning between sitting and lying positions.

4. MAINTENANCE

Proper maintenance will extend the life and appearance of your U-MAX Patio Swing.

- **Cleaning the Frame:** The frame is made of powder-coated alloy steel. Clean with a mild soap and water solution and a soft cloth. Rinse thoroughly and dry completely to prevent rust.
- **Cushion Care:** The cushions are removable. Spot clean with a mild detergent and water. For deeper cleaning, follow the care instructions on the cushion tags. Store cushions indoors during inclement weather or off-season to prolong their life.
- **Canopy Care:** The canopy is made of water-repellent, anti-fading polyester fabric. Clean with a soft brush and mild soap solution. Rinse well and allow to air dry completely before folding or storing. Remove the canopy during strong winds or heavy rain.
- **Springs and Hardware:** The swing features stainless steel springs for high durability and anti-rusting properties. Periodically check all springs, bolts, and nuts for tightness and signs of wear. Lubricate moving parts if necessary.
- **Foot Pads:** The anti-slip foot pads prevent ground scratches and wear. Ensure they are intact and provide stable contact with the ground.

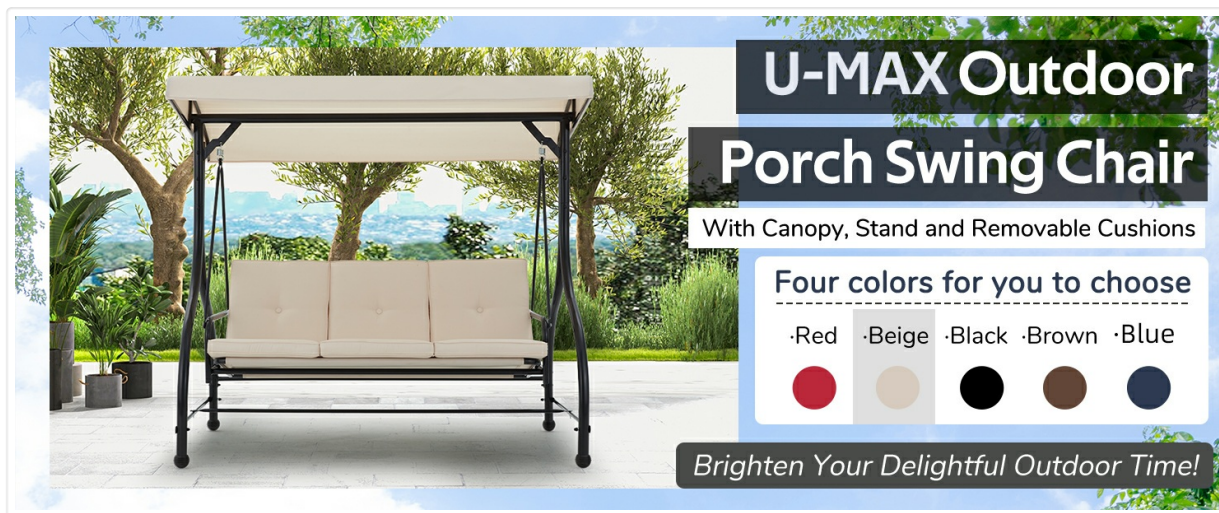


Image: Details of the swing's construction, including the durable stainless steel spring hooks and the anti-slip foot pads designed to protect surfaces and enhance stability.



Image: Features of the polyester fabric, highlighting its water-repellent quality, high color fastness, and resistance to deformation, ensuring longevity and ease of maintenance.

5. TROUBLESHOOTING

If you encounter issues with your U-MAX Patio Swing, consider the following common solutions:

- **Instability/Wobbling:** Check that the swing is placed on a level surface. Ensure all bolts and nuts are securely tightened.
- **Difficulty Converting:** Verify that the backrest buckle mechanism is fully disengaged or engaged as required for conversion. Ensure no obstructions are preventing smooth movement.
- **Canopy Not Staying in Position:** Ensure the adjustment knobs on the canopy frame are fully tightened after setting the desired angle.
- **Squeaking Noises:** Apply a silicone-based lubricant to the swing chains and pivot points if squeaking occurs.

If problems persist, please contact U-MAX customer support for assistance.

6. SPECIFICATIONS

Key specifications for the U-MAX 3-Seat Patio Swing:

Feature	Detail
Brand	U-MAX
Model	3 Seats Swing Bed
Color	Blue
Material (Frame)	Alloy Steel
Material (Fabric)	Oxford Cloth-A (Polyester)
Finish Type	Powder Coated
Product Dimensions (D x W x H)	46.4"D x 73.2"W x 70"H
Item Weight	153.4 Pounds
Maximum Weight Recommendation	750 Pounds
Required Assembly	Yes
Maximum Compatible Number of Seats	3



Image: Detailed product dimensions, including overall measurements and specific dimensions for the seat and canopy, along with the 750 lbs weight capacity.

7. PRODUCT VIDEO

Watch this video for a visual demonstration of the U-MAX Patio Swing's features, including its 2-in-1 conversion and adjustable canopy.

Your browser does not support the video tag.

Video: This video demonstrates the 2-in-1 convertible design of the U-MAX Porch Swing, showing how it transforms from a swing chair to a daybed, and highlights its adjustable canopy feature.

8. WARRANTY AND SUPPORT

For warranty information, replacement parts, or customer support, please contact the seller, Oanluck, or the

manufacturer, U-MAX, directly through their official channels. Refer to your purchase documentation for specific warranty terms and contact details.