

[Manuals.plus](#) /

› [Haute Decor](#) /

› Haute Decor Queensbury 7.5 Ft. PE Fir Christmas Tree User Manual - Model JT-DC300V0700-G1

## Haute Decor JT-DC300V0700-G1, EFW524015951-T-01

# Haute Decor Queensbury 7.5 Ft. PE Fir Christmas Tree User Manual

Model: JT-DC300V0700-G1, EFW524015951-T-01

## INTRODUCTION

This manual provides detailed instructions for the assembly, operation, maintenance, and troubleshooting of your Haute Decor Queensbury 7.5 Ft. PE Fir Christmas Tree. This artificial tree features 8-function LED lights, instant shape memory wire branches, and a convenient foot pedal control. Please read this manual thoroughly before setup and retain it for future reference.



*Figure 1: Fully assembled Haute Decor Queensbury 7.5 Ft. PE Fir Christmas Tree with multicolor LED lights.*

## SAFETY INFORMATION

---

- **Indoor Use Only:** This artificial Christmas tree is designed for indoor use exclusively.
- **Electrical Safety:** Ensure the power cord and adapter are not damaged. Do not overload electrical outlets.
- **Placement:** Place the tree on a flat, stable surface to prevent tipping. Keep away from heat sources, open flames, and direct sunlight.
- **Children and Pets:** Keep small children and pets away from the tree during assembly and operation to prevent accidents.
- **Unplug When Not in Use:** Always unplug the tree from the power outlet when leaving the house, going to bed, or when not in use for extended periods.

## PACKAGE CONTENTS

---

Please verify that all components are present before beginning assembly:

- Pre-Lit LED Christmas Tree Sections (typically 3 sections for a 7.5 ft tree)

- Folding Metal Stand
- Foot Pedal Controller
- UL/CUL Adapter

## SETUP INSTRUCTIONS

---

1. **Assemble the Stand:** Unfold the metal stand and place it on a flat, stable surface. Ensure the legs are fully extended and locked into position.



*Figure 2: The folding metal stand in its assembled position.*

2. **Insert Tree Section 1 (Bottom):** Carefully insert the bottom section of the tree into the center hole of the stand. Tighten the screws on the stand to secure the tree section firmly.
3. **Insert Tree Section 2 (Middle):** Place the middle section of the tree into the top of the bottom section. Ensure the electrical connectors align and connect automatically.
4. **Insert Tree Section 3 (Top):** Place the top section of the tree into the top of the middle section. Again, ensure electrical connectors align and connect.



## 8 Light Modes & Color Changing

- |                         |                                         |                                        |
|-------------------------|-----------------------------------------|----------------------------------------|
| 1. Steady Warm White    | 2. Steady Multicolor                    | 3. Alternating Warm White & Multicolor |
| 4. Twinkle Warm White   | 5. Twinkle Multicolor                   | 6. Slow Fade Warm White                |
| 7. Slow Fade Multicolor | 8. Light Display (cycles all functions) |                                        |



*Figure 3: Illustration of the tree sections for assembly.*

5. **Shape the Branches:** Due to the Quick Shape memory wire, minimal shaping is required. Gently spread out the branches to fill any gaps and achieve a full, natural appearance. Start from the bottom section and work your way up.





*Figure 4: Detail of the PE Fir branches, showcasing the realistic texture and integrated lights.*

6. **Connect Power:** Plug the tree's power cord into the UL/CUL adapter, then plug the adapter into a standard electrical outlet.

The tree stands 7.5 feet tall with a 50-inch diameter at its base.



*Figure 5: Tree dimensions for placement reference.*

## OPERATING INSTRUCTIONS

---

### LED Light Functions

Your Queensbury Christmas tree features 2200 8-function color-changing LED cluster lights. The lights are controlled by a foot pedal.



Figure 6: The foot pedal controller for light functions.



Figure 7: Detailed view of the foot pedal.

1. **Power On/Off:** Press the foot pedal once to turn the lights on. Press it again to turn them off.
2. **Change Light Functions:** While the lights are on, repeatedly press the foot pedal to cycle through the 8 different light settings.

#### Available Light Settings:

- Steady Warm White

- Steady Multicolor
- Alternating Warm White & Multicolor
- Twinkle Warm White
- Twinkle Multicolor
- Slow Fade Warm White
- Slow Fade Multicolor
- Light Display (cycles all functions)



*Figure 8: Visual representation of different light modes.*

## MAINTENANCE

- **Cleaning:** Dust the tree periodically with a soft, dry cloth. Do not use liquid cleaners or solvents.
- **Storage:** Before storing, ensure the tree is completely unplugged. Disassemble the tree in reverse order of assembly. Gently compress the branches. Store the tree sections and stand in their original packaging or a suitable storage bag in a cool, dry place away from direct sunlight and extreme temperatures.
- **Light Replacement:** The LED lights are designed for long-lasting performance. If a light string fails,

check connections. Individual LED bulbs are generally not user-replaceable.

## TROUBLESHOOTING

| Problem                                  | Possible Cause                                                                                                                                                                        | Solution                                                                                                                                                                                                                                                                                  |
|------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Lights do not turn on.                   | <ul style="list-style-type: none"><li>Tree not plugged in.</li><li>Foot pedal not pressed.</li><li>Loose electrical connection between tree sections.</li><li>Power outage.</li></ul> | <ul style="list-style-type: none"><li>Ensure the adapter is securely plugged into the outlet and the tree.</li><li>Press the foot pedal to activate the lights.</li><li>Check that all tree sections are firmly connected.</li><li>Verify other electrical devices are working.</li></ul> |
| Lights flicker or some sections are out. | <ul style="list-style-type: none"><li>Loose connection between tree sections.</li><li>Damaged wiring.</li></ul>                                                                       | <ul style="list-style-type: none"><li>Ensure all tree sections are securely connected.</li><li>Inspect the wiring for any visible damage. If damaged, discontinue use and contact customer support.</li></ul>                                                                             |
| Foot pedal not responding.               | <ul style="list-style-type: none"><li>Foot pedal connection loose.</li><li>Foot pedal malfunction.</li></ul>                                                                          | <ul style="list-style-type: none"><li>Check the connection of the foot pedal to the tree's power cord.</li><li>If issues persist, contact customer support.</li></ul>                                                                                                                     |

## SPECIFICATIONS

|                    |                                             |
|--------------------|---------------------------------------------|
| Brand              | Haute Decor                                 |
| Model Numbers      | JT-DC300V0700-G1, EFW524015951-T-01         |
| Product Dimensions | 50"D x 50"W x 90"H (7.5 Ft. Tall)           |
| Tree Type          | PE Fir                                      |
| Material           | Polyvinyl Chloride                          |
| Item Weight        | 30 Pounds                                   |
| Tip Count          | 2510                                        |
| Built-in Lights    | Yes, 2200 LED Cluster Lights                |
| Light Functions    | 8 Different Light Settings (Color Changing) |
| Control Method     | Foot Pedal Controller                       |
| Base Type          | Folding Metal Stand                         |
| Recommended Use    | Indoor Christmas Decor                      |
| Manufacturer       | CHANGZHOU JUTAI ELECTRONIC CO., LTD.        |

## WARRANTY AND SUPPORT

For specific warranty information regarding your Haute Decor Queensbury Christmas Tree, please refer to

the documentation included with your purchase or contact Haute Decor customer support directly. If you require further assistance or have questions not covered in this manual, please visit the official Haute Decor website or contact their customer service department.

**Haute Decor Customer Service:** Please refer to your purchase receipt or the brand's official website for current contact details.