

WINFLIKE VSQS1559

WINFLIKE VSQS1559 Remote Control Instruction Manual

Brand: WINFLIKE | Model: VSQS1559

INTRODUCTION

This manual provides instructions for the WINFLIKE VSQS1559 replacement remote control. This remote is designed to function as a direct replacement for original Panasonic remote models, offering seamless operation without the need for complex programming or pairing. It is compatible with various Panasonic VCR models including PV8450U, PV8450, PV8451K, PV8451, PV8550, PV8453, and VHQ860.

SETUP

Battery Installation

The VSQS1559 remote control requires two AAA batteries for operation. Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or outwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

No programming or pairing is required after battery installation; the remote is ready for immediate use with compatible devices.

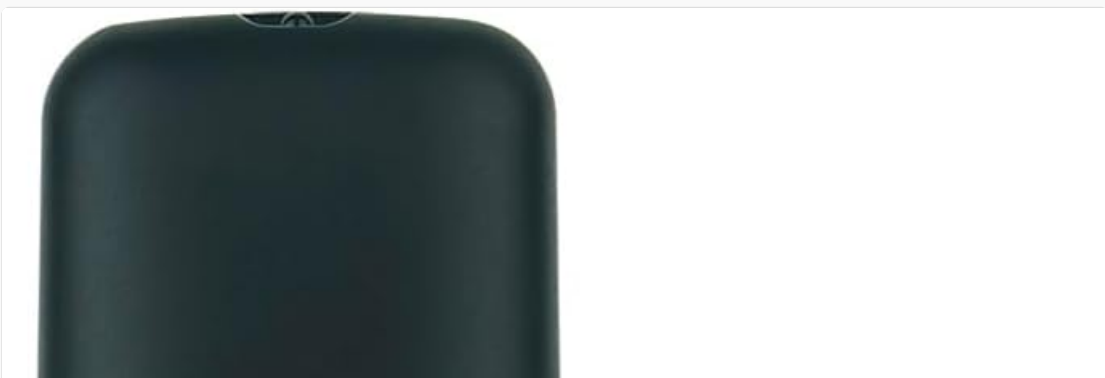




Image: Rear view of the remote control with the battery cover removed, illustrating the correct orientation for AAA battery insertion.

OPERATING INSTRUCTIONS

The VSQS1559 remote control provides all essential functions for your compatible Panasonic VCR. The ergonomic design ensures comfortable handling and easy access to all buttons.



Image: Front view of the WINFLIKE VSQS1559 remote control, highlighting the button layout.

Key Functions:

- **POWER:** Turns the connected device on or off.
- **INPUT:** Selects the input source.
- **VCR / TV:** Toggles between VCR and TV control modes.
- **PLAY:** Starts playback of a tape.
- **PAUSE:** Pauses playback.
- **STOP:** Stops playback or recording.
- **REW (Rewind):** Rewinds the tape.
- **FF (Fast Forward):** Fast forwards the tape.

- **REC / TIME:** Initiates recording or accesses time-related functions.
- **CH (Channel) Up/Down:** Changes channels.
- **VOL (Volume) Up/Down:** Adjusts volume.
- **Number Buttons (0-9, 100):** Direct channel selection.
- **DISPLAY / ENTER:** Displays information or confirms selections.
- **INDEX / SPEED:** Accesses index functions or adjusts playback speed.

Point the remote control directly at the infrared receiver on your Panasonic VCR for optimal performance.

MAINTENANCE

Battery Replacement

Replace batteries when the remote control's response becomes sluggish or stops working. Always replace both AAA batteries at the same time with new ones. Do not mix old and new batteries, or different types of batteries.

Cleaning

To clean the remote control, wipe it with a soft, dry cloth. For stubborn dirt, lightly dampen the cloth with water. Avoid using harsh chemicals, abrasive cleaners, or excessive moisture, as these can damage the remote's surface or internal components.

TROUBLESHOOTING

- **Remote not responding:**
 - Ensure the remote is pointed directly at the device's sensor.
 - Check if there are any obstructions between the remote and the device.
 - Verify that the batteries are installed correctly with the correct polarity.
 - Replace the batteries with fresh AAA batteries.
- **Specific functions not working:**
 - Ensure the remote is in the correct mode (e.g., VCR mode for VCR functions).
 - Confirm that your device model is listed as compatible.

If issues persist after following these steps, please refer to the support section.

SPECIFICATIONS



19.2 cm / 7.56 in



Image: Front view of the remote control displaying its approximate dimensions.

Feature	Detail
Model Number	VSQS1559
Brand	WINFLIKE
Color	Black
Battery Type	2 x AAA batteries (not included)
Compatibility	Panasonic PV8450U, PV8450, PV8451K, PV8451, PV8550, PV8453, VHQ860
Dimensions (Approx.)	Length: 19.2 cm (7.56 in), Width: 4.7 cm (1.85 in)

SUPPORT

If you encounter any problems with your WINFLIKE VSQS1559 remote control or have questions not covered in this manual, please do not hesitate to contact our customer support. We are committed to providing a satisfactory response within 24 hours to resolve any issues you may experience.

For assistance, please refer to the contact information provided with your purchase or visit the WINFLIKE official support channels.