

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [WINFLIKE](#) /

› [WINFLIKE ERF6A80 Voice Remote Control User Manual](#)

## WINFLIKE ERF6A80

# User Manual

## WINFLIKE ERF6A80 VOICE REMOTE CONTROL

Model: ERF6A80

### Introduction

This manual provides instructions for the WINFLIKE ERF6A80 Voice Remote Control, designed as a replacement for Hisense Google Smart TVs, including U9N, 98UX, and U8 Series ULED 4K LED TVs. This remote features voice control, backlight, buzzer seek function, and gravity sensing for enhanced usability.

### Package Contents

- 1x WINFLIKE ERF6A80 Voice Remote Control

### Setup

#### 1. Battery Installation

The remote control requires 2 AAA batteries (not included). Follow these steps to install them:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.





Image: Rear view of the remote control, illustrating the battery compartment and proper battery orientation.

## 2. Initial Pairing (Bluetooth)

While the remote will function with basic infrared commands upon battery installation, to utilize advanced features like voice control and extended range, it must be paired via Bluetooth with your Hisense Smart TV.

1. Ensure your TV is powered on.
2. Navigate to your TV's **Settings** menu.
3. Select **Remotes & Accessories** or a similar option.
4. Choose **Add accessory** or **Pair new device**.
5. Follow the on-screen prompts to put the remote into pairing mode. This usually involves pressing and holding specific buttons on the remote (e.g., the Back and Home buttons simultaneously) until an indicator light flashes.
6. Select "ERF6A80" or "Hisense Remote" from the list of available Bluetooth devices on your TV screen.
7. Confirm the pairing when prompted.

Once paired, the remote's full functionality, including voice commands, will be available.

## Operating Instructions

---

The ERF6A80 remote control provides intuitive access to your Hisense Smart TV's features. Below is an overview of key buttons and their functions:



Image: Front view of the remote control, illustrating the complete button layout.

**Power Button:** Turns the TV on or off.

**Voice Control Button (Microphone icon):** Press and hold to activate voice commands for searching content, controlling playback, or asking questions.

**Navigation Pad (OK, Up, Down, Left, Right):** Used to navigate menus and select items.

**Back Button (Left arrow icon):** Returns to the previous screen or menu.

**Home Button (House icon):** Returns to the TV's home screen.

**Volume Up/Down (+VOL -):** Adjusts the TV's volume.

**Mute Button (Speaker with cross icon):** Mutes or unmutes the TV audio.

**Channel Up/Down (CH<sup>^</sup> CH<sub>v</sub>):** Changes TV channels.

**Quick Access Buttons:** Dedicated buttons for popular streaming services like Netflix, YouTube, Prime Video, Disney+, and Tubi.

**Settings Button (Gear icon):** Accesses the TV's settings menu.

**Menu Button:** Opens the TV's main menu.

**Play/Pause Button:** Controls media playback.

**123 Button:** Accesses the numeric keypad or input options.

## Backlight Feature

The remote features a backlight for improved visibility in low-light conditions. The backlight automatically activates when the remote is moved or a button is pressed, thanks to its gravity sensing capability.

## Buzzer Seek Function

If your TV supports it, the remote may have a buzzer seek function. This allows you to locate the remote by triggering an audible sound from it via your TV's settings or a dedicated button on the TV itself.

## Maintenance

- **Cleaning:** Use a soft, dry cloth to clean the remote control. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's performance degrades or it stops responding. Always use new alkaline AAA batteries.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.
- **Avoid Drops:** Protect the remote from physical impact, as drops can damage internal components.

## Troubleshooting

Problem	Possible Cause / Solution
Remote not responding (basic functions)	<ul style="list-style-type: none"><li>◦ Batteries are dead or inserted incorrectly. Replace batteries and check polarity.</li><li>◦ Obstruction between remote and TV's IR receiver. Ensure clear line of sight.</li></ul>

Problem	Possible Cause / Solution
Voice control not working	<ul style="list-style-type: none"> <li>Remote is not paired via Bluetooth. Follow "Initial Pairing" steps.</li> <li>Microphone is blocked or dirty. Clean the microphone opening.</li> <li>TV's internet connection is unstable (voice commands often require internet).</li> </ul>
Backlight not activating	<ul style="list-style-type: none"> <li>Batteries are low. Replace batteries.</li> <li>Sensor might be obstructed. Ensure the remote is clean.</li> </ul>
Remote loses connection frequently	<ul style="list-style-type: none"> <li>Interference from other wireless devices.</li> <li>Try re-pairing the remote with the TV.</li> <li>Ensure TV's Bluetooth is enabled and functioning correctly.</li> </ul>

## Specifications

**Model:** ERF6A80

**Brand:** WINFLIKE

**Dimensions:** 6 x 2 x 0.5 inches (approximately 15.24 x 5.08 x 1.27 cm)

**Item Weight:** 1 ounce (approximately 28.35 grams)

**Power Source:** 2 x AAA Batteries (not included)

**Special Features:** Ergonomic, Lightweight, Voice Search, Backlight, Buzzer Seek Function, Gravity Sensing

**Compatible Devices:** Hisense Google Smart TV U9N, 98UX, U8 Series ULED 4K LED TV models (e.g., 100U88N, 100U8N, 43A7N, 50A7N, 55A7N, 55U6N, 55U7N, 55U88N, 55U8N, 65A7N, 65U6N, 65U7N, 65U88N, 65U8N, 75A7N, 75U6N, 75U7N, 75U88N, 75U8N, 75U9N, 85A7N, 85U6N, 85U88N, 85U8N, 85U9N)

## Warranty & Support

For warranty information or technical support, please refer to the WINFLIKE official website or contact your retailer. Keep your purchase receipt for warranty claims.