

Omethey WY-G2SQ-138D

Omethey Quick Access 3-5 Rifle & Pistol Digital Gun Safe Instruction Manual

Model: WY-G2SQ-138D

1. IMPORTANT SAFETY INFORMATION


Please read this manual carefully before operating your Omethey Digital Gun Safe. Failure to follow these instructions may result in injury or damage to the product.

- Always keep the emergency keys in a secure location away from the safe and out of reach of children.
- Do not store the emergency battery box inside the safe.
- Ensure the safe is securely mounted to a wall or floor to prevent unauthorized removal.
- Keep the safe locked at all times when not in use.

2. PACKAGE CONTENTS

Verify that all components are present before beginning installation.

- Omethey Digital Gun Safe (1)
- Instruction Manual (1)
- Emergency Keys (2)
- Handle Spokes (3)
- Emergency Battery Box (1)
- Expansion Screws (5)

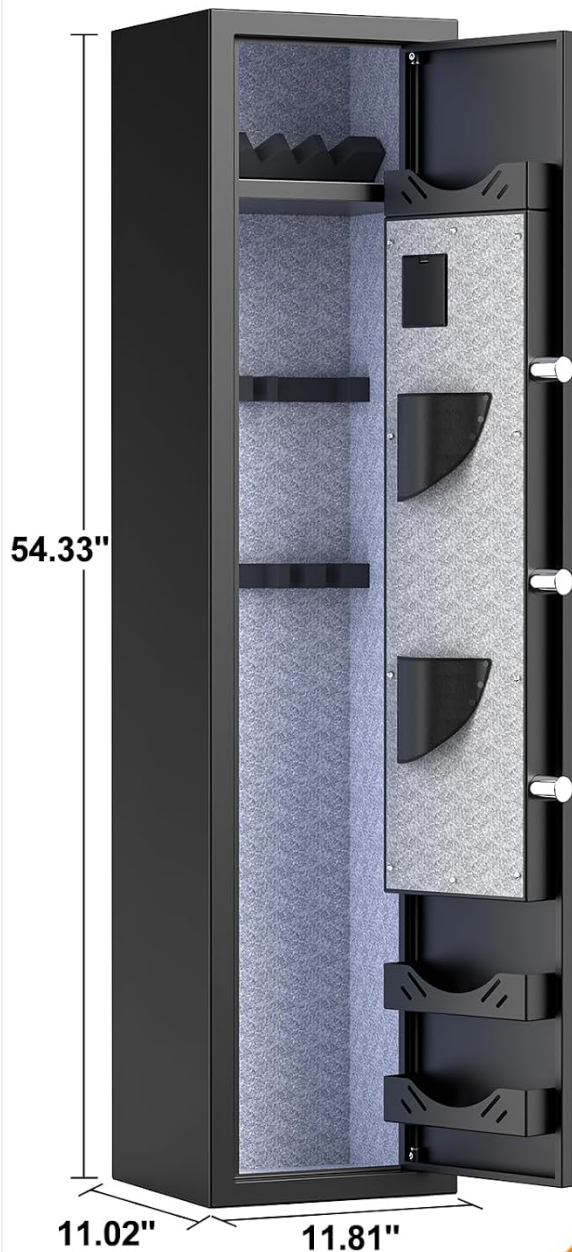

Omethey

LARGE GUN SAFE

HEIGHT: 54.33"

WIDTH: 11.81"

DEPTH: 11.02"



Instruction Manual*1



 
Emergency key*2



Expansion screws*5



Handle Spokes*3

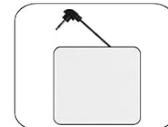

Emergency battery box*1

Figure 2.1: Included Components

3. SETUP

3.1 Handle Spokes Installation

To install the handle spokes, locate them in the accessory bag and insert them into the knob on the safe door. Turn clockwise to secure.

Your browser does not support the video tag.

Video 3.1: Installing the Handle Spokes

Applicable scenarios

- Living room
- Bedroom
- Home office
- Garage




Figure 3.1: Handle Spokes Installation

3.2 Mounting the Safe

The safe can be securely mounted to a wall, floor, or both using the provided expansion screws. There are 5 pre-drilled holes on the back and bottom of the safe for this purpose.

1. Choose a suitable location for the safe.
2. Mark the drilling points on the wall or floor using the pre-drilled holes as a template.
3. Drill pilot holes at the marked locations.
4. Align the safe with the drilled holes and insert the expansion screws.
5. Tighten the screws securely to anchor the safe.

 LCD Touch Screen

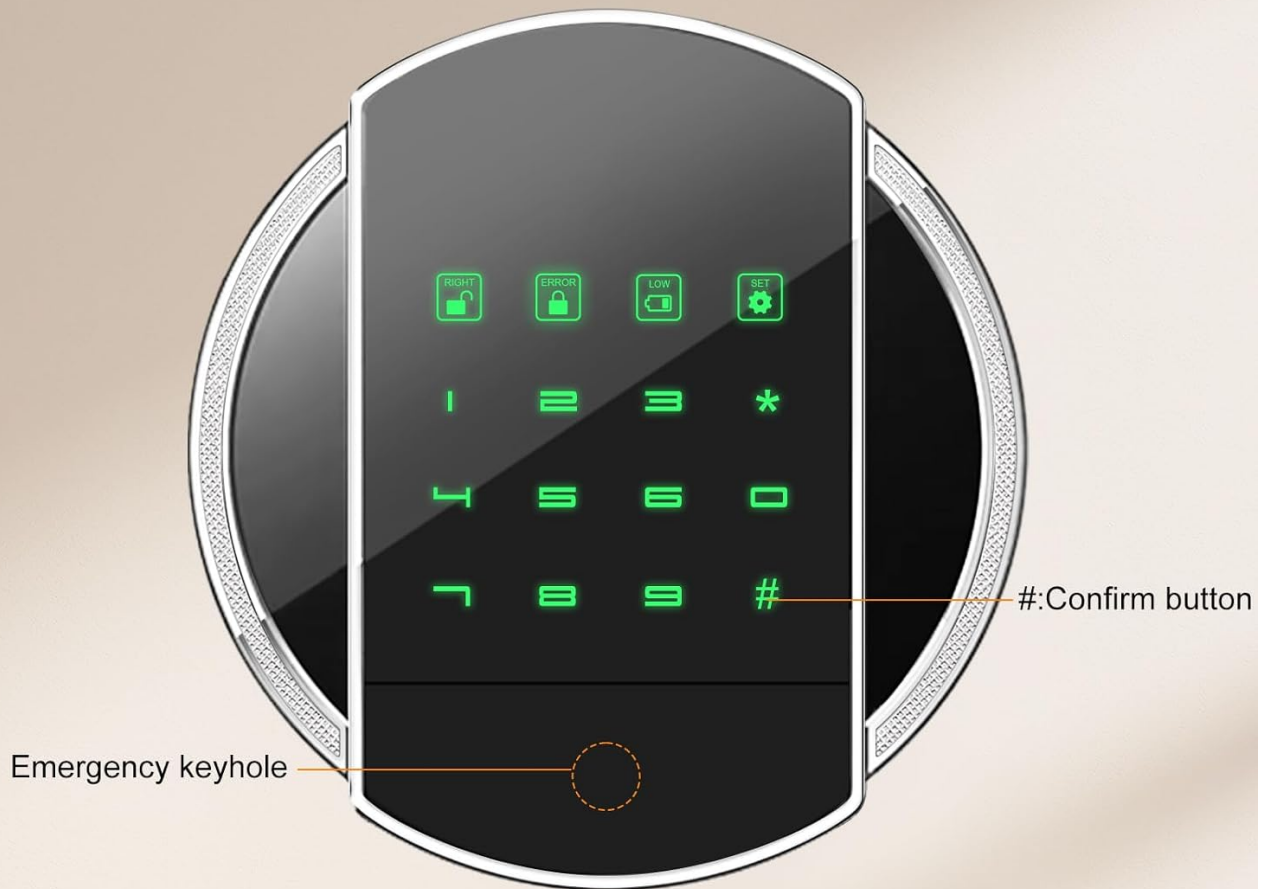

Activate button/Confirm button(Press # to activate the panel before using the password to unlock.)

Figure 3.2: Mounting Points and Expansion Screws

4. OPERATING INSTRUCTIONS

4.1 First Opening or Emergency Opening

For the first use, or if you forget your password or the batteries are dead, use the emergency key to open the safe.

1. Locate the emergency keyhole, usually hidden behind a cover on the keypad.
2. Insert the emergency key and turn it.
3. Simultaneously turn the handle to open the safe door.

Your browser does not support the video tag.

Video 4.1: First Opening or Emergency Opening with Key

4.2 Using the Emergency Battery Box

If the safe batteries are depleted, you can use the emergency battery box to power the keypad temporarily.

1. Connect the emergency battery box to the external power port on the keypad.
2. Press '#' to activate the panel.
3. Enter your correct password.
4. Turn the handle to open the safe.

Your browser does not support the video tag.

Video 4.2: Opening with Emergency Battery Box

4.3 Setting Your Code

The safe supports setting a primary and secondary code.

First Code Setting:

1. With the safe door open, press the red setting button located on the inside of the door for one second.
2. On the keypad, enter your desired new code (4-8 digits).
3. Enter the new code again to confirm.
4. Press '#' to finalize the setting.

Second Code Setting:

1. Press '#00' on the keypad.
2. Press the red setting button on the inside of the door for one second.
3. On the keypad, enter your desired new code (4-8 digits).
4. Enter the new code again to confirm.
5. Press '#' to finalize the setting.

Your browser does not support the video tag.

Video 4.3: Setting the Safe Code



Figure 4.1: Usage of the Settings Button

4.4 Dual Alarm System

The safe is equipped with a dual alarm system for enhanced security:

- **Vibration Alarm:** Activated if the safe is shaken or moved. To activate, press '*' then '9'.
- **Incorrect Code Alarm:** Activated after 3 incorrect password attempts.

When an alarm is triggered, the buzzer will sound for 1 minute. To stop the alarm, enter the correct code.

Your browser does not support the video tag.

Video 4.4: Dual Alarm System Demonstration



Figure 4.2: Dual Alarm System

4.5 Silent Mode

To operate the safe without audible keypress sounds, activate silent mode.

- **Turn on mute function:** Press '*' then '1'.
- **Turn off mute function:** Press '*' then '1' again.

Your browser does not support the video tag.

Video 4.5: Activating/Deactivating Silent Mode



Figure 4.3: Silent Mode Feature

5. INTERNAL CONFIGURATION

The safe offers flexible storage options:

- **Removable Shelf:** A shelf is included for organizing smaller items. It can be removed to accommodate longer items.
- **Adjustable Pistol Rack:** Store up to 5 pistols.
- **Adjustable Gun Slots:** Two adjustable gun slots can be configured to fit various rifle heights, accommodating up to 5 long guns.
- **Pistol Pouches:** Two pistol pouches are located on the inside of the door for quick access and protection.
- **Metal Storage Box:** A small metal storage box is included for additional secure storage.




Solid locking bolts

- It can effectively resist lock picking and other destructive attacks, providing enhanced security

Pistol pouches

- It allows for separate storage of handguns, making them easy to access, while also protecting them from scratches.

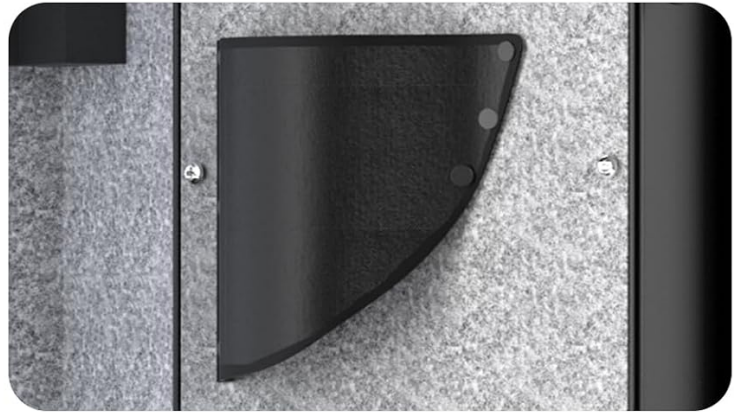

Metal storage box

- It can serve as a storage space for small items and ammunition, functioning as a separate storage area

Figure 5.1: Internal Features (Pistol Pouches, Storage Box)

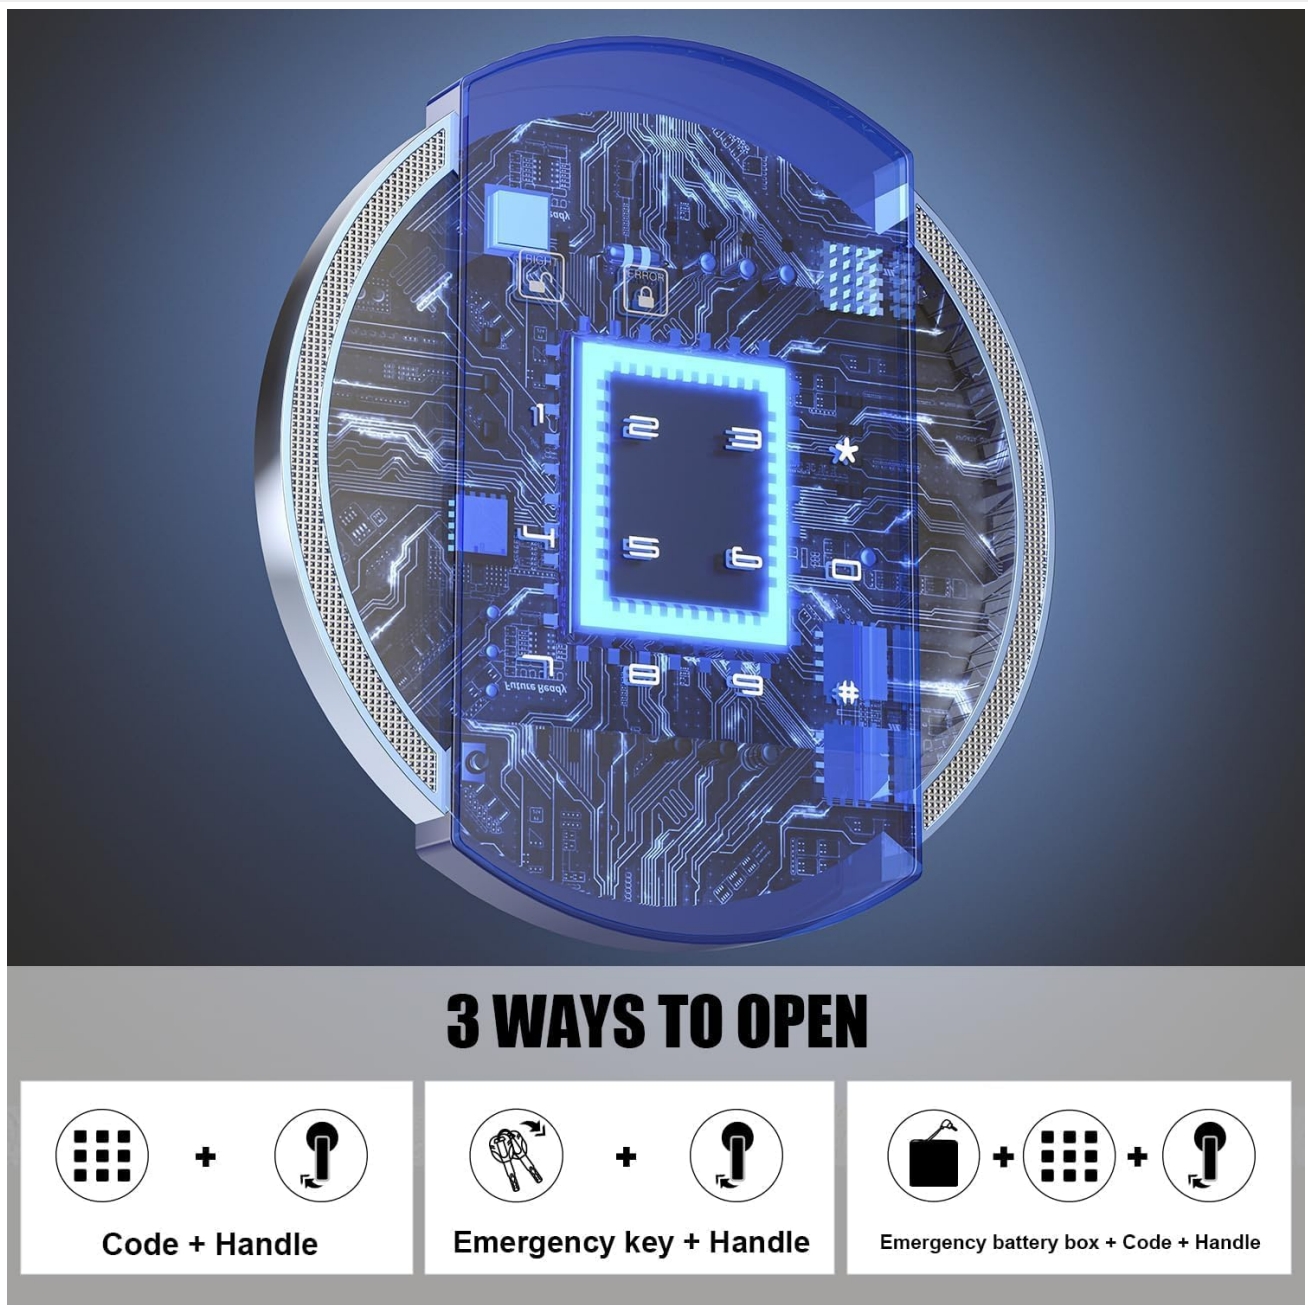 


Figure 5.2: Removable Shelf

6. MAINTENANCE

6.1 Battery Replacement

The digital keypad requires 4 AA batteries (not included). When the battery indicator shows low power, replace all batteries promptly to ensure continuous operation.

1. Open the battery compartment on the back of the keypad.
2. Remove the old batteries.
3. Insert 4 new AA batteries, ensuring correct polarity.
4. Close the battery compartment.

6.2 Cleaning

Clean the exterior of the safe with a soft, damp cloth. Avoid abrasive cleaners or solvents that could damage the finish or electronic components.

7. TROUBLESHOOTING

- **Safe does not open with code:**
 - a. Ensure you are pressing '#' to activate the panel before entering the code.
 - b. Verify the code is correct. Try resetting the code if unsure (refer to Section 4.3).
 - c. Check battery level. Replace batteries or use the emergency battery box.
- **Alarm triggers unexpectedly:**
 - a. The vibration alarm may be active. Ensure the safe is stable and not subjected to movement.
 - b. If the incorrect code alarm triggers, ensure no one is attempting to open the safe with wrong codes.
- **Keypad is unresponsive:**
 - a. Batteries may be dead. Use the emergency battery box or emergency key to open the safe and replace the batteries.

8. SPECIFICATIONS

Brand	Omethey
Model Number	WY-G2SQ-138D
Product Dimensions	11.02"D x 11.81"W x 54.33"H
Item Weight	76.8 pounds
Lock Type	Electronic Combination Lock, Key
Color	Black
Capacity	3.65 Cubic Feet
Material	Low Carbon Steel
Mounting Type	Wall Mount
Alarm System	Vibration, Audible
Batteries Required	Yes (4x AA, not included)

9. WARRANTY AND SUPPORT

Omethey provides after-sales service and key-matching service for this product. If you have any questions or require assistance with your safe, please contact Omethey customer support.

For further support, please refer to the contact information provided with your purchase or visit the official Omethey website.

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question