

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Bosch](#) /
- › [Bosch Serie 8 SMS8TCI04E Dishwasher User Manual](#)

Bosch SMS8TCI04E

Bosch Serie 8 SMS8TCI04E Dishwasher User Manual

Model: SMS8TCI04E | Brand: Bosch

[Introduction](#) [Safety Information](#) [Setup & Installation](#) [Operating Instructions](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Support](#)

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Bosch Serie 8 SMS8TCI04E freestanding dishwasher. Please read these instructions carefully before using the appliance for the first time. The Bosch SMS8TCI04E dishwasher features advanced technologies such as PerfectDry for impeccable drying results, Home Connect for remote control and smart features, and Max Flex Pro baskets for flexible loading. It is designed for reduced energy consumption and includes remote diagnostics capabilities.



Figure 1: Bosch Serie 8 SMS8TCI04E Dishwasher in a kitchen setting.

3. SETUP & INSTALLATION

The Bosch SMS8TCI04E is a freestanding dishwasher. Ensure proper placement and connection according to the provided installation guide.

3.1 Dimensions

The product dimensions are 60P x 60l x 84H cm (Depth x Width x Height). Refer to the detailed diagram for specific measurements and connection points.




Bosch


SMS8TCI04E



54 kWh / 

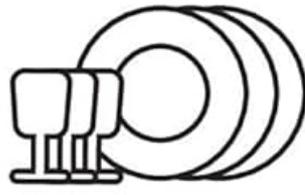

14 x

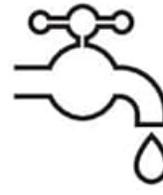

9,5 L



4:55



A **B** CD

2019/2017

Figure 3: Dishwasher dimensions and connection points (all measurements in cm).

3.2 Electrical and Water Connections

Ensure that the electrical outlet and water supply connections are correctly installed and meet local regulations. The appliance requires a standard power outlet and a cold water connection. The AquaStop system is integrated for water safety.

4. OPERATING INSTRUCTIONS

4.1 Loading the Dishwasher

The Max Flex Pro baskets offer flexible loading options for various dishware. Arrange items to allow water to reach all surfaces. The cutlery drawer provides dedicated space for utensils.



Figure 4: Max Flex Pro baskets for flexible loading of dishes.

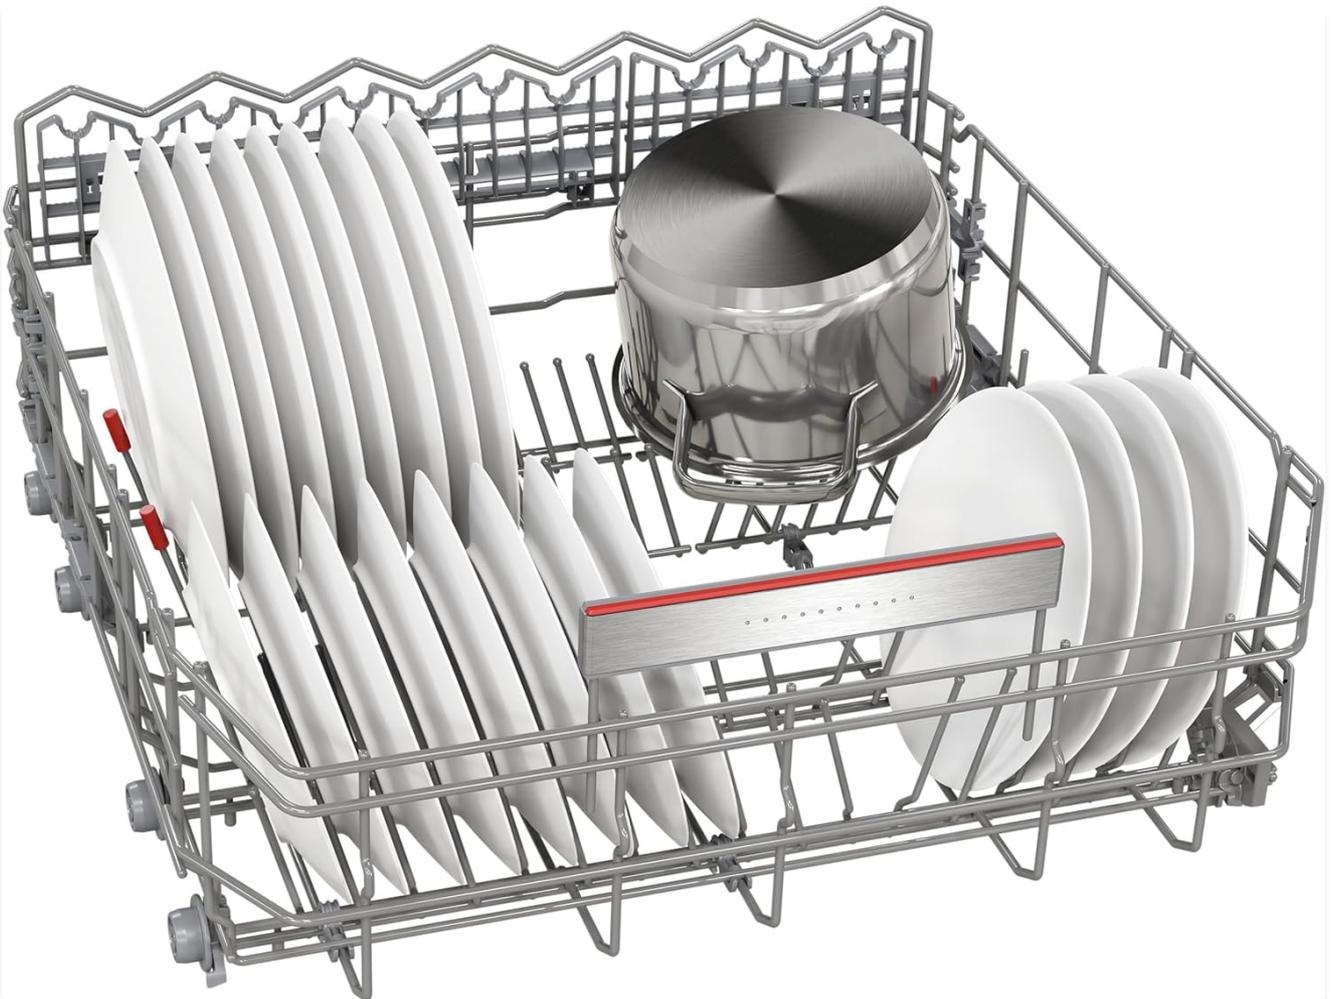


Figure 5: Example of a loaded lower basket.

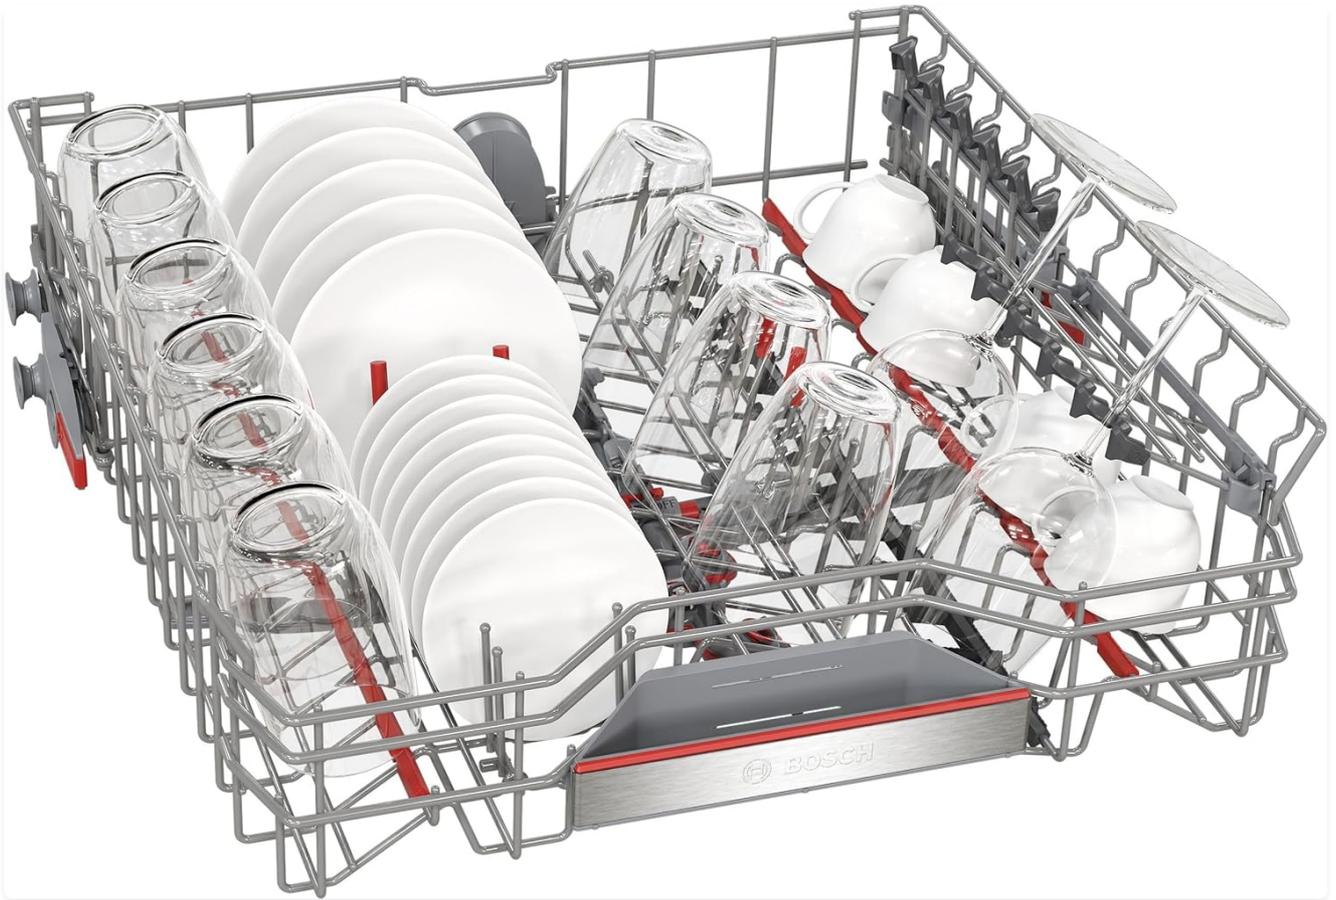


Figure 6: Example of a loaded upper basket.



Figure 7: Dedicated cutlery drawer for optimal cleaning.

4.2 Detergent Dispensing (EcoDosage)

The EcoDosage system ensures optimal detergent dissolution for effective cleaning results. Place the detergent tablet or powder in the designated dispenser.



AquaStop

Niente più perdite di acqua dalla lavastoviglie.

L'immagine mostra la funzione in un esempio di prodotto.

Figure 8: EcoDosage system for optimal detergent dissolution.

4.3 PerfectDry Technology

PerfectDry utilizes Zeolite, a natural mineral, to absorb humidity from the air and transform it into warm air. This ensures impeccable drying results, even for difficult-to-dry items like plastics, while reducing energy consumption.



Intelligent Programme Personalizza il programma di lavaggio.

L'immagine mostra la funzione in un esempio di prodotto.

Figure 9: PerfectDry technology ensures excellent drying results.

Your browser does not support the video tag.

Video 1: Demonstration of PerfectDry technology, showing how Zeolite absorbs humidity and releases warm air for superior drying, even on plastic items.

4.4 Home Connect Features

The Home Connect app allows you to control your dishwasher remotely, access digital instruction manuals, and receive useful usage tips directly from your smartphone.

- **Smart Start:** Optimizes energy consumption by automatically setting the wash start time based on renewable energy availability or lower electricity tariffs.
- **Washing Assistant:** Answer a few simple questions via the Home Connect app, and the system will suggest the most suitable program for your load.
- **Remote Diagnostics:** Access diagnostic information and support remotely.
- **EmotionLight:** Two LED lights illuminate the dishwasher interior when loading or unloading, enhancing

visibility and aesthetics.



Extra Clean Zone

Lavaggio intensivo per lo sporco più ostinato.

L'immagine mostra la funzione in un esempio di prodotto.

Figure 10: Home Connect app interface for smart control and monitoring.


Your browser does not support the video tag.

Video 2: Overview of the Smart Start feature via Home Connect, demonstrating how the dishwasher can be programmed to run during optimal energy times.

4.5 Extra Clean Zone

The Extra Clean Zone in the upper basket provides intensive cleaning for heavily soiled dishes, ensuring thorough results.

Dimensioni in mm

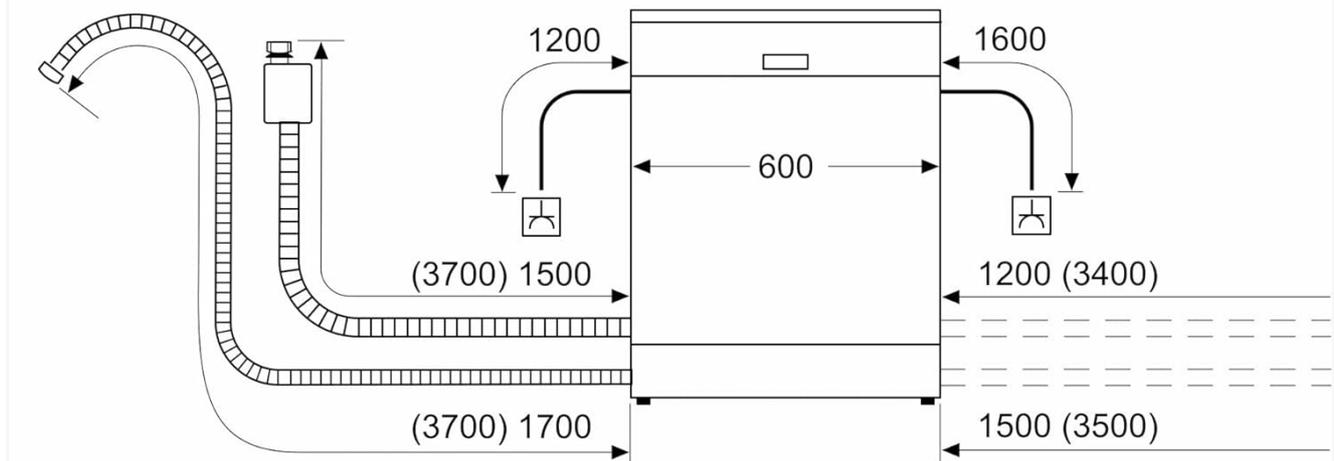

⏏ Presa di corrente
() Valori con prolunga

Figure 11: Extra Clean Zone for stubborn dirt.

5. MAINTENANCE & CARE

Regular maintenance ensures the longevity and optimal performance of your dishwasher.

- **Cleaning the Filters:** Regularly check and clean the filter system at the bottom of the dishwasher to prevent blockages and ensure efficient cleaning.
- **Cleaning the Spray Arms:** Ensure the spray arm nozzles are not blocked. Remove and clean them if necessary.
- **Salt and Rinse Aid:** Monitor the salt and rinse aid indicators and refill as needed.
- **Exterior Cleaning:** Wipe the exterior surfaces with a soft, damp cloth. For stainless steel surfaces, use a specialized cleaner to avoid streaks.



Figure 12: Dishwasher interior showing the spray arm and filter system.

6. TROUBLESHOOTING

Before contacting customer service, refer to the following common issues and solutions:

Problem	Possible Cause	Solution
Dishes not clean	Improper loading, clogged spray arms, insufficient detergent.	Reload dishes correctly, clean spray arm nozzles, check detergent dispenser.
Water remaining in dishwasher	Clogged filter, blocked drain hose.	Clean the filter, check and clear the drain hose.
Dishwasher not starting	Door not closed properly, power supply issue, child safety lock engaged.	Ensure door is latched, check power, disengage child safety lock.
Poor drying results	Insufficient rinse aid, incorrect program selection, items not suitable for dishwasher.	Refill rinse aid, select a program with PerfectDry, ensure items are dishwasher safe.

7. SPECIFICATIONS

Key technical specifications for the Bosch Serie 8 SMS8TCI04E dishwasher:

Feature	Value
Brand	Bosch

Feature	Value
Model	SMS8TCI04E
Installation Type	Freestanding
Product Dimensions (DxWxH)	60P x 60I x 84H cm
Capacity	14 Place Settings
Special Feature	Child Safety Lock, Home Connect, PerfectDry
Color	Steel
Control Type	Touch
Material	Stainless Steel
Noise Level	42 Decibels
Energy Efficiency Class	A (New EU Label)
Energy Consumption (per 100 cycles)	54 kWh
Water Consumption (per cycle)	9.5 Liters
Eco Program Duration	4:55 hours

Scheda informativa del prodotto

REGOLAMENTO DELEGATO (UE) 2019/2017 DELLA COMMISSIONE

Nome o marchio del fornitore ^(a) ^(b) :		Bosch		
Indirizzo del fornitore ^(a) ^(b) :		BSH Hausgeräte GmbH, Carl-Wery-Str. 34, 81739 Munich, Germany		
Identificativo del modello ^(a) ^(b) :		SMS8TCI04E		
Parametri generali del prodotto:				
Parametro	Valore	Parametro	Valore	
Capacità nominale ^(a) ^(b) (ps)	14	Dimensioni in cm ^(a) ^(b)	Altezza	85
			Larghezza	60
			Profondità	60
IEE ^(a)	31.9	Classe di efficienza energetica ^(a)	A ^(a)	
Indice di efficienza di lavaggio ^(a)	1.121	Indice di efficienza di asciugatura ^(a)	1.061	
Consumo di energia in kWh [per ciclo], con il programma eco e l'utilizzo di acqua fredda. Il consumo effettivo di energia dipende dalle modalità d'uso dell'apparecchio.	0.543	Consumo di acqua in litri [per ciclo] con il programma eco. Il consumo effettivo di acqua dipende dalle modalità d'uso dell'apparecchio e dalla durezza dell'acqua.	9.5	
Durata del programma ^(a) (h:min)	4:55	Tipo	A libera installazione	
Emissioni di rumore aereo ^(a) (dB(A) re 1 pW)	42	Classi di emissione di rumore aereo ^(a)	B ^(a)	
Modo spento (W) (se del caso)	-	Modo stand-by (W) (se del caso)	0.50	
Avvio ritardato (W) (se del caso)	4.00	Modo stand-by in rete (W) (se del caso)	2.00	
Durata minima della garanzia offerta dal fornitore ^(a) ^(b) :			24 mesi	
Informazioni supplementari ^(a) ^(b) :				
Link al sito web del fornitore dove si trovano le informazioni di cui all'allegato II, punto 6, del regolamento (UE) 2019/2022 della Commissione: www.bosch-home.com/energylabel				

^(a) Questa voce non è considerata pertinente ai fini dell'articolo 2, paragrafo 6, del regolamento (UE) 2017/1369.

^(b) Le modifiche apportate a questa voce non sono considerate pertinenti ai fini dell'articolo 4, paragrafo 4, del regolamento (UE) 2017/1369.

^(c) Se la banca dati dei prodotti genera automaticamente il contenuto definitivo di questa cella, il fornitore non inserisce alcun dato.

^(d) Per il programma eco.

Figure 13: EU Energy Label for the Bosch SMS8TCI04E dishwasher.

Figure 14: Detailed technical parameters and regulatory information.

8. WARRANTY & SUPPORT

For detailed warranty information, service requests, or to download the full digital manual, please visit the official Bosch website or the EPREL database.

Official EPREL Product Information: [EPREL Database Link](#)

For further assistance, contact Bosch customer support.