

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Bosch](#) /
- › [Bosch SMS4EVW08E Series 4 Freestanding Dishwasher User Manual](#)

Bosch SMS4EVW08E

Bosch SMS4EVW08E Series 4 Freestanding Dishwasher User Manual

Model: SMS4EVW08E

1. INTRODUCTION AND OVERVIEW

This manual provides essential information for the safe and efficient operation, installation, and maintenance of your Bosch SMS4EVW08E Series 4 Freestanding Dishwasher. Please read these instructions carefully before using the appliance for the first time.

The Bosch SMS4EVW08E is a 60 cm freestanding dishwasher designed for optimal cleaning performance and user convenience. Key features include Home Connect for remote control and diagnostics, EfficientDry for enhanced drying results, and a Washing Assistant for program selection.



Image: The Bosch SMS4EVW08E Series 4 freestanding dishwasher, white, positioned in a modern kitchen setting next to a sink and wooden countertop.

2. SAFETY INFORMATION

Always adhere to the following safety guidelines to prevent personal injury or damage to the appliance.

- **Electrical Safety:** Ensure the dishwasher is properly grounded and connected to a suitable power supply as specified in the technical data. Do not use extension cords.
- **Water Connections:** Connect the water inlet and outlet hoses securely to prevent leaks. Do not reuse old hoses.
- **Child Safety:** Keep children away from the dishwasher, especially when it is operating or when the door is open, as residual detergent may be present.
- **Detergent and Rinse Aid:** Store detergents and rinse aids out of reach of children. Use only dishwasher-specific products.
- **Sharp Objects:** Load sharp items (knives, forks) with the sharp end pointing downwards in the cutlery basket or horizontally in the cutlery drawer to avoid injury.
- **Appliance Stability:** Ensure the freestanding appliance is stable and level to prevent tipping.

3. SETUP AND INSTALLATION

The Bosch SMS4EWW08E is a freestanding model, designed for easy placement in your kitchen. Follow these steps for proper installation:

1. **Unpacking:** Carefully remove all packaging materials. Inspect the dishwasher for any transport damage.
2. **Positioning:** Place the dishwasher on a firm, level surface. Adjust the feet to ensure stability and proper leveling. The dimensions are approximately 60D x 60B x 84H centimeters.
3. **Water Supply Connection:** Connect the water inlet hose to a cold water tap with a 3/4-inch thread. Ensure the connection is tight to prevent leaks.
4. **Drainage Connection:** Connect the drain hose to a suitable drain pipe or sink trap. Ensure the hose is not kinked and is positioned at the correct height to allow proper drainage.
5. **Electrical Connection:** Plug the dishwasher into a grounded electrical outlet (240 Volt). Do not use adapters or extension cords.



Image: Rear view of the Bosch SMS4EVW08E dishwasher, illustrating the proper connection of the water inlet and drain hoses.

4. OPERATING INSTRUCTIONS

Your Bosch SMS4EVW08E dishwasher offers a range of programs and features for efficient dishwashing.

4.1. Loading the Dishwasher

Proper loading ensures optimal cleaning and drying results.

- **Cutlery Drawer:** Place cutlery individually in the top drawer to prevent nesting and ensure thorough cleaning.



Image: The top cutlery drawer of the Bosch dishwasher, showing various utensils neatly arranged for washing.

- **Upper Basket:** Ideal for glasses, cups, and small plates. The upper basket is height-adjustable (Rackmatic) to accommodate taller items in the lower basket.

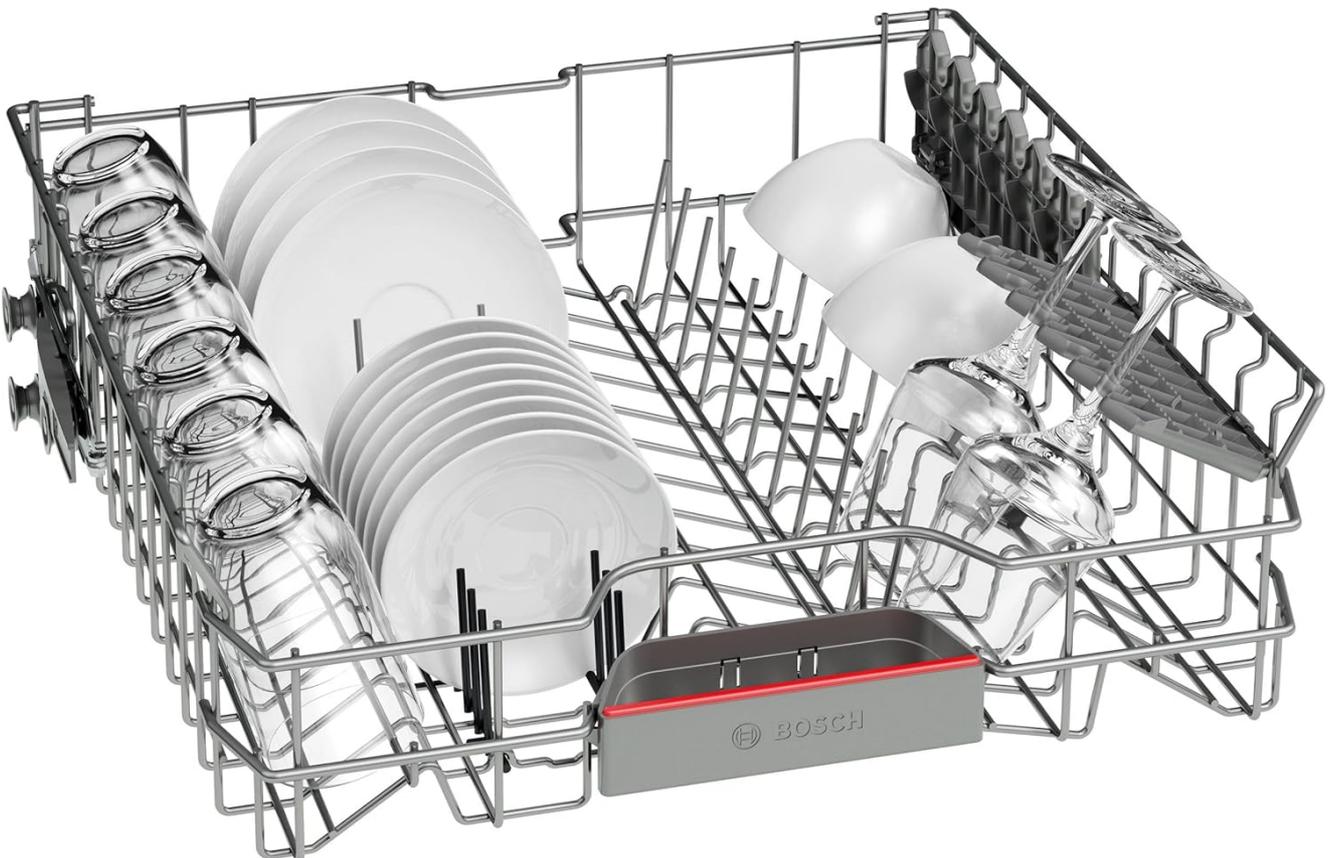


Image: The upper basket of the Bosch dishwasher, loaded with glasses, cups, and small plates, demonstrating its capacity and

arrangement.

- **Lower Basket:** Suitable for larger items such as dinner plates, pots, and pans.

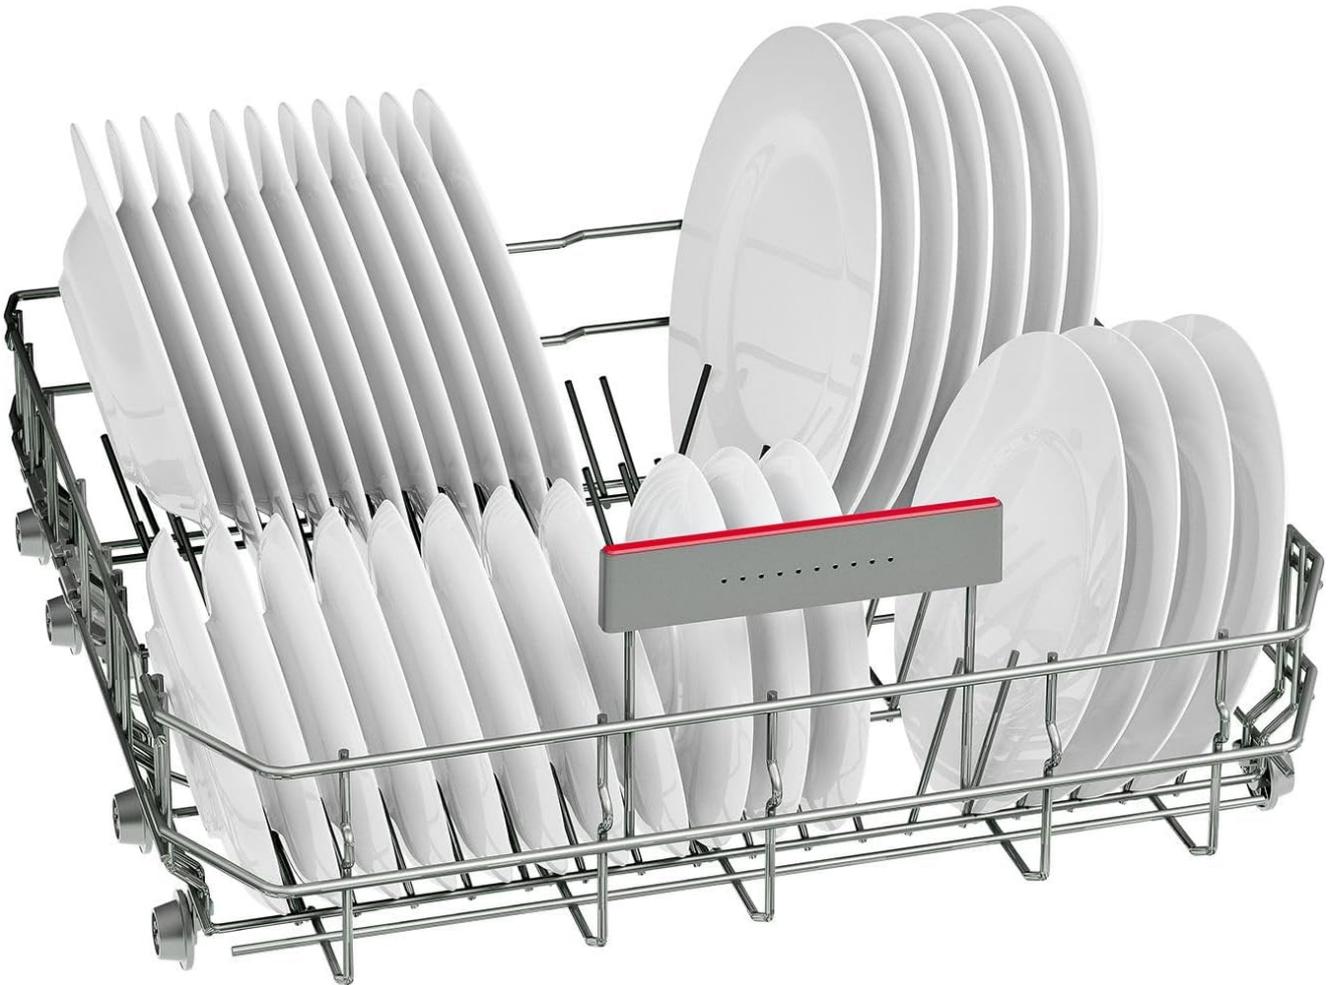


Image: The lower basket of the Bosch dishwasher, filled with dinner plates, showcasing its capacity for larger items.



Image: An interior view of the Bosch dishwasher with both the upper and lower baskets pulled out, illustrating the full loading capacity.

4.2. Adding Detergent and Rinse Aid

Open the detergent dispenser and add the recommended amount of dishwasher detergent. If using a tablet, place it in the designated compartment. Ensure the rinse aid dispenser is filled for optimal drying and shine.



Image: Close-up of the detergent dispenser in the Bosch dishwasher, showing a dishwasher tablet and the compartment for liquid rinse aid.

4.3. Program Selection and Start

Select one of the available programs using the control panel. The dishwasher offers 6 cycle options, including Eco, Automatic, Intensive, and Quick Wash. Press the 'Start' button to begin the cycle.



Image: The control panel of the Bosch SMS4EVW08E dishwasher, displaying program options and digital timer.

4.4. Special Features

- **Home Connect:** Control your dishwasher remotely, access the digital manual, and receive useful tips via the Home Connect app on your smartphone.
- **EfficientDry:** The dishwasher door automatically opens at the end of the cycle to enhance the drying process. This feature can be deactivated if desired.
- **Download Programs:** Access and download additional washing programs through the Home Connect app.
- **Washing Assistant:** Answer a few simple questions in the Home Connect app to receive recommendations for the most suitable washing program.

5. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your dishwasher.

- **Cleaning Filters:** Regularly check and clean the filter system at the bottom of the dishwasher to remove food particles and debris.
- **Cleaning Spray Arms:** Ensure the spray arm nozzles are not blocked. Remove and clean them if necessary.
- **Exterior Cleaning:** Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners.
- **Salt and Rinse Aid Refill:** Monitor the indicator lights for salt and rinse aid and refill as needed.

6. TROUBLESHOOTING

If you encounter issues with your dishwasher, refer to the following common problems and solutions. For more complex issues, consult the Home Connect app for remote diagnostics or contact customer support.

- **Dishes Not Clean:** Check filter cleanliness, ensure spray arms are not blocked, verify proper loading, and confirm sufficient detergent and rinse aid.
- **Water Not Draining:** Inspect the drain hose for kinks or blockages. Clean the filter system.

- **Dishwasher Not Starting:** Ensure the door is fully closed and latched. Check power supply and circuit breaker.
- **Unusual Noises:** Check for foreign objects in the pump area or spray arms. Ensure dishes are not obstructing rotation.

7. SPECIFICATIONS

Detailed technical specifications for the Bosch SMS4EVW08E Series 4 Dishwasher:

Feature	Specification
Brand	Bosch
Model Number	SMS4EVW08E
Installation Type	Freestanding
Dimensions (D x W x H)	60 x 60 x 84.5 cm
Weight	51.6 kg
Capacity	14 Place Settings
Noise Level	44 Decibels
Energy Consumption (per 100 cycles)	65 kWh
Water Consumption (per cycle)	9.0 Liters
Number of Programs	6
Voltage	240 Volt
Interior Material	Stainless Steel
Special Features	Home Connect, EfficientDry, Download Programs, Washing Assistant
Color	White

7.1. Energy Label

 


Bosch

SMS4EVW08E



65 kWh / 100



14 x



9,0 L



3:55



44 dB
A B C D

2019/2017

Image: The EU Energy Label for the Bosch SMS4EVW08E dishwasher, showing energy efficiency class B, 65 kWh/100 cycles, 14 place settings, 9.0 L water, 44 dB noise, and a program duration of 3:55.

For more details, refer to the official EPREL database: <https://eprel.ec.europa.eu/qr/1935622>

8. WARRANTY

Your Bosch SMS4EVW08E dishwasher comes with a minimum **24-month manufacturer's guarantee**. Please retain your proof of purchase for warranty claims. For specific terms and conditions, refer to the warranty documentation provided with your appliance or contact Bosch customer support.

9. SUPPORT

For technical assistance, spare parts, or further inquiries, please contact Bosch customer support:

- **Email:** bosch-infoteam@bshg.com
- **Phone:** +49 89 69 339 339
- **Website:** www.bsh-group.com

You can also find additional information and support on the Bosch Home Connect website www.bosch-home.com/energylabel

