

[Manuals.plus](#) /

› [ROMOSS](#) /

› ROMOSS Power Bank Station User Manual

ROMOSS 75,000Mah 200W

ROMOSS Power Bank Station User Manual

Model: 75,000Mah 200W

INTRODUCTION

The ROMOSS Power Bank Station is a high-capacity portable power solution designed to meet diverse power needs for both home backup and outdoor activities. Featuring a robust LiFePO4 battery, multiple output ports, and a smart display, it provides reliable and safe power for a wide range of electronic devices.

SAFETY INFORMATION

- Do not expose the power station to extreme temperatures, direct sunlight, or high humidity.
- Avoid dropping, puncturing, or disassembling the device.
- Keep away from children and pets.
- Ensure proper ventilation during use and charging.
- Do not use if the device is damaged or shows signs of swelling.
- Use only the provided or certified charging cables.
- Do not operate near flammable gases or liquids.

PACKAGE CONTENTS

What You Get



- 1x Power bank
- 1x USB-C to USB-C cable
- 1x User manual

Image: Contents of the ROMOSS Power Bank Station package, including the power station, a USB-C to USB-C cable, and the user manual.

- 1x ROMOSS 75,000mAh Power Station
- 1x Fast Charging USB-C to USB-C Cable
- 1x User Manual

PRODUCT OVERVIEW



Image: Front and side view of the ROMOSS Power Bank Station, highlighting its compact design and integrated handle.



Image: Close-up view of the power station's top panel, detailing the various input and output ports.

- **AC Outlet (200W):** For powering small household appliances and electronics.
- **USB-C Outputs/Inputs (65W/100W):** Two bidirectional USB-C ports for fast charging compatible devices and recharging the power station.
- **USB Outputs (22.5W):** Two standard USB-A ports for charging various USB-powered devices.
- **Smart Digital Display:** Shows real-time battery levels and charging status.
- **Integrated LED Light:** Multi-mode LED light for illumination in various scenarios.
- **Portable Handle:** Ergonomically designed for easy carrying.

SETUP

1. **Initial Charge:** Before first use, fully charge the power station using the provided USB-C to USB-C cable and a compatible power adapter (not included). The smart display will indicate charging progress.
2. **Power On/Off:** Press and hold the power button on the top panel for a few seconds to turn the device on or off.

OPERATING INSTRUCTIONS

Charging Devices

Charge Your iPad and Laptop Simultaneously



100W Max



65W Max



Image: The power station simultaneously charging an iPad and a laptop, demonstrating its multi-device charging capability.

- **USB-C/USB-A Charging:** Connect your smartphone, tablet, laptop, or other USB-powered devices to the appropriate USB-C or USB-A output ports using their respective charging cables. The power station will automatically begin charging.
- **AC Output:** For devices requiring an AC power source (up to 200W), plug them into the AC outlet. Press and hold the AC/DC button for two seconds to activate or deactivate the AC output mode.
- The power station can charge up to 5 devices simultaneously.

Using the LED Light

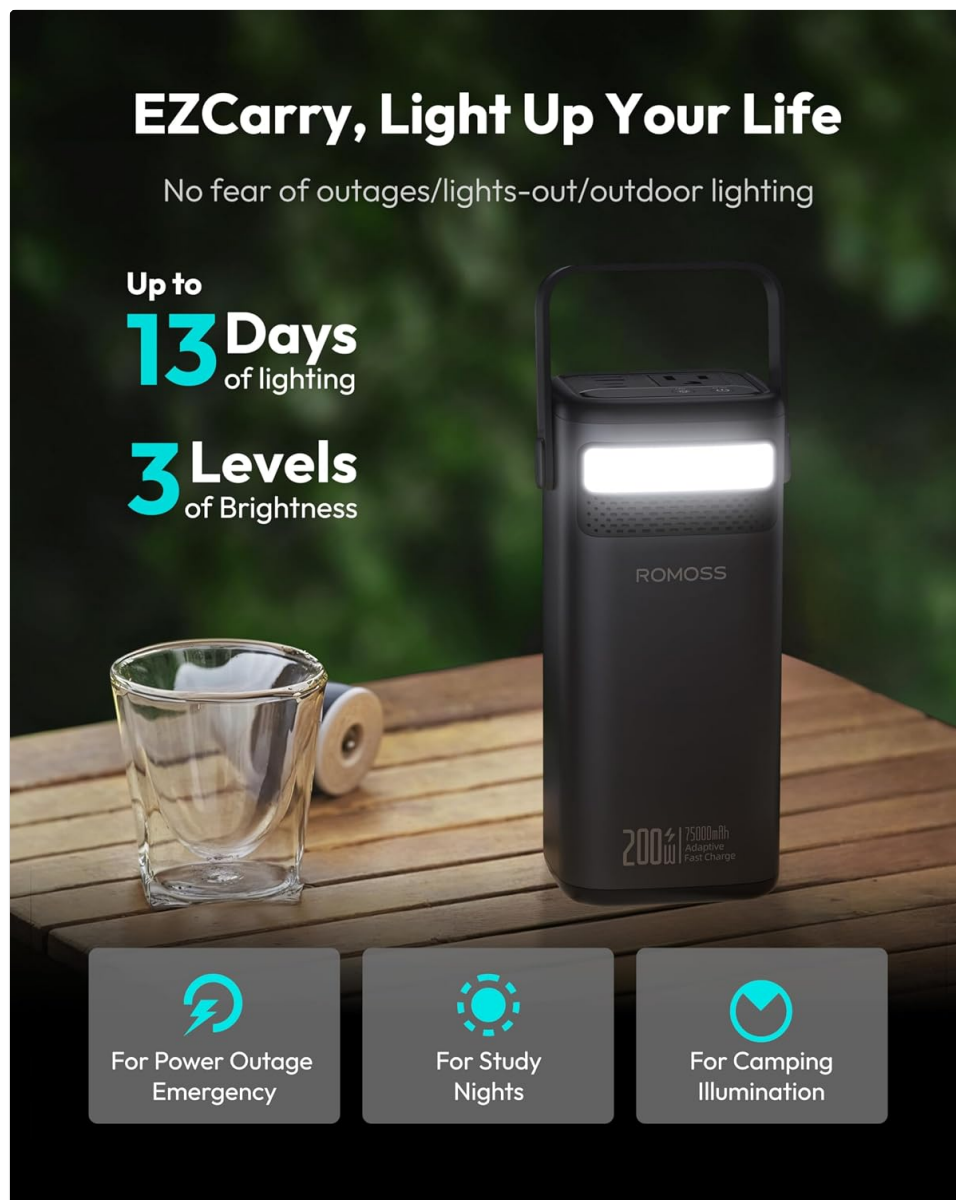


Image: The power station with its LED light illuminated, showcasing its use for emergency lighting, study nights, and camping illumination.

- Press the LED light button to cycle through three brightness levels.
- Hold the LED light button to turn the light off.
- The LED light can provide illumination for up to 13 days when no other devices are being charged.

MAINTENANCE

- Clean the power station with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Store in a cool, dry place away from direct sunlight and extreme temperatures.
- For long-term storage, charge the power station to approximately 50-70% every 3-6 months to maintain battery health.
- Avoid fully discharging the battery frequently to prolong its lifespan.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Device not charging from power station.	Power station battery is low or depleted. Cable is faulty or incompatible. Device requires more power than available.	Recharge the power station. Try a different cable. Check device power requirements against power station output.
AC outlet not working.	AC output not activated. Device power consumption exceeds 200W.	Press and hold the AC/DC button for 2 seconds to activate. Use devices under 200W.
Smart display not turning on.	Power station is off or battery is completely depleted.	Press the power button. Recharge the power station.

SPECIFICATIONS

Feature	Detail
Model Number	75,000Mah 200W
Battery Capacity	75,000mAh (240Wh)
Battery Type	LiFePO4
Cycle Life	Over 2500 charges
Max Total Output Power	300W
AC Outlet Output	200W
USB-C Output/Input	65W / 100W (Max)
USB-A Output	22.5W
Product Dimensions	9.02 x 3.66 x 4.49 inches
Item Weight	5.69 pounds
Special Features	Digital Display, Flashlight (3 brightness levels)

WARRANTY AND SUPPORT

For warranty information, technical support, or any inquiries regarding your ROMOSS Power Bank Station, please visit the official ROMOSS website or contact their customer service directly. Keep your purchase receipt for warranty claims.
Manufacturer: Jiangmen Romoss Technology Co., Ltd.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0DCBR6MZG>

More documents and user manuals: **<https://manuals.plus/>**