

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [FUNLIO](#) /

› [FUNLIO FL-016 4-in-1 Foldable Montessori Toddler Playset Instruction Manual](#)

## FUNLIO FL-016

# FUNLIO FL-016 4-in-1 Foldable Montessori Toddler Playset Instruction Manual

Model: FL-016 | Brand: FUNLIO

### 1. INTRODUCTION

This manual provides essential instructions for the safe assembly, operation, maintenance, and storage of your FUNLIO FL-016 4-in-1 Foldable Montessori Toddler Playset. This indoor playground is designed for children aged 6 months to 5 years, offering a swing, slide, climbing rock wall, and ladder. Please read all instructions carefully before use and retain this manual for future reference.



Image 1.1: The FUNLIO 4-in-1 Foldable Montessori Toddler Playset, fully assembled, showcasing the swing, slide, and climbing features.

## 2. SAFETY INFORMATION

**WARNING:** Adult assembly is required. This product is intended for indoor use only. Close adult supervision is required at all times when children are using the playset.

- Ensure all components are securely fastened before each use.
- Do not exceed the maximum weight capacity of 200 lbs (90.7 kg).
- Place the playset on a flat, stable surface. Use the included non-slip foot pads to prevent movement.
- Keep children away from moving parts during folding or unfolding.
- Regularly inspect the playset for wear, damage, or loose parts. Discontinue use if any damage is found.
- Ensure the slide and climbing wall are securely attached and stable before use.

- The scientific triangle structure provides stability. Do not modify the design.



Image 2.1: Visual representation of the playset's stable design, highlighting the triangle structure and the placement of anti-slip pads.

# Focus on Every Safety Detail

Ours



VS

Others



VS



VS



Image 2.2: Detailed comparison of safety features, showing crescent-shaped grooves for secure bar fitting, a stable platform to prevent tilting, and a thumb screw for fixing the playset after folding.

## 3. PRODUCT COMPONENTS

The FUNLIO FL-016 playset includes the following main components:

- Wooden Frame (A-frame structure)
- Toddler Swing (with fabric seat and ropes)
- Slide
- Climbing Rock Wall (with colorful climbing holds)
- Ladder
- Connecting Bars and Hardware (screws, thumb screws)
- Non-slip Foot Pads (6 pieces)

The playset is constructed from high-quality pine wood with a smooth, burr-free finish and coated with water-based paint for durability and easy cleaning.



Image 3.1: Details of the playset's construction, highlighting the premium pine wood, smooth finish, and water-based paint.

#### 4. SETUP AND ASSEMBLY

Assembly requires adult supervision and adherence to the provided instructions. A detailed instruction manual is included in the product packaging. Ensure all parts are present before beginning assembly.

1. **Unpack Components:** Carefully remove all parts from the packaging and verify against the parts list in the included manual.
2. **Assemble Main Frame:** Construct the A-frame structures using the designated wooden bars and screws. Ensure the crescent-shaped grooves align correctly for a secure fit.
3. **Attach Ladder and Slide/Climbing Wall:** Securely attach the ladder to one side of the main frame. The slide and climbing wall are reversible; choose your desired orientation and attach it to the other side, ensuring the

top platform is stable and fixed with the two wooden bars to prevent tilting.

4. **Install Swing:** Hang the toddler swing from the top bar of the A-frame, ensuring the ropes are securely fastened and the swing hangs freely.
5. **Apply Non-slip Pads:** Attach the 6 non-slip foot pads beneath each supporting bar at the base of the playset to prevent slipping and protect flooring.
6. **Final Check:** Before allowing children to use the playset, perform a thorough check to ensure all screws are tightened, all components are stable, and there are no loose parts or hazards.

## 5. OPERATING INSTRUCTIONS

The FUNLIO FL-016 playset offers four primary play modes:

### 5.1. Using the Swing

- Ensure the swing ropes are securely attached to the top bar.
- Place the child gently into the fabric swing seat, ensuring they are seated comfortably and securely.
- Supervise the child at all times during swinging. Do not push the swing excessively high.

### 5.2. Using the Slide

- Ensure the slide is firmly attached to the playset frame and the top platform is stable.
- Guide the child to sit at the top of the slide and slide down feet first.
- Ensure the landing area at the bottom of the slide is clear.

### 5.3. Using the Climbing Rock Wall and Ladder

- Ensure the climbing wall and ladder are securely fastened.
- Supervise children closely as they climb, providing assistance as needed.
- Teach children to use the climbing holds and ladder rungs safely.

# 4-in-1 Montessori Playset



Image 5.1: Children engaging with the slide and swing components of the playset, demonstrating typical use.

## 6. FOLDING AND STORAGE

The playset is designed for easy folding and storage.

1. **Remove Swing:** Detach the swing from the top bar.
2. **Fold Frame:** Loosen the designated screws (often thumb screws) that allow the A-frame to collapse inward.
3. **Secure in Folded Position:** Once folded, use the integrated thumb screws to fix the frame in its collapsed position, preventing accidental unfolding.
4. **Store:** Store the folded playset in a dry, safe place away from direct sunlight and extreme temperatures.

# Easy to Fold & Store



**Foldable Frame**  
Easy to Store



**Thumb Screw**  
Convenient & Safe



Image 6.1: The playset folded for storage, illustrating its compact form and the thumb screw used to secure it.

## 7. MAINTENANCE

- **Cleaning:** Wipe down the wooden surfaces with a damp cloth and mild soap as needed. Avoid harsh chemicals or abrasive cleaners.
- **Inspection:** Periodically check all screws, bolts, and connections for tightness. Tighten any loose hardware.
- **Wood Care:** The pine wood is coated with water-based paint. Avoid prolonged exposure to moisture to prevent warping or damage.
- **Swing Ropes:** Inspect swing ropes for fraying or wear. Replace if necessary.

## 8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Playset feels unstable or wobbly.	Loose screws or uneven surface.	Tighten all screws. Ensure playset is on a flat, level surface. Verify non-slip pads are correctly installed.
Slide or climbing wall does not feel secure.	Improper attachment or loose fasteners.	Re-check assembly steps for the slide/climbing wall. Ensure all connecting hardware is fully tightened and the top platform is fixed.
Missing parts during assembly.	Packaging error or lost component.	Contact FUNLIO customer support immediately with your purchase details.
Playset difficult to fold.	Screws not loosened sufficiently or obstruction.	Ensure all designated folding screws are adequately loosened. Check for any obstructions preventing the frame from collapsing.

## 9. SPECIFICATIONS

Feature	Detail
Model Number	FL-016
Brand	FUNLIO
Material	Pine Wood
Recommended Age	6 months to 5 years
Maximum Bearing Weight	200 lbs (90.7 kg)
Unfolded Dimensions (approx.)	51.5 in (130.7 cm) L x 45.9 in (116.5 cm) H
Folded Dimensions (approx.)	51.5 in (130.7 cm) L x 44.4 in (112.7 cm) H
Product Weight	21 kg
Assembly Required	Yes (Adult Assembly)

# Size & Bearing Weight



Image 9.1: Detailed diagram illustrating the dimensions of the playset in both unfolded and folded states, along with age and weight recommendations.

## 10. WARRANTY AND SUPPORT

FUNLIO is committed to providing high-quality products and customer satisfaction.

- **90-Day Return Policy:** If you are not satisfied with your purchase, you may be eligible for a return within 90 days.
- **1-Year Quality Warranty:** The product is covered by a 1-year quality warranty against manufacturing defects.
- **Customer Support:** For any questions, concerns, or to report missing parts or defects, please contact FUNLIO customer service. Refer to your purchase documentation for contact information.

