

Tristar IK-6162

Tristar IK-6162 Double Induction Cooktop User Manual

Model: IK-6162

1. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the appliance. Retain this manual for future reference.

- **Electrical Safety:** Ensure the appliance is connected to a grounded outlet with the correct voltage (230 Volts) and sufficient power capacity (3500 Watts total). Do not overload the circuit.
- **Cookware Compatibility:** Use only induction-compatible cookware made of magnetic materials (e.g., cast iron, magnetic stainless steel). Non-magnetic materials like ceramic, glass, copper, or aluminum are not suitable.
- **Overheat Protection:** The cooktop is equipped with automatic overheat protection. If the temperature becomes too high, the unit will shut off automatically.
- **Automatic Shut-off:** The cooktop features an automatic shut-off function for safety.
- **Child Safety Lock:** Activate the child safety lock to prevent accidental operation.
- **Stable Placement:** Always place the cooktop on a stable, flat, and heat-resistant surface. The non-slip feet ensure stability during use.
- **Clearance:** Maintain adequate clearance around the cooktop for proper ventilation. Do not block air vents.
- **Surface Care:** The safety glass plate is robust, but avoid dropping heavy objects on it or using abrasive cleaners.
- **Supervision:** Do not leave the appliance unattended during operation.
- **Water and Moisture:** Do not immerse the appliance in water or other liquids. Do not operate with wet hands.

2. PRODUCT OVERVIEW

The Tristar IK-6162 is a portable double induction cooktop designed for efficient and safe cooking. It features two cooking zones with independent controls.



Image 2.1: Top-down view of the Tristar IK-6162 Double Induction Cooktop, showing its sleek black design and two cooking zones with individual touch control panels.



Image 2.2: Diagram illustrating the dimensions of the cooktop (52.2 cm length, 32 cm width, 6.1 cm height) and the power distribution for each zone: left zone 19 cm diameter, 2000W; right zone 16 cm diameter, 1500W. A pot is shown on the cooktop for scale.

Key Features:

- Dual cooking zones: One 19 cm zone (2000W) and one 16 cm zone (1500W).
- Total power output: 3500 Watts.
- 10 adjustable power levels for precise cooking control.
- Intuitive touch control panel with LCD display.
- Integrated timer function, adjustable up to 180 minutes.
- Advanced safety features: Automatic pan recognition, auto-shutoff, overheat protection, child safety lock.
- Compact and portable design with non-slip feet.

3. SETUP AND INSTALLATION

Follow these steps to set up your Tristar IK-6162 induction cooktop:

1. **Unpacking:** Carefully remove the cooktop from its packaging. Retain packaging materials for potential future transport or storage.
2. **Placement:** Place the cooktop on a flat, stable, and heat-resistant surface. Ensure there is sufficient space around the unit for ventilation. Do not place it near heat sources or flammable materials.
3. **Power Connection:** Plug the power cord into a standard 230 Volt, grounded electrical outlet. Ensure the outlet can support the maximum power draw of 3500 Watts.
4. **Initial Cleaning:** Before first use, wipe the glass surface with a soft, damp cloth.

Compatible Cookware:

Induction cooktops require cookware with a magnetic base. To check if your cookware is compatible, hold a magnet to the bottom of the pot or pan. If the magnet sticks, the cookware is suitable for induction cooking.

KOMPATIBEL MIT ALLEN INDUKTIONSKOCHFELDERN



Image 3.1: Visual guide showing compatible and incompatible cookware types for induction. Compatible types include cast iron woks, magnetic pots, and cast iron pans (indicated by green checkmarks). Incompatible types include ceramic, enamel, copper/aluminum, and glass cookware (indicated by red crosses).

- **Suitable:** Cast iron, magnetic stainless steel, enameled iron, or any cookware with an induction-compatible base.
- **Unsuitable:** Glass, ceramic, copper, aluminum, or cookware with a non-magnetic base.

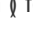 
4. OPERATING INSTRUCTIONS

The Tristar IK-6162 features intuitive touch controls for easy operation.

PRAKTISCHE DIGITALANZEIGE MIT TOUCHSCREEN



Image 4.1: Close-up view of the cooktop's digital touch control panel, highlighting the power button, plus/minus buttons for power adjustment, and other function icons for each cooking zone.

1. **Power On:** Place suitable cookware with food on the desired cooking zone. Press the power button  for the respective zone. The display will show "ON".
2. **Adjusting Power Levels:** Use the '+' and '-' buttons to select one of the 10 power levels. The left zone can reach up to 2000W, and the right zone up to 1500W.
3. **Integrated Timer:**

INTEGRIERTER TIMER



Image 4.2: The cooktop in use with a pot of spaghetti, demonstrating the integrated timer function. The display shows "180" minutes, indicating the maximum timer setting. An arrow points to "180-Minuten" (180 minutes) and "Unbeschwertes Kochen" (Carefree Cooking).

Press the timer button (often indicated by a clock icon) to activate the timer. Use the '+' and '-' buttons to set the desired cooking time, up to 180 minutes. The cooktop will automatically shut off when the timer expires.

4. **Child Safety Lock:** To activate the child lock, press and hold the lock icon button (often indicated by a padlock) for a few seconds. The controls will be locked. Repeat the action to unlock.
5. **Power Off:** Press the power button () for the respective zone to turn it off. To turn off the entire unit, press the main power button if available, or turn off both zones individually.

10 LEISTUNGSTUFEN



Image 4.3: A visual representation of the 10 power levels, showing a pan with vegetables on the left zone (2000W) and the right zone (1500W) with a heat gradient indicating adjustable power.

5. MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and optimal performance of your induction cooktop.

- **Before Cleaning:** Always unplug the cooktop from the power outlet and allow it to cool completely before cleaning.
- **Glass Surface:** Wipe the glass surface with a soft, damp cloth and a mild detergent. For stubborn stains, use a ceramic hob cleaner. Avoid abrasive sponges, scouring pads, or harsh chemical cleaners, as these can scratch or damage the surface.
- **Control Panel:** Wipe the touch control panel with a soft, damp cloth. Ensure no moisture enters the control area.
- **Exterior:** Clean the exterior plastic parts with a soft, damp cloth.
- **Do Not Immerse:** Never immerse the cooktop in water or any other liquid.
- **Storage:** When not in use, store the cooktop in a dry, safe place, away from direct sunlight and extreme temperatures.

6. TROUBLESHOOTING

If you encounter issues with your Tristar IK-6162, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Cooktop does not turn on.	No power supply; power cord not properly plugged in; circuit breaker tripped.	Check power connection; ensure outlet is functional; reset circuit breaker.
"E0" or similar error code displayed.	No cookware or incompatible cookware detected; cookware removed during operation.	Place suitable induction-compatible cookware on the zone; ensure cookware is centered.
Cooktop shuts off unexpectedly.	Overheat protection activated; timer expired; internal fault.	Allow unit to cool down; check timer settings; if problem persists, contact customer support.
Cooking zone not heating.	Incorrect power level selected; cookware not induction-compatible or too small/large.	Adjust power level; verify cookware compatibility and size.
Child lock is active.	Controls are locked.	Press and hold the lock icon button to deactivate the child lock.

If the problem persists after attempting these solutions, please contact Tristar customer support.

7. SPECIFICATIONS






Feature	Detail
Model Number	IK-6162
Brand	Tristar
Power (Total)	3500 Watts
Voltage	230 Volts
Cooking Zones	2 (19 cm / 2000W, 16 cm / 1500W)
Power Levels	10
Control Type	Touch
Timer Function	Up to 180 minutes
Dimensions (L x W x H)	52.2 x 32 x 6.1 cm
Weight	3.4 Kilograms
Material	Plastic (body), Safety Glass (surface)
Color	Black


Feature	Detail
Special Features	Temperature Control, Automatic Shut-off, Overheat Protection, Child Safety Lock

8. WARRANTY AND SUPPORT

The Tristar IK-6162 Double Induction Cooktop comes with a warranty for spare parts availability for 1 year. For technical support, warranty claims, or to inquire about spare parts, please contact Tristar customer service. Refer to the product packaging or the official Tristar website for contact information.

Related Documents - IK-6162


	<p>Tristar IK-6162 Induction Cooker User Manual Safe & Efficient Cooking</p> <p>Comprehensive user manual for the Tristar IK-6162 Induction Cooker. Learn about safe operation, features, technical specifications, cleaning, maintenance, and troubleshooting for your induction hob.</p>
	<p>Tristar IK-6178 & IK-6179 Induction Cooker User Manual</p> <p>Comprehensive user manual for Tristar IK-6178 and IK-6179 induction cookers, covering safety, operation, maintenance, and troubleshooting. Learn how to safely and effectively use your Tristar induction cooker.</p>
	<p>Tristar KP-6185 / KP-6245 Double Electric Hot Plate User Manual</p> <p>Comprehensive user manual for the Tristar KP-6185 and KP-6245 double electric hot plates. Provides essential safety precautions, detailed parts description, operating instructions, cleaning and maintenance guidelines, and environmental disposal information.</p>
	<p>Tristar VE-5900 Tower Fan: Instruction Manual and Safety Guide</p> <p>Comprehensive guide for the Tristar VE-5900 tower fan, covering safety instructions, setup, operation, cleaning, maintenance, and environmental disposal. Learn how to use your Tristar fan safely and effectively.</p>
	<p>Tristar Double Basket Airfryer FR-9429 User Manual</p> <p>Comprehensive user manual for the Tristar Double Basket Airfryer FR-9429, covering setup, operation, safety precautions, cleaning, and troubleshooting.</p>



Tristar SZ-2318 Vacuum Cleaner: User Manual, Safety & Maintenance Guide

Official instruction manual for the Tristar SZ-2318 vacuum cleaner. Provides detailed safety guidelines, parts identification, usage instructions, cleaning and maintenance procedures, and environmental disposal information.

Documents - Tristar – IK-6162



[\[pdf\]](#) User Manual Instructions

Upute za rad i sigurnost 3386890 Tristar IK 6162 indukcijska ploča MegaShop spletna trgovina Megashop


hr upute tristar ik ploca asset conrad media10 add 160267 c1 gl 003386890ML00 |||

a User manual d Gebruiksaanwijzing b Manuel de l utilisateur Induction Cooker

WWW.TRISTAR.EU Tristar Europe B.V. Swaardvenstraat 65 5048 AV Tilburg The Netherlands A 1 1 **IK-6162** B 7 4 8 625 3 7 4 8 625 a User manual Induction Cooker

FOREWORD About this document This user manual...

lang:en **score:28** filesize: 3.74 M page_count: 8 document date: 2024-05-14



[Tristar IK-6162 Induction Cooker User Manual | Safe & Efficient Cooking](#)

Comprehensive user manual for the Tristar IK-6162 Induction Cooker. Learn about safe operation, features, technical specifications, cleaning, maintenance, and troubleshooting for your induction hob.

lang:en **score:26** filesize: 793.22 K page_count: 8 document date: 2024-12-23



[pdf] User Manual Instructions

Induction Cookerb65780c5 81a8 54a7 946c b8dc03613417d otto de files b65780c5 b8dc03613417 |||
a User manual d Gebruiksaanwijzing b Manuel de l'utilisateur Induction Cooker
WWW.TRISTAR.EU Tristar Europe B.V. Swaardvenstraat 65 5048 AV Tilburg The
Netherlands A 1 1 **IK-6162** B 7 4 8 625 3 7 4 8 625 a User manual Induction Cooker
FOREWORD About this document This user manual...

lang:en score:14 filesize: 3.74 M page_count: 8 document date: 2024-05-14