

[Manuals.plus](#) /

› [Spinnaker](#) /

› Spinnaker Hull Diver Automatic SP-5147 Watch Instruction Manual

Spinnaker SP-5147

Spinnaker Hull Diver Automatic SP-5147 Watch Instruction Manual

Model: SP-5147

INTRODUCTION

This manual provides detailed instructions for the proper use and care of your Spinnaker Hull Diver Automatic SP-5147 watch. Please read this manual thoroughly to ensure optimal performance and longevity of your timepiece.

The Spinnaker Hull Diver Automatic SP-5147 is a robust diving watch featuring a Japanese TMI NH35 24 Jewels 3-hand date self-winding automatic movement, a 42mm stainless steel case, a silicone strap, anti-reflection coated sapphire lens, and water resistance up to 20 ATM (200 meters).



Image: The Spinnaker Hull Diver Automatic SP-5147 watch, showcasing its design and green silicone strap.

WATCH COMPONENTS

Familiarize yourself with the main components of your Spinnaker Hull Diver Automatic watch.

- **Case:** 42mm Stainless Steel case, providing durability and protection.
- **Strap:** 22mm Silicone strap for comfort and water resistance.
- **Crystal:** Anti-reflection coated Sapphire lens, offering superior scratch resistance and clarity.
- **Movement:** Japanese TMI NH35 24 Jewels 3 hands date self-winding automatic movement.
- **Crown:** Screw-down crown, essential for maintaining water resistance.
- **Bezel:** Unidirectional turning bezel, used for timing dives or other events.
- **Dial:** Features luminous markers and hands for visibility in low light conditions.



Image: Diagram illustrating key features of the Spinnaker Hull Diver Automatic watch, including the stainless steel case, sapphire lens, unidirectional turning bezel, screw-down crown, 22mm silicone strap, 42mm case diameter, Japan automatic movement with 3 hands, and 20 ATM water resistance.



Image: The Spinnaker Hull Diver watch dial illuminated by its luminous markers and hands, demonstrating visibility in low-light conditions.

INITIAL SETUP

Winding the Watch

Your Spinnaker Hull Diver watch is equipped with an automatic movement. This means it is powered by the motion of your wrist. If the watch has stopped or is running low on power, it can be manually wound.

1. Unscrew the crown by turning it counter-clockwise until it springs free.
2. Turn the crown clockwise approximately 20-30 times. This will provide enough power reserve to start the watch.
3. Once wound, the watch will continue to operate as long as it is worn regularly.

Setting the Time and Date

1. Unscrew the crown by turning it counter-clockwise until it springs free.
2. **To set the date:** Pull the crown out to the first click position. Rotate the crown either clockwise or counter-clockwise

until the correct date is displayed. *Avoid setting the date between 9 PM and 3 AM, as this can damage the movement.*

3. **To set the time:** Pull the crown out to the second click position. Rotate the crown to move the hour and minute hands to the correct time. Ensure you set the correct AM/PM for the date change mechanism.
4. Once the time and date are set, push the crown back in and screw it down tightly by turning it clockwise. This ensures the watch's water resistance.

Your browser does not support the video tag.

Video: An overview of the Spinnaker Hull Diver watch, demonstrating the unboxing, winding, and setting of the watch. This video shows how to handle the screw-down crown and adjust the time and date.

OPERATING YOUR WATCH

Using the Unidirectional Bezel

The Hull Diver features a unidirectional rotating bezel, designed for timing events, particularly dives.

1. Before starting an event (e.g., a dive), align the zero marker on the bezel with the minute hand.
2. As time passes, the minute hand will indicate the elapsed time against the bezel's scale.
3. The bezel rotates only counter-clockwise to prevent accidental shortening of the timed interval, which is a critical safety feature for divers.



Image: The Spinnaker Hull Diver watch resting on sand, highlighting its unidirectional rotating bezel and luminous dial markers.

Water Resistance

Your watch is water resistant up to 20 ATM (200 meters). This rating makes it suitable for professional marine activity and serious surface water sports, but not for saturation diving.

- Always ensure the crown is fully screwed down before exposing the watch to water.
- Do not operate the crown or pushers (if applicable) while the watch is submerged or wet.
- Rinse the watch with fresh water after exposure to saltwater to prevent corrosion.



With automatic movement technology at the core, our timepieces effortlessly adapt to your active lifestyle, eliminating the need for manual winding.

Image: A diver wearing a Spinnaker watch underwater, demonstrating the watch's suitability for aquatic environments.

CARE AND MAINTENANCE

Proper care will help maintain the appearance and functionality of your Spinnaker watch.

- **Cleaning:** Wipe the watch case and strap with a soft, damp cloth. For silicone straps, mild soap and water can be used. Ensure the crown is screwed down before cleaning with water.
- **Avoid Chemicals:** Do not expose the watch to harsh chemicals, solvents, or detergents, as these can damage the case, strap, or seals.
- **Temperature:** Avoid exposing the watch to extreme temperatures or sudden temperature changes, which can affect the movement and water resistance.
- **Magnetic Fields:** Keep the watch away from strong magnetic fields (e.g., speakers, refrigerators, MRI machines) as these can affect the accuracy of the mechanical movement.
- **Servicing:** Mechanical watches benefit from periodic servicing by a qualified watchmaker to ensure long-term accuracy and performance.



Image: Hands holding the Spinnaker Hull Diver watch, demonstrating careful handling.

TROUBLESHOOTING

If you encounter issues with your watch, refer to the following common solutions:

- **Watch has stopped:** As an automatic watch, it requires motion to power. Manually wind the watch by unscrewing the crown and turning it clockwise 20-30 times. If worn daily, ensure sufficient wrist movement.
- **Date not changing at midnight:** This indicates the AM/PM setting was incorrect when setting the time. Advance the time by 12 hours.
- **Watch running fast or slow:** Minor deviations are normal for mechanical watches. If the deviation is significant, the watch may require regulation by a professional watchmaker. Avoid exposing the watch to strong magnetic fields.
- **Condensation under crystal:** This can indicate a breach in water resistance. Immediately take the watch to a service center to prevent further damage.

SPECIFICATIONS

Detailed technical specifications for the Spinnaker Hull Diver Automatic SP-5147 watch:

Model Number	SP-5147-03
Movement	Japanese TMI NH35 Automatic, 24 Jewels, 3 Hands with Date
Case Material	Stainless Steel
Case Diameter	42 mm
Case Thickness	15 mm
Crystal	Sapphire with Anti-Reflection Coating
Band Material	Silicone Strap
Band Width	22 mm
Band Length	217 mm
Clasp Type	Buckle
Water Resistance	20 ATM (200 Meters)
Item Weight	108 Grams
Display Type	Analog

WARRANTY AND SUPPORT

Warranty Information

Your Spinnaker Hull Diver Automatic watch comes with a **2-year International Warranty**. This warranty covers manufacturing defects under normal use. Please refer to the warranty card included with your watch for full terms and conditions.



Image: Contents of the Spinnaker watch box, showing the watch, instruction manual, and international warranty card.

Customer Support

For further assistance, service, or warranty claims, please contact Spinnaker customer support. You may also find additional resources and information on the official Spinnaker website.

Official Spinnaker Instruction Manuals: <http://im.spinnaker-watches.com>

