

Manuals.plus /

- › OLOV /
- › OLOV Electric Body Hair Trimmer (Model YP-7032) User Manual

OLOV YP-7032

OLOV Electric Body Hair Trimmer (Model YP-7032) User Manual

Brand: OLOV | Model: YP-7032

PRODUCT OVERVIEW

The OLOV Electric Body Hair Trimmer is designed for efficient and comfortable grooming of various body areas. It features advanced ceramic blades for a smooth experience, wet/dry functionality, and a convenient USB recharge dock. This trimmer is suitable for both men and women for precise and gentle hair removal.

- **Versatile Grooming:** Designed for body, pubic, groin, and bikini areas, also effective for other body parts.
- **Skin-Friendly Ceramic Blades:** Features soft ceramic blades with advanced technology to prevent cutting, tugging, or irritating the skin.
- **Adjustable Trimming:** Includes 2 adjustable trimming guards for achieving different hair lengths.
- **100% Waterproof:** IPX7 waterproof rating allows for convenient wet or dry use, making it ideal for use in the shower and easy to clean under running water.
- **Rechargeable & Cordless:** Equipped with a rechargeable battery and a USB charging dock for convenience and portability.

PACKAGE CONTENTS

Your OLOV Electric Body Hair Trimmer package includes the following items:

- OLOV Electric Trimmer
- Facial Hair Trimmer Head
- Adjustable Guide Combs (3/6mm, 9/12mm)
- Charging Dock
- USB Cable
- User Manual



OLOV Electric Trimmer and all included accessories.

SETUP INSTRUCTIONS

1. Charging the Trimmer

Before initial use, ensure the trimmer is fully charged to maximize battery life and performance.

1. Place the OLOV Electric Trimmer securely into the charging dock.
2. Connect the provided USB cable to the charging dock and then to a compatible USB power source (e.g., wall adapter, computer USB port).
3. The indicator light on the trimmer will illuminate to show that it is charging.
4. A full charge typically takes approximately 5 hours.

RECHARGEABLE



Recharge dock



USB charging



The OLOV Electric Trimmer in its charging dock.

2. Attaching/Changing Trimmer Heads and Guards

The trimmer comes with interchangeable heads and guide combs to suit various trimming preferences.

1. **To attach a guide comb:** Align the desired guide comb with the trimmer blade and slide it firmly onto the head until it clicks into place.
2. **To remove a guide comb:** Gently push the comb upwards and away from the blade.
3. **To change the trimmer head:** Gently twist and pull the current head off the trimmer body. Align the desired head (e.g., facial hair trimmer) with the trimmer body and push it on until it securely locks into place.

REPLACEABLE TRIMMER HEAD

Easy to install



Replacing the trimmer head on the OLOV Electric Trimmer.

OPERATING INSTRUCTIONS

Basic Trimming

To begin trimming, press the power button located on the trimmer body. For optimal results and to prevent irritation, hold the trimmer flat against the skin and move it slowly against the direction of hair growth. The ceramic blades are engineered for a smooth cut, minimizing the risk of nicks and cuts.

Wet and Dry Use

The OLOV Electric Body Hair Trimmer boasts an IPX7 waterproof rating, allowing for safe and convenient use in both wet and dry conditions. You can use it in the shower, as water helps to wash away trimmings. For dry trimming, ensure your skin is clean and completely dry before use.

WATERPROOF



The OLOV Electric Trimmer is fully waterproof for versatile use.

CARE AND MAINTENANCE

Cleaning the Trimmer

Regular cleaning ensures hygiene and extends the life of your trimmer.

1. After each use, turn off the trimmer and remove any attached guide combs or heads.
2. Rinse the blade head thoroughly under running water to remove hair clippings.
3. Use the provided cleaning brush to dislodge any stubborn hairs from the blade area.
4. Ensure all parts are completely dry before reassembling, storing, or placing the trimmer back on the charging dock.

Blade Replacement

To maintain optimal trimming performance, it is recommended to replace the ceramic blade heads periodically. Replacement heads are available for purchase separately.

TROUBLESHOOTING

Trimmer Not Turning On

- Ensure the battery is sufficiently charged. Place the trimmer on the charging dock and verify that the indicator light confirms charging.

Poor Trimming Performance

- Check if the blade head is clean and free of accumulated hair.
- Verify that the blade head is securely attached to the trimmer body.
- If the blade feels dull or performance has significantly decreased, consider replacing the blade head.

Skin Irritation

- Confirm that the trimmer is being used correctly, moving against the direction of hair growth.
- Always use a clean blade to prevent bacterial buildup and irritation.
- If skin irritation persists, discontinue use and consult a healthcare professional.

PRODUCT SPECIFICATIONS

Feature	Detail
Model Number	YP-7032
Battery Type	1 AAA batteries required (included)
Rated Power	DC 5V 1A
Charging Time	About 5 hours
Usage Time	About 50 minutes
Waterproof Rating	IPX7
Item Weight	0.35 Kilograms
Color	Avocado Green
Recommended Uses	Body, Pubic, Groin, Bikini

CERAMIC BLADE HEADS

Safe and sharp, fast cutting without pulling

Ceramic blade

Protective guard for close shave



Close-up of the OLOV Electric Trimmer's ceramic blade.

IMPORTANT SAFETY INFORMATION

- Always unplug or remove batteries from the trimmer before cleaning.
- Avoid using the trimmer on infants or near water sources.
- Be cautious when trimming near sensitive areas.
- Always follow the manufacturer's instructions for cleaning and maintenance.

WARRANTY AND CUSTOMER SUPPORT

For detailed warranty information or to receive customer support, please refer to the warranty card included in your package or contact OLOV customer service directly.

Contact Information:

Email: support@olovonline.com

Phone: 303-558-0907