

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

- › [Mastela](#) /
- › [Mastela Swing X Multi-Motion Baby Cradle Model 8303 Instruction Manual](#)

Mastela 8303

Mastela Swing X Multi-Motion Baby Cradle Instruction Manual

Model: 8303

1. INTRODUCTION

Thank you for choosing the Mastela Swing X Multi-Motion Baby Cradle. This innovative cradle is designed to provide comfort and versatility for your baby from birth up to 36 months, with a maximum weight capacity of 15 kg. It features a unique multi-axis mechanism for smooth rocking motions, multiple swing settings, and smart controls for ease of use. Please read this manual thoroughly before assembly and operation to ensure safe and correct use of the product.



Image 1.1: Mastela Swing X Multi-Motion Baby Cradle (Dark Grey). This image shows the overall design of the cradle with its base and main seating area.

2. SAFETY WARNINGS

- **WARNING:** Never leave your child unattended in the cradle.
- **WARNING:** Always use the 5-point harness to secure your child.
- **WARNING:** Discontinue use of the product when the child can sit up unaided, push up on hands and knees, or has reached the maximum weight of 15 kg, whichever comes first.
- Ensure all assembly components are securely fastened before each use.
- Keep small parts away from children during assembly.

- Do not use the cradle if any parts are broken, torn, or missing. Contact customer support for replacement parts.
- Place the cradle on a flat, level surface away from stairs, heat sources, and electrical cords.
- Only use accessories and replacement parts approved by Mastela.

3. PACKAGE CONTENTS

Carefully unpack all components and check against the list below. If any parts are missing or damaged, do not assemble the product and contact customer support.

- 1 Unit (Comprising of Cradle Frame, Seating Unit, Mattress, Toy Bar with 2 Toys, Mosquito Net, Power Adapter)

4. ASSEMBLY INSTRUCTIONS

Assembly is required. Please follow these steps carefully.

1. **Assemble the Base:** Connect the four support legs to the central base unit. Ensure they click securely into place.
2. **Attach the Main Frame:** Insert the main support frame into the designated slot on the assembled base. Listen for a click to confirm it is locked.
3. **Install the Seating Unit:** Carefully place the seating unit onto the main support frame. Align the connectors and push down until it is firmly attached.
4. **Insert the Mattress:** Place the dense mattress into the seating unit. Ensure it lies flat and fits snugly.
5. **Attach the Toy Bar:** Secure the removable toy bar to the designated attachment points on the seating unit. Ensure the two attractive toys are securely fastened to the bar.
6. **Install the Mosquito Net:** Drape the mosquito net over the seating unit and secure it to the frame as designed, providing shade and serenity.
7. **Connect Power:** Plug the power adapter into the cradle's power port and then into a suitable electrical outlet.



Image 4.1: Front view of the assembled Mastela Swing X Baby Cradle. This image illustrates the cradle's front profile after assembly, showing the seating unit, base, and toy bar.



Image 4.2: Side view of the assembled Mastela Swing X Baby Cradle. This image provides a lateral perspective, highlighting the cradle's depth and recline capability.

5. OPERATING INSTRUCTIONS

5.1 Control Panel

The cradle features a gentle touch control panel for easy operation. Power on the unit by pressing the power button. Use the intuitive controls to adjust swing motions, speed, and timer settings.



Image 5.1: Close-up of the control panel on the Mastela Swing X Baby Cradle. This image details the buttons and indicators for operating the cradle's functions.

5.2 Swing Motions and Speed

The cradle offers 5 pre-set swing motions. You can choose between up-to-down or front-to-back motions, or combine them to find the best rhythm for your baby. Adjust the swing speed using the dedicated buttons on the control panel or via the app.

5.3 Timer Settings

Set the operating time for 15, 30, 45 minutes, or use the default 60-minute setting. The cradle will automatically stop after the selected duration.

5.4 App Control

For enhanced convenience, download the Mastela app on your smartphone. The app allows you to remotely adjust motion, speed, and select from 12 built-in melodies. Refer to the app's instructions for pairing and usage.

5.5 Recline Positions

The seating unit offers full recline positions, suitable for various activities such as playing, exploring, napping, and feeding. Adjust the recline by pressing the recline adjustment buttons on the side of the seating unit.



Image 5.2: Mastela Swing X Baby Cradle with the mosquito net deployed. This image shows the cradle with its protective mosquito net extended, providing a serene environment for the baby.

5.6 Harness System

Always secure your child using the 5-point harness for enhanced security. Adjust the straps to ensure a snug but comfortable fit around your baby's shoulders, waist, and between the legs.

5.7 Toy Bar

The removable toy bar with two attractive toys provides entertainment for your baby. Ensure the toys are securely attached to prevent choking hazards.



Image 5.3: Mastela Swing X Baby Cradle showing the removable toy bar. This image highlights the toy bar feature with its attached toys, designed for infant engagement.

6. CARE AND MAINTENANCE

- **Mattress and Mesh Sides:** The dense mattress and unique mesh sides are removable and machine-washable. Use a gentle cycle with cold water and mild detergent. Air dry thoroughly before reassembling.
- **Frame Cleaning:** Wipe the plastic and metal parts of the frame with a damp cloth and mild soap. Do not use abrasive cleaners or solvents.
- **Storage:** When not in use, store the cradle in a clean, dry place away from direct sunlight and extreme temperatures.
- **Regular Checks:** Periodically check all fasteners, straps, and components for wear, damage, or loose connections. Tighten or replace as necessary.

7. TROUBLESHOOTING

- **Cradle not swinging:** Ensure the power adapter is securely connected and the power outlet is functional. Check if the cradle is overloaded (exceeding 15 kg).
- **Swing motion is weak or inconsistent:** Verify that the cradle is on a flat, level surface. Check for any obstructions preventing smooth movement.
- **App not connecting:** Ensure Bluetooth is enabled on your device and the cradle is powered on. Try restarting both the app and the cradle.
- **Cradle stops unexpectedly:** Check the timer settings. If the issue persists outside of timer settings, ensure the power connection is stable.
- **Noise during operation:** Ensure all assembly points are secure. Lubrication is generally not required; if persistent, contact customer support.

8. SPECIFICATIONS

Model Number	8303
Brand	Mastela
Color	Dark Grey
Material	Metal, Plastic, Polyester
Item Weight	4.5 Kilograms
Item Dimensions (LxWxH)	79 x 45.5 x 75.5 Centimeters
Age Range	Baby (Birth to 36 Months)
Maximum Weight Recommendation	15 Kilograms
Assembly Required	Yes
Portable	Yes

9. WARRANTY AND CUSTOMER SUPPORT

For warranty information, please refer to the warranty card included with your purchase or contact your retailer. For technical support, replacement parts, or any inquiries regarding the Mastela Swing X Multi-Motion Baby Cradle, please contact:

- **Manufacturer:** Guangzhou Mastela commodity,Co. Ltd
- **Importer (India):** TrucareKidz India Pvt Ltd

Please have your model number (8303) and purchase date available when contacting support.