

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Furmax](#) /

› [Furmax 63 x 55 Inch L-Shaped Electric Standing Desk User Manual](#)

## Furmax 49L

# Furmax 63 x 55 Inch L-Shaped Electric Standing Desk User Manual

Model: 49L

## INTRODUCTION

This manual provides detailed instructions for the assembly, operation, maintenance, and troubleshooting of your Furmax 63 x 55 Inch L-Shaped Electric Standing Desk. Please read this manual thoroughly before assembly and use to ensure proper function and safety.

The Furmax L-Shaped Electric Standing Desk is designed to provide a versatile and ergonomic workspace, allowing seamless transitions between sitting and standing positions. It features a robust motor, programmable height presets, and a spacious desktop suitable for various office setups.


## SAFETY INFORMATION

- Ensure all components are securely fastened before use.
- Do not exceed the maximum weight capacity of 145 pounds (66 kg).
- Keep children and pets away from the desk during height adjustments.
- Avoid placing liquids directly on the control panel or near electrical components.
- Disconnect power before cleaning or performing any maintenance.
- Operate the desk on a level surface to prevent instability.

## PACKAGE CONTENTS

Verify that all parts are present before beginning assembly. Refer to the included assembly guide for a complete list of components and hardware.

# DESK DIMENSION

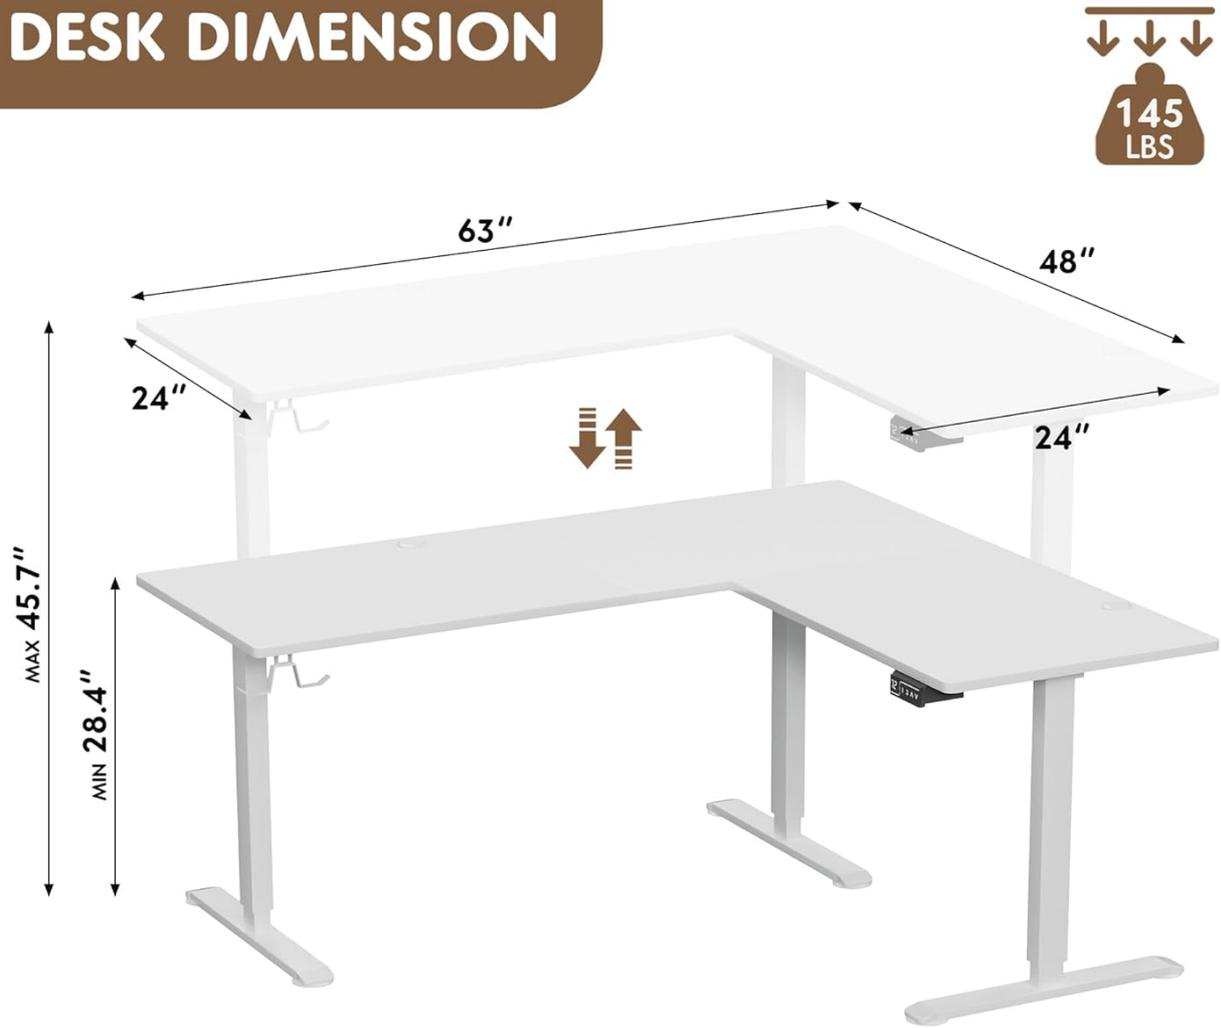

**Figure 1: Desk Dimensions and Key Features.** This diagram illustrates the overall dimensions of the L-shaped desk, including the main and return desk sections, and highlights the adjustable height range from 28.4 inches to 45.7 inches. It also indicates the maximum weight capacity of 145 lbs.

## SETUP AND ASSEMBLY

Assembly of the Furmax L-Shaped Electric Standing Desk typically takes 30-60 minutes. It is recommended that two people assemble the desk due to its size and weight for safety and ease of installation.

### Assembly Steps:

- 1. Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, soft surface to prevent scratches.
- 2. Assemble Frame:** Follow the detailed instructions in the separate assembly guide to connect the leg columns, crossbars, and feet. Ensure all screws are tightened securely.
- 3. Attach Desktop:** The desk features a two-part desktop design. Carefully align and attach the desktop sections to the assembled frame. Secure them using the provided hardware.

4. **Install Control Panel:** Mount the smart control panel to the underside of the desk in the designated location.
5. **Connect Cables:** Connect all motor and control panel cables according to the assembly guide. Ensure connections are firm.
6. **Install Accessories:** Attach the headphone hook and adjust the feet balance glides as needed.
7. **Initial Power-Up:** Plug the desk into a power outlet. The desk may require an initial reset or calibration as per the assembly guide.

For a visual guide, refer to the assembly video provided by Furmax, if available, or the step-by-step instructions included in your product packaging.

## OPERATING INSTRUCTIONS

Your Furmax L-Shaped Electric Standing Desk features an intuitive smart controller for height adjustment and memory presets.



**Figure 2: Smart Controller.** This image displays the smart control panel with its LED display, up/down adjustment buttons, and two preset memory buttons (1 and 2).

## Basic Operation:

- **Adjusting Height:** Use the **Up** ( ^ ) and **Down** ( v ) buttons on the control panel to raise or lower the desk to your desired height. The current height will be displayed on the LED screen. The desk can adjust from 28.4 inches (72 cm) to 45.7 inches (116 cm).
- **Saving Memory Presets:**
  - a. Adjust the desk to your preferred sitting or standing height.
  - b. Press the **"M"** or **"SET"** button (if available, otherwise proceed to step c).
  - c. Press one of the numbered memory buttons (**"1"** or **"2"**) until the LED display shows **"S-1"** or **"S-2"** to confirm the height is saved.
- **Recalling Memory Presets:** Press the saved memory button (**"1"** or **"2"**) to automatically move the desk to the stored height.



**Figure 3: Product Functions.** This image highlights the height lock system, the included desk hook for headphones or bags, and the six feet balance points for enhanced stability.

## Additional Features:

- **Headphone Hook:** Utilize the double-sided hook for convenient storage of headphones or bags.
- **Feet Balance:** The desk is equipped with six adjustable feet to ensure stability on uneven surfaces. Adjust them by twisting the bottom of each foot until the desk is level and stable.
- **Collision Protection:** The desk's motor system includes a collision protection feature that stops movement if an obstruction is detected during adjustment.

## MAINTENANCE

Regular maintenance helps ensure the longevity and optimal performance of your Furmax standing desk.

- **Cleaning:** Wipe the desktop and frame with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that could damage the finish.
- **Cable Management:** Periodically check all cables for wear or damage. Ensure they are neatly routed to prevent entanglement during height adjustments.
- **Fastener Check:** Every few months, inspect all screws and bolts to ensure they remain tight. Retighten if necessary.
- **Motor Inspection:** Listen for any unusual noises during operation. If you notice any issues, discontinue use and contact customer support.

## TROUBLESHOOTING

If you encounter any issues with your Furmax L-Shaped Electric Standing Desk, refer to the following common troubleshooting steps:

Problem	Possible Cause	Solution
Desk does not move or respond to controls.	No power, loose cable connection, or motor overload.	<p>Check if the power cord is securely plugged into the wall outlet and the desk.</p> <p>Verify all motor and control panel cables are firmly connected.</p> <p>Unplug the desk for 10 minutes, then plug it back in to reset the motor.</p>
Desk moves unevenly or makes unusual noises.	Uneven load, loose fasteners, or obstruction.	<p>Ensure weight is evenly distributed on the desktop.</p> <p>Check and tighten all assembly fasteners.</p> <p>Inspect for any obstructions under or around the desk legs.</p>
Height presets are not working correctly.	Presets not saved or corrupted.	<p>Re-save your desired height presets following the "Saving Memory Presets" instructions.</p> <p>Perform a factory reset if available (refer to the assembly guide for specific instructions).</p>

If the problem persists after attempting these solutions, please contact Furmax customer support for further assistance.

## SPECIFICATIONS

# SPACIOUS SPACE

Large enough for multi laptops and supplies



**Figure 4: Spacious Workspace.** This image illustrates the generous dimensions of the L-shaped desk, highlighting its 63-inch and 55-inch lengths, and 24-inch depth, demonstrating ample space for multiple monitors and office equipment.

Feature	Detail
Brand	Furmax
Model Number	49L
Product Dimensions (D x W x H)	55"D x 63"W x 28.4"H
Color	White
Style	Modern
Base Material	Metal
Top Material Type	Engineered Wood
Finish Type	Laminated

<b>Feature</b>	<b>Detail</b>
Special Feature	Adjustable Height
Room Type	Office
Included Components	Headphone Hook, Wire Holes
Maximum Weight Recommendation	145 Pounds (66 kg)
Minimum Height	28.4 Inches (72 cm)
Maximum Height	45.7 Inches (116 cm)
Item Weight	75.85 Pounds (34.4 kg)
Motor Type	Three-section plug-in motor
Lift Cycles Tested	50,000
Noise Level	50 decibels
Assembly Required	Yes (Recommended 2 people)

# ULTRA QUIET MOTOR

Enjoy the moment of peace



**Figure 5: Ultra Quiet Motor.** This diagram visually compares the desk's motor noise level (50dB) to common sounds like falling leaves (10dB) and city traffic (80dB), emphasizing its quiet operation.

## WARRANTY INFORMATION

Specific warranty details for your Furmax L-Shaped Electric Standing Desk are typically provided with your purchase documentation or can be found on the official Furmax website. Please retain your proof of purchase for warranty claims.

For detailed warranty terms and conditions, please refer to the information provided by the seller or contact Furmax customer service directly.

## CUSTOMER SUPPORT

If you require further assistance, have questions, or need to report an issue, please contact Furmax customer support.

- **Online Support:** Visit the official Furmax store on Amazon for product information and support resources:

- **Contact Seller:** You can also contact the seller directly through your Amazon order history for product-specific inquiries.

