

[manuals.plus](#) /

› [Wohome](#) /

› [Wohome S111 Pro Soundbar User Manual](#)

Wohome S111 Pro

Wohome S111 Pro Soundbar Instruction Manual

Model: S111 Pro

Brand: Wohome

1. INTRODUCTION

The Wohome S111 Pro is a versatile 2-in-1 detachable soundbar system designed to enhance your home audio experience. Featuring a 4.1 channel configuration with a dedicated 5-inch subwoofer, it delivers immersive surround sound for movies, music, and games. Its detachable design allows for flexible placement, functioning as a single soundbar or two separate tower speakers. This manual provides detailed instructions for setup, operation, and maintenance to ensure you get the best performance from your device.

2. WHAT'S IN THE Box

Carefully unpack all components and verify that you have received the following items:

- 1 x 32 Inches Sound Bar (Detachable)
- 1 x Subwoofer
- 1 x Remote Control
- 1 x Power Adapter
- 1 x Optical Cable
- 1 x 3.5mm Audio Cable
- 2 x Connection Cables (0.18M & 2.5M)
- 2 x Stands
- 1 x User Manual



1 * Subwoofer



1 * Power Adapter



1 * 3.5mm to 3.5mm Audio Cable



1 * Optical Cable



1 * Manual



2 * Connection Cables
(0.18M&2.5M)



1 * Remote Control



2 * Stands

Image: All components included in the Wohome S111 Pro Soundbar package. This includes the main soundbar unit, the subwoofer, a remote control, various connection cables (optical, 3.5mm audio, and two connection cables for the detachable soundbar sections), a power adapter, two stands for vertical setup, and the user manual.

3. SETUP AND INSTALLATION

The Wohome S111 Pro offers flexible installation options:

3.1 Detachable Design

The soundbar can be used as a single 32-inch unit or split into two 16-inch tower speakers for enhanced surround effect. To detach, gently pull the two halves apart. To reattach, align the connectors and push them together until they click into place.



Image: The Wohome S111 Pro soundbar demonstrating its 2-in-1 detachable design. It shows the soundbar as a single horizontal unit and also split into two vertical tower speakers, alongside the separate subwoofer. This illustrates the flexibility in placement options.

3.2 Placement Options

- **Single Soundbar:** Place the assembled soundbar horizontally below your TV.
- **Split Tower Speakers:** Attach the included stands to each 16-inch section and place them vertically on either side of your TV for a wider soundstage.

2 Installation Methods



Image: Depicts the two primary installation methods for the Wohome S111 Pro soundbar. The top image shows the soundbar configured as a single horizontal unit placed beneath a television. The bottom image illustrates the soundbar split into two vertical tower speakers, positioned on either side of a television, demonstrating the surround sound setup.

3.3 Connecting the Subwoofer

Connect the subwoofer to the main soundbar unit using the provided connection cable. Ensure a secure connection for optimal bass performance.



Image: The Wohome S111 Pro 5-inch subwoofer, shown in a room setting, with visual cues indicating sound waves emanating from it. This highlights its role in providing deep bass for an immersive audio experience.

4. CONNECTIVITY OPTIONS

The S111 Pro soundbar offers multiple input options for broad compatibility with various devices.

COMPATIBLE WITH ALMOST ALL YOUR DEVICES



Bluetooth 5.3



Optical



AUX



USB



Image: A detailed view of the rear panel of the Wohome S111 Pro soundbar, highlighting its input ports. These include DC IN for power, Optical, AUX, and USB for wired connections, and SUB SPK/LED and SPK/LED for speaker connections. A hand holding a smartphone is shown with a Bluetooth icon, indicating wireless connectivity.

4.1 Bluetooth 5.3 Connection

Bluetooth 5.3 provides a stable and low-latency wireless connection for streaming audio from your smartphone, tablet, or other Bluetooth-enabled devices.

1. Power on the soundbar.
2. Press the 'BT' button on the remote or soundbar to switch to Bluetooth mode. The LED indicator will flash.
3. On your device, enable Bluetooth and search for 'S111 Pro'.
4. Select 'S111 Pro' to pair. Once connected, the LED indicator will turn solid.

Surround Sound System

4 high-power full-range speakers, 1 large-size subwoofer and 2 bass reflex tubes from a surround sound system, the sound is enough to cover the entire living room or bedroom.



Image: The Wohome S111 Pro soundbar positioned below a TV, illustrating a Bluetooth 5.3 wireless connection. A Bluetooth icon with a smartphone indicates seamless audio streaming from mobile devices to the soundbar.

4.2 Optical Connection

For high-quality digital audio, connect your TV or other devices using the optical cable.

1. Connect one end of the optical cable to the 'Optical Out' port on your TV and the other end to the 'Optical In' port on the soundbar.
2. Press the 'Optical' button on the remote or soundbar to select Optical input.
3. Ensure your TV's audio output settings are configured to PCM (or SPDIF) and external speaker.

Bluetooth 5.3

Bluetooth 5.3 has twice the transmission speed of Bluetooth 5.0, more stable transmission and lower latency.

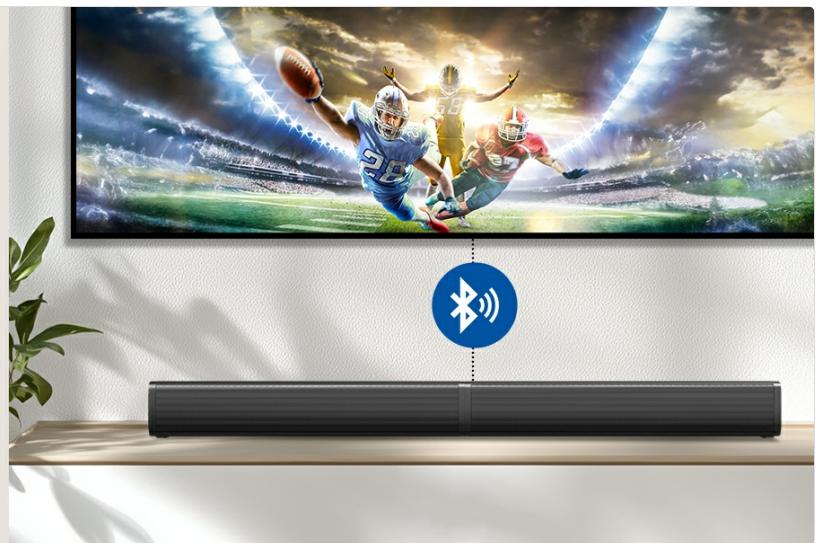


Image: The Wohome S111 Pro soundbar connected to a television using an optical cable. A fiber optic icon visually represents the digital audio connection, emphasizing the high-quality audio transmission.

4.3 AUX Connection

Use the AUX input for analog audio devices.

1. Connect one end of the 3.5mm audio cable to the 'AUX Out' port on your device and the other end to the 'AUX In' port on the soundbar.
2. Press the 'AUX' button on the remote or soundbar to select AUX input.
3. For some TVs, you may need to go to audio settings, select analog output, then select 'Variable' and save the setting.



Optical Connection

Please change TV audio output to PCM (or SPDIF and optical) and external speaker

Image: The Wohome S111 Pro soundbar connected to a television using an AUX cable. A 3.5mm audio jack icon illustrates the analog audio connection, suitable for a wide range of devices.

4.4 USB Input

The USB input supports U disk playback and software updates. Insert a USB drive into the USB port on the soundbar. The soundbar will automatically switch to USB mode and begin playback if compatible audio files are detected.

5. OPERATING THE SOUNDBAR

5.1 Power On/Off

Press the power button on the soundbar or remote control to turn the unit on or off.

5.2 Volume Control

Use the Volume Up (+) and Volume Down (-) buttons on the remote or soundbar to adjust the master volume. The subwoofer bass level can be adjusted separately using the remote control.

5.3 Preset Sound Modes

The S111 Pro features three optimized sound modes for different content types:

- **Music Mode:** Provides balanced sound for general music listening.
- **Movie Mode:** Delivers powerful bass and enhanced surround effects for an immersive cinematic experience.
- **News Mode:** Enhances vocal clarity, making dialogue easier to understand.

Press the corresponding mode button on the remote control to switch between these modes.

DSP WITH 3 PRESET SOUND MODES

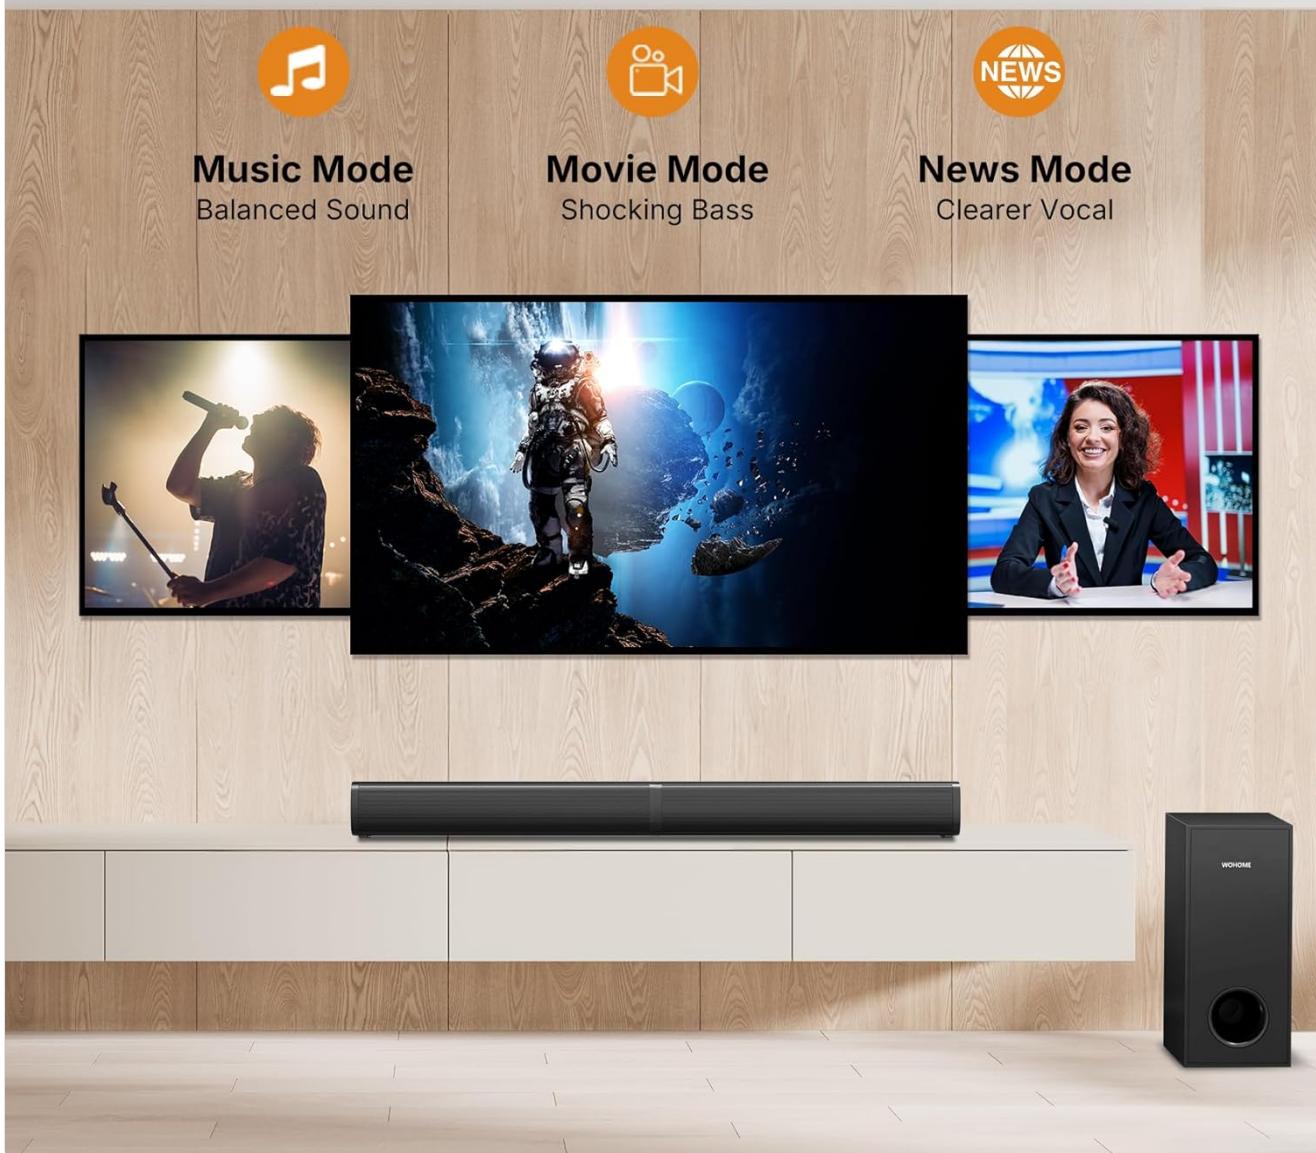


Image: The Wohome S111 Pro soundbar displayed with three distinct sound modes: Music Mode, offering balanced sound; Movie Mode, providing shocking bass; and News Mode, designed for clearer vocals. Each mode is accompanied by a visual representation on a TV screen, demonstrating its intended use case.

6. ADJUSTING TV SETTINGS FOR OPTICAL CABLE

When using the optical connection, it is crucial to configure your TV's audio output settings correctly to ensure sound is transmitted to the soundbar and to avoid issues like no sound or distorted audio. Follow these general steps:

- 1. Access Sound Settings:** Navigate to your TV's 'Settings' menu, then find 'Sound' or 'Audio Output'.
- 2. Select Optical Output:** Choose 'Optical' as the sound output method.
- 3. Set Digital Audio Output Format:** Within the sound settings, locate 'Digital Audio Output Format' or similar. Select 'PCM' or 'Stereo Sound'. Avoid 'Bitstream' or 'Dolby Digital' if your soundbar does not explicitly support them, as this can lead to no sound.
- 4. Disable Dolby/DTS:** To prevent silent or noisy output, especially from streaming apps (Netflix, Amazon Prime Video, HBO, Hulu, YouTube, etc.), it is recommended to disable Dolby/DTS on your TV. Look for options like 'Dolby Digital' or 'DTS' and set them to 'Off' or 'PCM'.

How to adjust TV settings with optical cable?

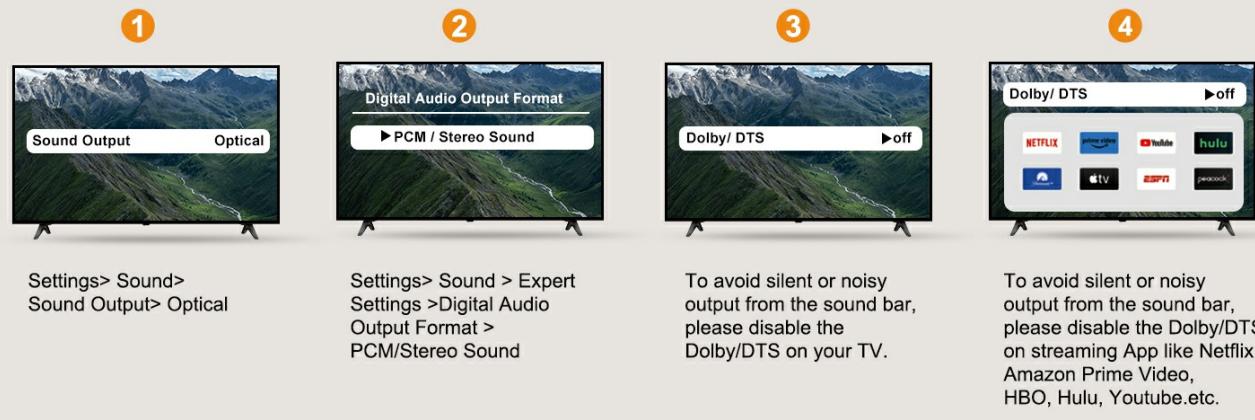


Image: A visual guide demonstrating four steps to properly adjust TV settings for an optical cable connection with the soundbar. It shows navigating TV menus to select 'Optical' as sound output, setting 'Digital Audio Output Format' to 'PCM/Stereo Sound', and disabling Dolby/DTS settings to ensure proper audio playback from various sources, including streaming services.

7. MAINTENANCE

To ensure the longevity and optimal performance of your Wohome S111 Pro soundbar, follow these maintenance guidelines:

- Cleaning:** Use a soft, dry cloth to clean the surfaces of the soundbar and subwoofer. Do not use liquid cleaners or abrasive materials, as they may damage the finish.
- Ventilation:** Ensure that the soundbar and subwoofer have adequate ventilation. Do not block any ventilation openings.
- Environment:** Avoid placing the unit in direct sunlight, near heat sources, or in environments with high humidity or excessive dust.
- Power:** Disconnect the power adapter from the wall outlet if the unit will not be used for an extended period.

8. TROUBLESHOOTING

If you encounter issues with your soundbar, refer to the following common troubleshooting steps:

Problem	Possible Cause / Solution
No sound from the soundbar	<ul style="list-style-type: none">Ensure the soundbar is powered on and the correct input source (Bluetooth, Optical, AUX, USB) is selected.Check all cable connections (power, audio cables) are secure.Increase the volume on both the soundbar and the connected device (TV, phone).If using Optical, verify TV audio output is set to PCM/Stereo and Dolby/DTS is disabled.Try a different audio cable or input source to isolate the issue.

Problem	Possible Cause / Solution
Distorted or poor sound quality	<ul style="list-style-type: none"> Check if the audio source is of good quality. Reduce the volume to prevent distortion. Ensure cables are not damaged or loosely connected. Adjust bass and treble settings if available. Move the soundbar away from other electronic devices that might cause interference.
Bluetooth pairing issues	<ul style="list-style-type: none"> Ensure the soundbar is in Bluetooth pairing mode (LED flashing). Make sure the soundbar is within the effective range (approx. 10 meters) of the Bluetooth device. Clear the Bluetooth pairing list on your device and try pairing again. Turn off and on both the soundbar and your Bluetooth device. Ensure no other Bluetooth devices are actively connected to the soundbar.
Remote control not working	<ul style="list-style-type: none"> Check and replace the batteries in the remote control. Ensure there are no obstructions between the remote and the soundbar's sensor. Point the remote directly at the soundbar.

9. SPECIFICATIONS

Feature	Detail
Model Name	S111 Pro
Speaker Type	Surround Sound
Mounting Type	Tabletop Mount
Product Dimensions	32"D x 3.6"W x 2.9"H
Item Weight	12.51 pounds
Speaker Maximum Output Power	100 Watts
Frequency Response	16 KHz
Connectivity Technology	Auxiliary, Bluetooth 5.3, Optical, USB
Audio Output Mode	Surround

10. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the official Wohome brand store or contact Wohome customer service directly. Details regarding specific warranty periods and terms are typically provided with your purchase documentation or on the manufacturer's website.

You can visit the official Wohome store for additional product information and support resources:[Wohome Store on Amazon](#)

© 2024 Wohome. All rights reserved.