

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [HIFI WALKER](#) /

› [HIFI WALKER H2 Mini MP3 Player User Manual](#)

HIFI WALKER H2 Mini

HIFI WALKER H2 Mini MP3 Player User Manual

Model: H2 Mini

1. INTRODUCTION

This manual provides detailed instructions for the operation and maintenance of your HIFI WALKER H2 Mini MP3 Player. Please read this manual thoroughly before using the device to ensure proper functionality and to maximize your listening experience.

Package Contents:

- 1 x H2 Mini MP3 Player (with clip)
- 1 x Micro SD card (64GB included)
- 1 x USB Type-C cable
- 1 x User manual

2. PRODUCT OVERVIEW

The HIFI WALKER H2 Mini is a compact, high-resolution audio player designed for portable use. It features a professional ESS9218PC DSD DAC chip for lossless audio decoding, a 1.54-inch touchscreen, and Bluetooth with aptX support.



Image: Front and back view of the HIFI WALKER H2 Mini MP3 Player, showcasing its compact design and wearable clip.

Key Features:

- Hi-Res Audio Quality:** Equipped with an ESS9218PC DSD DAC chip for lossless audio decoding, supporting DSD256 and PCM 384kHz.
- Ultra-Portable Design:** Weighs approximately 60g, features a 1.54-inch touch display, and includes a built-in clip for secure attachment during activities.
- Advanced Bluetooth:** Supports aptX, LDAC, and UAT for high-quality, low-latency wireless audio transmission.
- Expandable Storage:** Comes with a 64GB microSD card and supports expansion up to 512GB.
- Long Battery Life:** Provides up to 10 hours of continuous Hi-Res playback on a 2-hour charge.



Image: The H2 Mini MP3 Player resting in the palm of a hand, illustrating its small and ergonomic size.

Device Components:

- **1.54-inch Touchscreen:** For navigation and control.
- **ALPS Scroll Wheel:** For volume adjustment and menu navigation.
- **3.5mm Headphone Jack:** For wired audio output.
- **USB Type-C Port:** For charging and data transfer.
- **MicroSD Card Slot:** For expandable storage.
- **Built-in Clip:** For attaching the player to clothing or accessories.



Image: An exploded diagram showing the internal and external components of the H2 Mini MP3 Player.

3. SETUP

3.1 Charging the Device

Before first use, fully charge your H2 Mini. Connect the included USB Type-C cable to the player's charging port and the other end to a USB power adapter (not included) or a computer's USB port. The battery indicator on the screen will show charging status. A full charge typically takes about 2 hours.



Image: The H2 Mini MP3 Player connected via its USB-C cable, illustrating the charging process.

3.2 Inserting the MicroSD Card

The H2 Mini comes with a 64GB MicroSD card pre-installed or included separately. To insert or replace the card, locate the MicroSD card slot on the side of the player. Gently push the card into the slot until it clicks into place. To remove, push the card again until it springs out.



Image: A MicroSD card being inserted into the H2 Mini MP3 Player, demonstrating the expandable storage feature.

3.3 Transferring Music Files

Connect the H2 Mini to your computer using the USB Type-C cable. The player will appear as a removable disk drive. You can then drag and drop your music files directly into the appropriate folders on the MicroSD card. The player supports various formats including FLAC, DSF, DFF, WAV, APE, AppleLossless, AAC, MP3, WMA, OGG, M4A, and AIF.

Image: The H2 Mini MP3 Player connected to a laptop via USB-C cable, indicating readiness for music file transfer.

4. OPERATING INSTRUCTIONS

4.1 Power On/Off

- **To Power On:** Press and hold the Power button until the screen illuminates.
- **To Power Off:** Press and hold the Power button, then confirm shutdown on the screen.

4.2 Basic Navigation

The H2 Mini features a 1.54-inch touchscreen for intuitive control. Swipe to navigate menus and tap to select options. The ALPS scroll wheel can also be used for precise volume control and menu scrolling.



Image: A finger interacting with the 1.54-inch touchscreen of the H2 Mini, demonstrating its touch control capabilities.

Easy Control with ALPS Scroll Wheel

Adjust music smoothly with a simple twist, enjoying quick, precise control anytime.



Image: A close-up of the ALPS scroll wheel on the H2 Mini, highlighting its 360-degree rotation for smooth control.

4.3 Music Playback

1. From the main menu, select 'Music' or 'Browse Files'.
2. Navigate through your folders or categories (Artist, Album, Genre, etc.).
3. Tap on a song to begin playback.
4. Use the on-screen controls or physical buttons for Play/Pause, Next/Previous Track, and Volume.

4.4 Bluetooth Pairing

To connect to Bluetooth headphones or speakers:

1. Go to 'Settings' from the main menu and select 'Bluetooth'.
2. Turn Bluetooth 'On'.
3. Ensure your Bluetooth device is in pairing mode.
4. The H2 Mini will scan for available devices. Select your device from the list to pair.



Image: The H2 Mini MP3 Player displaying Bluetooth and aptX logos, indicating its wireless audio capabilities.

4.5 Equalizer Settings

Adjust the audio output to your preference using the built-in equalizer:

1. During music playback, access the playback menu.
2. Select 'EQ' or 'Equalizer'.
3. Choose from preset equalizer modes (e.g., Rock, Jazz, Classical, Pop) or customize your own settings.



Image: The equalizer interface on the H2 Mini, showing adjustable frequency bands and genre presets.

4.6 Voice Recording

The H2 Mini supports digital voice recording with a sampling rate of up to 48kHz. Access the 'Voice Recorder' function from the main menu to start, pause, and save recordings.

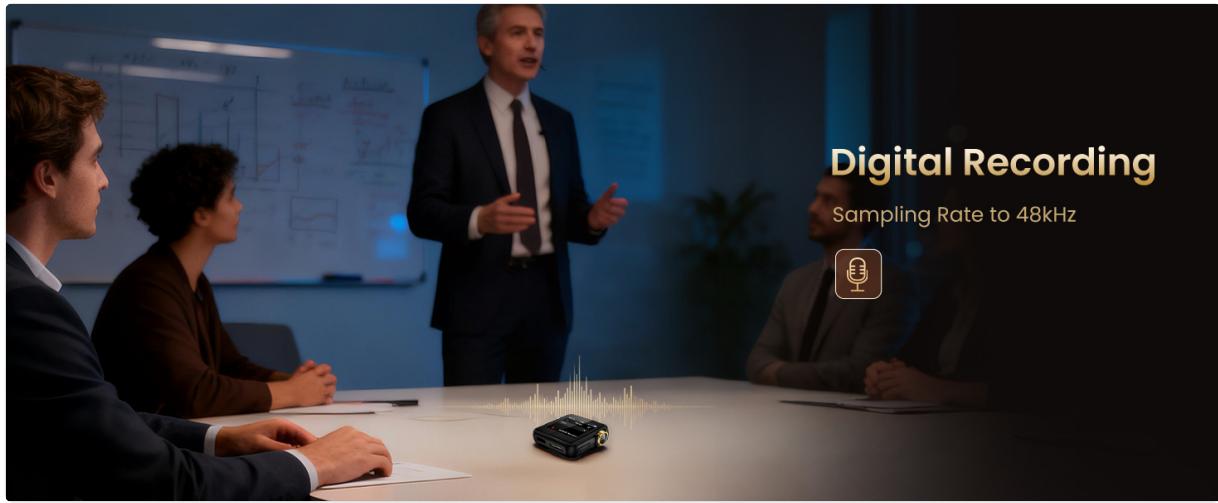


Image: The H2 Mini MP3 Player placed on a conference table, illustrating its digital recording capability during a meeting.

5. MAINTENANCE

5.1 Cleaning

Wipe the device with a soft, dry cloth. Do not use liquid cleaners or solvents, as they may damage the screen or internal components.

5.2 Battery Care

To prolong battery life, avoid exposing the device to extreme temperatures. Charge the device regularly, even if not in frequent use, to prevent deep discharge.

5.3 Firmware Updates

Periodically check the HIFI WALKER official website for any available firmware updates. Updates can improve performance, add new features, or fix bugs. Follow the instructions provided with the firmware update carefully.

6. TROUBLESHOOTING

- Device does not power on:** Ensure the battery is charged. Connect the player to a power source and try again. If the issue persists, perform a hard reset (refer to the full user manual for specific instructions if available).
- No sound:** Check headphone connection (wired or Bluetooth). Ensure volume is not muted or set too low. Verify that the audio files are not corrupted.
- MicroSD card not recognized:** Ensure the card is inserted correctly. Try reinserting the card or using a different compatible MicroSD card. Format the card if necessary (this will erase all data).
- Bluetooth pairing issues:** Ensure both the player and the Bluetooth device are in pairing mode and within range. Disconnect from other Bluetooth devices if connected.
- Device freezes or becomes unresponsive:** Press and hold the Power button to force a restart. If the issue continues, ensure the firmware is up to date.

7. SPECIFICATIONS

Feature	Specification
Model Name	H2 Mini
Product Dimensions	0.59 x 1.77 x 1.97 inches
Item Weight	2.12 ounces
Screen Size	1.54 Inches
Memory Storage Capacity	64 GB (Expandable up to 512 GB)
DAC Chip	ESS9218PC DSD DAC
Audio Formats Supported	FLAC, DSF, DFF, WAV, APE, AppleLossless, AAC, MP3, WMA, OGG, M4A, AIF
Bluetooth Support	APTX, LDAC, UAT, SBC, AAC
Connectivity Technology	Bluetooth, Wi-Fi (for potential future features/updates)
Battery Life	Up to 10 hours (Hi-Res playback)
Charging Time	Approx. 2 hours

Special Features

Built-In Clip, Equalizer, Hi-Res Audio, Touch Screen, Voice Recorder


8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or visit the official HIFI WALKER website. The manufacturer typically provides a limited warranty against defects in materials and workmanship.

For further assistance, please contact HIFI WALKER customer service through their official channels.

© 2025 HIFI WALKER. All rights reserved.

Related Documents - H2 Mini

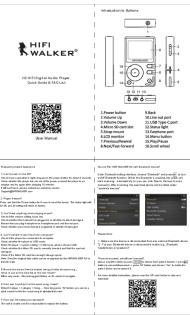 A black and white photograph of the HIFI WALKER H2 Digital Audio Player. The device is rectangular with a small screen at the top, a central touch-sensitive area, and two circular buttons on the right side. The HIFI WALKER logo is visible on the top left of the device.	<p><u>HIFI WALKER H2 Digital Audio Player User Manual</u></p> <p>User manual for the HIFI WALKER H2 portable lossless music player, covering setup, operation, settings, specifications, and troubleshooting.</p>
 A black and white photograph of the HIFI WALKER H2 Digital Audio Player Quick Guide and FAQ. It is a multi-page document with text, diagrams, and QR codes. The HIFI WALKER logo is at the top left.	<p><u>HIFI WALKER H2 Digital Audio Player Quick Guide and FAQ</u></p> <p>A quick guide and frequently asked questions for the HIFI WALKER H2 Digital Audio Player, covering button functions, troubleshooting, and Bluetooth pairing.</p>
 A black and white photograph of the HIFI WALKER H2 Touch Pro Hi-Res Player User Manual. It is a multi-page document with text, diagrams, and QR codes. The HIFI WALKER logo is at the top left.	<p><u>HIFI WALKER H2 Touch Pro Hi-Res Player User Manual</u></p> <p>Comprehensive user manual for the HIFI WALKER H2 Touch Pro Hi-Res Player, detailing its features, operation, functions, system settings, connectivity, troubleshooting, and technical specifications.</p>
 A black and white photograph of the HIFI WALKER H2 Digital Audio Player User Manual. It is a multi-page document with text, diagrams, and QR codes. The HIFI WALKER logo is at the top left.	<p><u>HIFI WALKER H2 Digital Audio Player User Manual</u></p> <p>Comprehensive user manual for the HIFI WALKER H2 Digital Audio Player, covering setup, features, specifications, and troubleshooting.</p>



[HIFI WALKER H2: Manuale Utente e Guida Rapida](#)

Manuale completo per il lettore audio digitale HIFI WALKER H2. Scopri come configurare, utilizzare le funzioni Bluetooth, le specifiche tecniche e le soluzioni ai problemi comuni.



[HIFI WALKER H2 Touch User Manual: Hi-Res Digital Audio Player Guide](#)

Explore the features and operations of the HIFI WALKER H2 Touch Hi-Res Digital Audio Player with this comprehensive user manual. Learn about music playback, recording, wireless connectivity, and audio settings.