

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [GREENKINDER](#) /
- › [GREENKINDER Kids Instant Print Camera X6 User Manual](#)

## GREENKINDER X6

# GREENKINDER Kids Instant Print Camera X6 User Manual

Model: X6

[Setup](#) [Operation](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Support](#)

## INTRODUCTION

---

This manual provides instructions for the safe and effective use of your GREENKINDER Kids Instant Print Camera X6. Please read this manual thoroughly before using the camera and retain it for future reference.

# Multifunctional Kids Instant Print Camera



Image: Overview of the GREENKINDER Kids Instant Print Camera X6, highlighting its various functions such as 2.4-inch IPS screen, 1080P video, print photo, playback, time-lapse, burst shooting, multi-frames & filters, 16X zoom, puzzle games, and music player.

## SETUP

### 1. Charging the Battery

The camera is equipped with a 1000 mAh Lithium Polymer battery. Before first use, fully charge the camera using the provided USB-C cable. Connect the cable to the camera's USB-C port and a compatible USB power adapter (not included) or computer USB port. The charging indicator light will illuminate, typically red, and turn off or change color when fully charged.

# Easy to use



01



02



03



Image: The camera screen displays a charging icon. Below it are the included accessories: three rolls of printing paper, colored felt-tip pens, a lanyard, a 32GB SD card, and a USB-C charging cable.

## 2. Inserting the SD Card

The camera supports a 32GB SD card (included). Locate the SD card slot, usually on the side or bottom of the camera. Insert the SD card with the metal contacts facing down until it clicks into place. This card stores all photos, videos, and MP3 files.

## 3. Installing Printing Paper

The camera uses thermal printing paper. Follow these steps to install a new roll:

1. Push up the part with the lens to open the paper slot.
2. Install the printing paper roll into the compartment, ensuring the paper feeds from the bottom and the leading edge is positioned correctly for the printer mechanism.
3. Close the two parts of the camera securely until it clicks.
4. Access the camera functions and press the print button to test the paper feed.

# How to install paper

01



02



**Please install the printing paper correctly according to the picture, otherwise the picture will not be printed.**

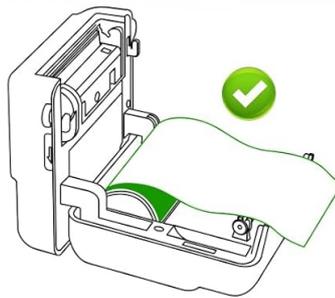


Image: Step-by-step guide on installing the printing paper. It shows opening the camera, placing the paper roll, closing the camera, and a diagram illustrating the correct paper orientation (green checkmark) versus incorrect (red cross).

## 4. Power On/Off and Initial Settings

Press and hold the Power/Menu button to turn the camera on or off. Upon first use, you may need to set the language, date, and time through the camera's settings menu. Navigate using the directional buttons and confirm with the OK button.

## OPERATION

### 1. Taking Photos and Instant Printing

- Turn on the camera.
- Select the photo mode.
- Frame your shot using the 2.4-inch screen.
- Press the "Shoot" button to capture the image.
- If instant print is enabled, a black and white photo will print immediately.
- You can also choose to print photos later from the gallery.

# Kids Camera Instant Print



Image: The camera's rear screen shows a color photo of a child with a dog. Surrounding the camera are several black and white instant prints, demonstrating the camera's printing capability and the use of an SD card for storage.

## 2. Video Recording

- Switch to video recording mode.
- Press the "Shoot" button to start recording 1080P HD video.
- Press the "Shoot" button again to stop recording.
- Videos are saved to the SD card.

# 1080P HD Video Recording



Image: The camera's screen displays a video recording in progress. Below, examples of 4x, 8x, and 16x digital zoom are shown, illustrating the camera's video and zoom capabilities.

### 3. Digital Zoom

The camera features up to 16X digital zoom. Use the zoom buttons (often marked with '+' and '-') to adjust the magnification before or during photo/video capture.

### 4. Flash Function

The camera includes a flash for low-light conditions. You can toggle the flash on or off through the camera settings or a dedicated button, if available.



Image: The camera's flash function is demonstrated with "Flash ON" and "Flash OFF" indicators. Also shown is the MP3 player interface on the camera screen, playing music.

## 5. Special Features

- **Time-lapse:** Set the camera to capture photos at predefined intervals (e.g., 3s, 5s, 10s).
- **Continuous Shooting (Burst Mode):** Take multiple photos in quick succession.
- **Multi-Frames & Filters:** Apply various decorative frames and color filters to your photos.
- **Puzzle Games:** The camera includes built-in games for entertainment.
- **MP3 Player:** Play music files stored on the SD card.

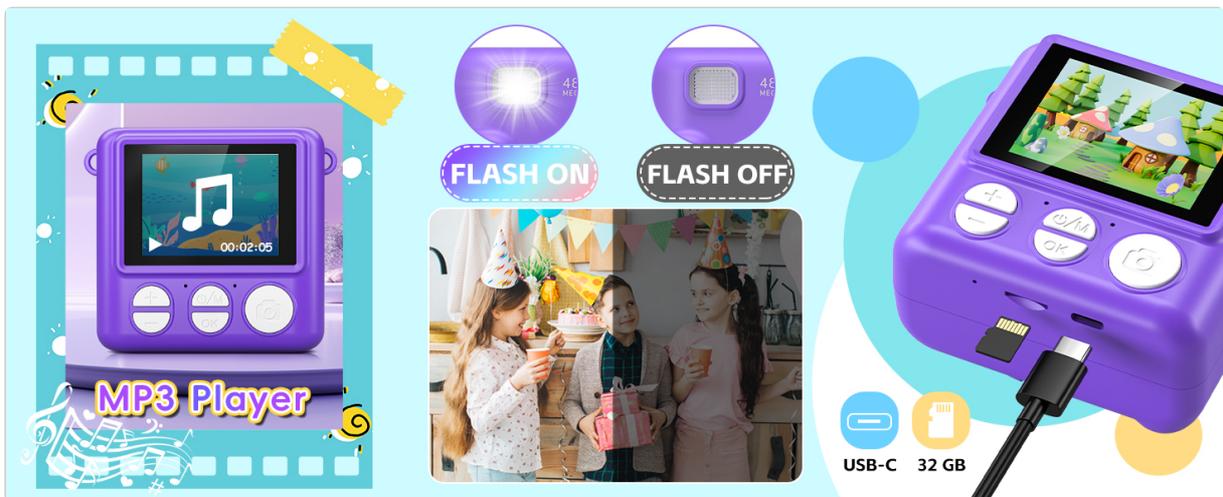


Image: Demonstrations of the camera's burst shooting mode, time-lapse photography with 3s, 5s, and 10s options, and the 16X digital zoom feature.



Image: The camera screen displays icons for five different puzzle games. Adjacent to this, a scene of children playing is shown within a video recording frame, indicating the 1080P HD video recording capability.

## 6. Reviewing and DIY Photos

Access the photo/video gallery to review your captured media. Printed black and white photos can be used for DIY painting and creative activities with the included felt-tip pens.



Image: A child is shown decorating instant print photos with colored pens, demonstrating the DIY aspect of the camera's output.

## MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the camera body and screen. Do not use liquid cleaners or abrasive materials.
- **Storage:** Store the camera in a cool, dry place away from direct sunlight and extreme temperatures. Remove the SD card if storing for extended periods.
- **Paper Replacement:** Always use thermal printing paper designed for this camera. Refer to the "Installing Printing Paper" section for instructions.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the camera regularly, even if not in use, to maintain battery health.

# Safe Printing Paper

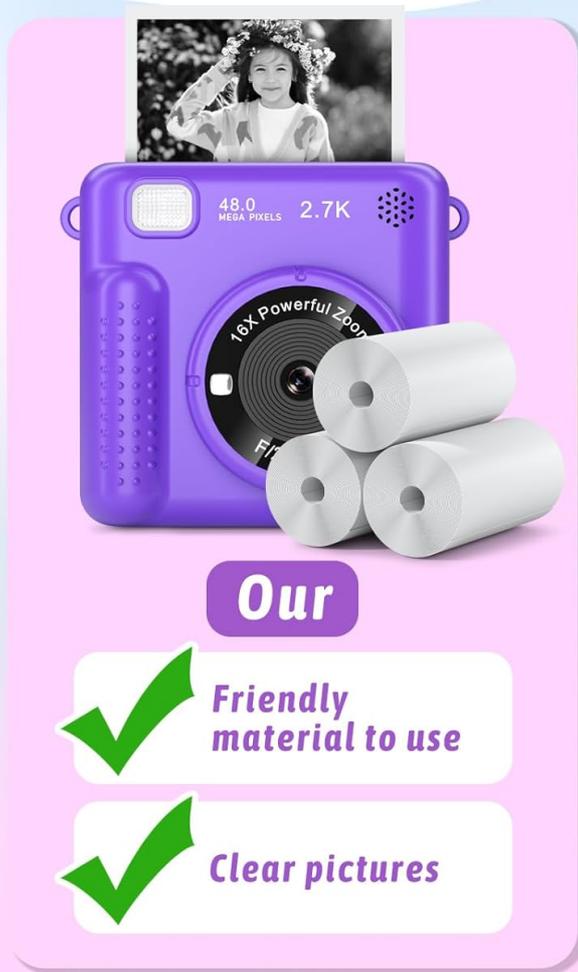


Image: A comparison highlighting the use of safe, friendly, and clear printing paper for the GREENKINDER camera, contrasting it with toxic, smelly, or blurred image paper from other sources.

## TROUBLESHOOTING

- **Camera not turning on:** Ensure the battery is charged. Connect the camera to a charger and try again.
- **Camera not charging:** Check the USB-C cable and charger connection. Try a different USB port or power adapter. If the issue persists, the battery may be faulty (refer to support).
- **Photos are blurry or unclear:** Ensure the lens is clean. Check lighting conditions; strong sunlight can affect thermal print quality. For best results, use in moderate light.
- **Printing issues (no print, blank paper):** Verify that the printing paper is installed correctly and not upside down. Ensure there is enough paper in the compartment.
- **SD card not recognized:** Reinsert the SD card. Ensure it is properly formatted (FAT32).
- **Camera freezes:** Press and hold the power button for 10-15 seconds to force a restart.

## SPECIFICATIONS

<b>Model Name</b>	X6
-------------------	----

<b>Brand</b>	GREENKINDER
<b>Product Dimensions</b>	3.1 x 3.1 x 1.96 inches
<b>Item Weight</b>	14.6 ounces
<b>Batteries</b>	1 Lithium Polymer battery (included)
<b>Special Feature</b>	Time-lapse
<b>Film Format Type</b>	Instant (Thermal)
<b>Included Components</b>	Camera Body & Accessories (Printing paper, felt-tip pens, lanyard, 32GB SD card, USB-C cable)
<b>Film Color</b>	Black and White
<b>Compatible Devices</b>	Personal Computer (for data transfer)
<b>Min Shutter Speed</b>	1/60 seconds
<b>Shutter Type</b>	Rolling Shutter

## WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official GREENKINDER website. Keep your purchase receipt as proof of purchase.