

BOBLOV W1-32g

BOBLOV W1 1080P Body Camera User Manual

MODEL: W1-32G

Brand: BOBLOV

Product Overview

The BOBLOV W1 Body Camera is a compact and versatile recording device, perfect for capturing moments on the go. Its lightweight design and simple operation make it suitable for a wide range of personal and professional uses. This manual provides essential information on setting up, operating, and maintaining your W1 Body Camera.



Image: The BOBLOV W1 Body Camera, showcasing its compact size, along with the included 128GB microSD card and USB card reader.

What's in the Box

Please check the contents of your package to ensure all items are present:

- 1 x W1 Body Camera
- 1 x USB Cable
- 1 x Card Reader
- 1 x Small Clip
- 1 x User Manual

Image: A visual representation of all items included in the BOBLOV W1 Body Camera package.

Setup

1. **Charging the Camera:** Before first use, fully charge the camera. Connect the camera to a USB power source using the provided USB cable. The indicator light will show charging status. A full charge typically takes approximately 2

hours. The camera supports recording while charging.

2. **Inserting the MicroSD Card:** The camera comes with a 32GB microSD card. Locate the card slot on the side of the camera and gently insert the microSD card until it clicks into place. Ensure the card is inserted correctly to avoid damage.



Wearable W1 Body Camera

For delivery, cooking, construction,
and outdoor work recording

Image: The BOBLOV W1 Body Camera being charged via its USB port.



Image: Detail of the camera's side, highlighting the card slot and USB port for setup.

Operating Instructions

The W1 Body Camera is designed for straightforward operation with its intuitive side sliding buttons.



Image: A detailed diagram showing the various buttons and ports on the BOBLOV W1 Body Camera for easy identification.

- Power On/Off:** To power on the camera, slide the ON/OFF switch to the 'ON' position. The indicator light will illuminate. To power off, slide the switch to the 'OFF' position.
- Video Recording:** With the camera powered on, slide the 'Video' button to start recording. The indicator light will change to confirm recording is in progress. Slide the button again to stop recording. The camera supports 1080P resolution and features loop recording, automatically overwriting older files when memory is full.
- Taking Photos:** While the camera is on, press the 'Photo' button to capture a still image.

4. **Audio Recording:** To record audio only, slide the 'Audio' button. Slide it again to stop.
5. **Playback Files:** To view recorded files, connect the camera to a computer using the provided USB cable. The camera will appear as a removable disk drive. Alternatively, remove the microSD card and insert it into the included card reader, then connect the card reader to your computer.


Explore More Use Ways



Delivery Man



Security

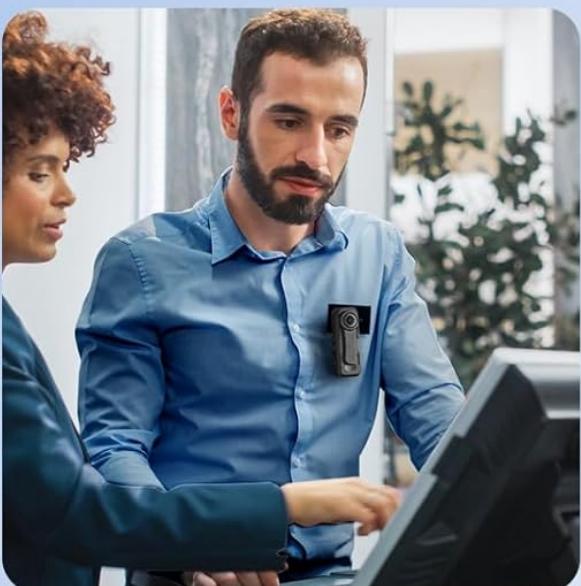

Service Job



Daily Recording



Image: Demonstrates two ways to access and play back files: direct USB connection or via the card reader.

The BOBLOV W1 Body Camera is suitable for various applications, including delivery services, security, service jobs, and

daily recording for personal safety or memory keeping.

Packaging Lists



- 1 W1 Body Camera
- 2 Card Reader
- 3 User Manual
- 4 A1 Micro SD Card
- 5 Small Clip
- 6 USB Cable

Image: Examples of how the BOBLOV W1 Body Camera can be used in different daily and professional settings.

Maintenance

- **Cleaning:** Use a soft, dry cloth to clean the camera body. For the lens, use a specialized lens cleaning cloth and solution. Avoid harsh chemicals or abrasive materials.

- **Storage:** Store the camera in a cool, dry place away from direct sunlight and extreme temperatures. When storing for extended periods, ensure the battery is partially charged (around 50%) to prolong its lifespan.
- **Battery Care:** To maintain battery health, avoid fully discharging the battery frequently. Recharge the camera regularly, even if not in active use.

Troubleshooting

Problem	Possible Solution
Camera does not turn on.	Ensure the battery is charged. Connect to a power source and try again. Check the ON/OFF switch position.
Cannot record video/audio.	Check if the microSD card is inserted correctly and has sufficient free space. The camera features loop recording, but a full card might prevent new recordings if the loop function is off or if there's a file system error. Try reformatting the card (this will erase all data).
Cannot view files on computer.	Ensure the USB cable is securely connected. Try a different USB port or cable. If using the card reader, ensure the card is properly inserted into the reader and the reader into the computer. Some users reported needing to download specific software for date configuration, ensure your computer's drivers are up to date.
Poor video quality.	Ensure the lens is clean and free from smudges. Verify that the recording resolution is set to 1080P. Ensure adequate lighting conditions.

Specifications

Feature	Detail
Brand Name	BOBLOV
Item Weight	5.6 ounces
Package Dimensions	5.43 x 3.66 x 1.46 inches
Item model number	W1-32g
Batteries	1 Lithium Polymer batteries required. (included)
Color Name	Black
Special Features	Lightweight
Photo Sensor Technology	CMOS
Video Capture Resolution	1080p
Maximum Focal Length	28
Flash Memory Type	Micro SD

Feature	Detail
Video Capture Format	MOV
Connectivity Technology	USB
Camcorder type	Video Camera

Warranty and Support

BOBLOV provides product coverage for 24 months. For any technical assistance or inquiries, you can expect a quick response within 24 hours and lifetime technical support.

For further support and to explore more BOBLOV products, please visit the official BOBLOV Store:

[Visit the BOBLOV Store](#)

© 2024 BOBLOV. All rights reserved.