



Manuals.plus /

› jovant /

› jovant Cordless Pressure Washer and Handheld Vacuum Instruction Manual

jovant Cordless Pressure Washer and Handheld Vacuum

jovant Cordless Pressure Washer and Handheld Vacuum Instruction Manual

Model: Cordless Pressure Washer and Handheld Vacuum (B0DCFZ2V78)

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your jovant Cordless Pressure Washer and Handheld Vacuum. Please read all instructions carefully before use and retain this manual for future reference.

SAFETY INFORMATION

Always wear appropriate personal protective equipment (PPE) such as safety glasses and gloves when operating the pressure washer. Ensure the work area is clear of obstructions and other individuals. Do not point the spray nozzle at people or animals. Keep the device away from children. Disconnect the battery before performing any maintenance or cleaning. Use only the provided battery and charger.

PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- 1x Cordless Pressure Washer
- 1x Handheld Vacuum (cordless)
- 1x 4A Lithium-ion Battery
- 1x 2.4A Charger
- 1x Hose Quick Connector
- 1x Faucet Quick Connector
- 1x 16ft 1/2in Inlet Water Hose
- 1x Foam Pot
- 1x Mesh Filter
- 1x 3-in-1 Retractable Cleaning Brush
- 1x Quick Dry Towel

- 1x 13L Folding Bucket
- 1x Long Hose
- 1x Long Nozzle
- 1x Brush Nozzle
- 1x Washable Filter (for vacuum)
- 1x Power Line (for vacuum charger)



Figure 1: Overview of all included components in the jovant Cordless Pressure Washer and Handheld Vacuum kit.

SETUP

1. **Attach Quick Connectors:** Securely attach the hose quick connectors to both ends of the 16ft inlet water hose.
2. **Install Filter:** Connect the mesh filter to one end of the inlet water hose. This end will be submerged in your water source.
3. **Connect to Pressure Washer:** Attach the other end of the inlet water hose (with quick connector) to the pressure washer's inlet port.
4. **Attach Nozzle:** Select your desired nozzle (long nozzle, brush nozzle, or foam pot) and attach it to the pressure washer.
5. **Insert Battery:** Fully charge the 4A Lithium-ion battery using the provided 2.4A charger. Once charged, insert the battery into the pressure washer.



Figure 2: Visual guide demonstrating the assembly steps for the pressure washer.



2 WAYS TO DRAW WATER

The water source can be transported through the buckets we provide, while the water source can be directly placed into the water source by adding a filter to the water pipe



Figure 3: The pressure washer can draw water from a bucket using the mesh filter or connect directly to a faucet using the faucet quick connector.

Your browser does not support the video tag.

Video 1: A brief demonstration of the JOVANT Cordless Pressure Washer setup and initial use.

OPERATING INSTRUCTIONS

Cordless Pressure Washer

- 1. Prepare Water Source:** Submerge the filtered end of the inlet hose into a bucket of water (e.g., the 13L folding bucket) or connect the faucet quick connector to a garden faucet.
- 2. Select Nozzle:** Choose the appropriate nozzle for your cleaning task. The 2-in-1 nozzle provides various spray patterns. For applying soap, attach the foam pot filled with detergent.
- 3. Power On:** Press and hold the power button on the pressure washer to begin operation.
- 4. Adjust Pressure/Spray:** The 2-in-1 nozzle allows for adjustment of spray patterns. The pressure washer delivers 350 PSI with a maximum jet speed of 3.3 liters per minute.
- 5. Cleaning Applications:** Ideal for cleaning cars, homes, boats, gardens, and windows.

Wireless Free



Figure 4: The cordless pressure washer in action, cleaning a car exterior.



FUNCTION DESCRIPTION



Figure 5: Examples of pressure washer applications, such as rinsing fences, flushing boats, and cleaning outdoor carpets.

Your browser does not support the video tag.

Video 2: A seller demonstration highlighting the ease of use and effectiveness of a portable pressure washer for various cleaning tasks.

Handheld Vacuum

1. **Power On:** Press and hold the on/off button for 1 second to activate the low-speed suction mode.
2. **Adjust Suction:** Press and hold the button for 2 seconds to switch to high-speed mode for stronger suction (12000Pa).
3. **Power Off:** Press and hold the button for 3 seconds to turn off the device.
4. **Cleaning Applications:** Effectively cleans stubborn dust, food residue, particles, and pet hair inside cars, on sofas, beds, and carpets.



Figure 6: Components of the handheld vacuum, showing the transparent dust cup, washable filter, and handle design.

MAINTENANCE

Battery Charging

- Use the provided 2.4A charger to charge the 4A Lithium-ion battery.
- Ensure the battery is fully charged before extended use for optimal performance.

Filter Cleaning

- The handheld vacuum includes a washable filter. Regularly remove and clean the filter to maintain optimal suction power.
- The pressure washer's inlet hose has a mesh filter. Periodically check and clean this filter to prevent debris from entering the pump.

TROUBLESHOOTING

- **Low Pressure/Suction:** Check if the battery is fully charged. Ensure all hose connections are secure and there are no kinks in the hose. Clean the mesh filter on the pressure washer inlet or the washable filter in the vacuum.

- **No Power:** Verify the battery is correctly inserted and fully charged. Ensure the power button is pressed correctly.
- **Water Leakage:** Check all quick connectors and ensure they are tightly secured. Inspect O-rings for damage.

SPECIFICATIONS

Feature	Specification
Brand	jovant
Power Source	Battery Powered
Pressure Washer PSI	350 PSI
Pressure Washer Max Jet Speed	3.3 liters per minute
Handheld Vacuum Suction	12000Pa
Battery Type	Lithium Ion (4A)
Hose Length	16 Feet
Item Weight	11 Pounds
Product Dimensions	24"L x 18.2"W x 58"H