



Manuals.plus /

› Edillas /

› Edillas Kids Digital Watch User Manual

Edillas 8206B

Edillas Kids Digital Watch User Manual

Model: 8206B

INTRODUCTION

Thank you for choosing the Edillas Kids Digital Watch. This watch is designed for children aged 4-12, offering a range of useful functions including time display, alarm, stopwatch, calendar, and colorful LED backlighting. Its durable and waterproof design makes it suitable for daily wear and outdoor activities. Please read this manual carefully to understand how to operate and maintain your watch.

SAFETY INFORMATION

- This watch is designed for children aged 4 and older.
- Do not attempt to open the watch case or replace the battery yourself, as this may damage the watch and void the warranty.
- Avoid exposing the watch to extreme temperatures (hot or cold) for prolonged periods.
- Keep the watch away from strong magnetic fields.
- While the watch is water-resistant, avoid pressing any buttons underwater to prevent water ingress.

PRODUCT OVERVIEW

Familiarize yourself with the buttons and display of your Edillas Kids Digital Watch:

FEATURE SET



Figure 1: Watch Buttons and Functions

- **LIGHT Button (Top Left):** Activates the backlight and changes light colors.
- **MODE Button (Bottom Left):** Cycles through different modes (Time, Alarm, Stopwatch).
- **START Button (Top Right):** Starts/stops stopwatch, adjusts settings in setting mode.
- **RESET Button (Bottom Right):** Resets stopwatch, adjusts settings in setting mode.

SETUP AND OPERATION

1. Setting Time and Date

1. From the Time Display Mode, press the **MODE** button three times until the seconds start flashing.
2. Press the **RESET** button to cycle through the setting options: Seconds → Hours → Minutes → Month → Date → Day of Week.
3. Use the **START** button to adjust the flashing value.
4. Once all settings are correct, press the **MODE** button to return to Time Display Mode.

2. Setting the Alarm

1. From the Time Display Mode, press the **MODE** button twice to enter Alarm Mode. The hour digits will flash.
2. Press the **START** button to adjust the alarm hour.
3. Press the **RESET** button to switch to minute setting.
4. Press the **START** button to adjust the alarm minute.
5. Press the **MODE** button to return to Time Display Mode.

To activate/deactivate the alarm: In Time Display Mode, press and hold the **RESET** button, then press the **START** button. The alarm icon will appear/disappear on the display.

3. Using the Stopwatch

1. From the Time Display Mode, press the **MODE** button once to enter Stopwatch Mode.
2. Press the **START** button to begin timing.
3. Press the **START** button again to pause timing.
4. Press the **RESET** button to reset the stopwatch to zero.
5. Press the **MODE** button to return to Time Display Mode.

4. Changing Backlight Colors

The watch features 7 different backlight colors. Press the **LIGHT** button to activate the backlight. Each subsequent press of the **LIGHT** button will cycle through the available colors (blue, green, red, light blue, yellow, purple, white) and a colorful flashing mode.

LUMINOUS DISPLAY

A variety of color LED lights



Figure 2: Luminous Display with Multiple Color Options

5. Switching 12H/24H Format

In Time Display Mode, press the **RESET** button to toggle between 12-hour (with AM/PM indicator) and 24-hour formats.

6. Turning Off Hourly Chime

To turn off the hourly chime: From Time Display Mode, press the **RESET** button and the **MODE** button simultaneously. Repeat this action to turn the hourly chime back on.

MAINTENANCE

Cleaning

Wipe the watch with a soft, damp cloth. Avoid using harsh chemicals or abrasive materials that could damage the watch's finish or display.

Water Resistance

The Edillas Kids Digital Watch is 30M (3 ATM) water resistant, suitable for daily activities such as hand washing, rain, splashes, and brief immersion in cold water. It is not recommended for showering with hot water, diving, or prolonged underwater activities.

Important: Do not press any buttons while the watch is submerged in water, as this can compromise the water resistance seal.



Figure 3: Water Resistance Guidelines

Battery Replacement

The watch uses Japan imported batteries designed for long life. If you experience issues with the battery or movement, please contact customer support for assistance. Do not attempt to replace the battery yourself.

TROUBLESHOOTING

Problem	Possible Cause / Solution
Display is blank or dim.	Battery may be low. Contact customer support for assistance.
Time is inaccurate.	Ensure time and date are set correctly. Refer to "Setting Time and Date" section. If problem persists, contact customer support.
Hourly chime sounds unexpectedly.	The hourly chime function may be active. Refer to "Turning Off Hourly Chime" section to deactivate it.
Water appears inside the watch.	Water resistance may have been compromised, possibly by pressing buttons underwater. Stop using the watch and contact customer support immediately.

SPECIFICATIONS

Feature	Detail
Model Number	8206B
Product Dimensions	8.27 x 0.55 x 0.39 inches (21 x 1.4 x 1 cm)
Item Weight	1.41 ounces (40 grams)
Water Resistance	30M / 3 ATM
Display Type	Digital
Backlight Colors	7 Colors (Blue, Green, Red, Light Blue, Yellow, Purple, White) + Flashing Mode
Functions	Time, Date, Day of Week, Alarm, Stopwatch, Colorful LED Light, 12H/24H Format
Strap Material	Soft TPU
Case Material	Fine Metal Steel Case with 304 Stainless Steel Case Back
Watch Glass Material	High-Transparency Resin
Battery Type	C battery (included)
Applicable Age	Ages 4-12



Figure 4: Watch Dimensions

WARRANTY AND SUPPORT

Edillas is committed to providing reliable quality and satisfactory service. If you encounter any problems with your watch, particularly concerning the battery or movement, please do not hesitate to contact our customer support team. We are ready to assist you with replacements or solutions as needed.

For support, please visit the Edillas store on Amazon or contact us through the platform where you purchased the product.

Online User Manual (PDF): [Download PDF](#)