

ZEGJAW BV-16EG

ZEGJAW Electric Leaf Blower Instruction Manual

MODEL: BV-16EG

Introduction

Thank you for choosing the ZEGJAW BV-16EG Electric Leaf Blower. This powerful, lightweight, and portable corded leaf blower is designed to efficiently clear leaves, debris, and dirt from your yard, pavement, and other outdoor areas. With an airflow of up to 155 MPH and 350 CFM, it provides effective cleaning for various tasks. Please read this manual thoroughly before operation to ensure safe and proper use of your new tool.

Safety Instructions

WARNING: Always follow basic safety precautions when using electric tools to reduce the risk of fire, electric shock, and personal injury.

- **Eye Protection:** Always wear safety glasses or goggles when operating the leaf blower.
- **Hearing Protection:** Wear ear protection during extended use to prevent hearing damage.
- **Secure Clothing:** Do not wear loose clothing, scarves, or jewelry that could get caught in moving parts. Tie back long hair.
- **Keep Area Clear:** Ensure the work area is clear of bystanders, children, and pets.
- **Extension Cord:** Use only outdoor-rated extension cords that are in good condition and of appropriate gauge for the length required. Ensure the cord is securely connected and routed to prevent tripping hazards.
- **Unplug When Not in Use:** Always unplug the leaf blower from the power source before cleaning, servicing, or when not in use.
- **Avoid Wet Conditions:** Do not operate the leaf blower in wet conditions or rain.
- **Inspect Before Use:** Before each use, inspect the blower for any damaged parts. Do not operate if any part is damaged.

Package Contents

Verify that all items are present in the package:

- 1 x ZEGJAW Leaf Blower Body
- 1 x Blowpipe
- 1 x Extension Nozzle
- 1 x User Manual

Setup

1. **Attach the Blowpipe:** Align the blowpipe with the main blower body. Push and twist until it securely snaps into place.
2. **Attach the Extension Nozzle (Optional):** For extended reach or specific tasks, attach the extension nozzle to the end of the blowpipe. Push and twist until it is firmly seated. The adjustable blowpipe allows for use in different height environments.



Image: The ZEGJAW Electric Leaf Blower with its adjustable blowpipe, demonstrating how the two sections of the nozzle connect for varied reach.

3. **Connect Power Cord:** Plug your outdoor-rated extension cord (sold separately) into the short cord of the leaf blower. Utilize the integrated cord holder to prevent accidental disconnection during operation.



Image: A close-up view of the ZEGJAW Electric Leaf Blower's integrated cord holder, designed to secure the extension cord and prevent accidental unplugging.

Operating Instructions

1. **Starting the Blower:** Once assembled and connected to a power source, push the power switch to the 'ON' position to start the blower.



Image: A detailed view of the ZEGJAW Electric Leaf Blower's power switch, indicating its simple on/off operation.

2. **Using the Blower:** Direct the nozzle towards the area you wish to clear. The blower delivers a powerful airflow of 155 MPH and 350 CFM, making it effective for clearing leaves, pine needles, dirt, and other light debris from various surfaces.



Image: A collage showing the ZEGJAW Electric Leaf Blower in action, effectively clearing debris from a yard, pavement, steps, and a lawn.

- 3. Stopping the Blower:** To turn off the blower, push the power switch to the 'OFF' position. Always unplug the unit after use.

Maintenance

- **Cleaning:** After each use, ensure the blower is unplugged. Wipe down the exterior with a damp cloth. Remove any debris from the air intake vents and the nozzle to maintain optimal performance.
- **Storage:** The detachable design allows for easy storage. Disassemble the blowpipe and nozzle from the main body. Store the unit in a dry, secure location away from children.

Troubleshooting

- **Blower does not start:**
 - Ensure the power switch is in the 'ON' position.
 - Check that the extension cord is securely plugged into both the blower and the power outlet.
 - Verify that the power outlet is functional.
- **Low airflow or reduced power:**

- Check the air intake vents and the nozzle for any blockages (e.g., leaves, dirt). Clear any obstructions.
- Ensure all parts (blowpipe, nozzle) are correctly assembled and securely attached.

Specifications

Feature	Specification
Brand	ZEGJAW
Model Name	Electric Leaf Blower corded
Item Model Number	BV-16EG
Power Source	AC (Corded)
Airflow Speed	Up to 155 MPH
Air Volume	Up to 350 CFM
Item Weight	4.58 pounds
Product Dimensions	7.28"L x 9.64"W x 12.58"H
Form Factor	Handheld
Special Feature	Lightweight
Color	YELLOW

Warranty and Support

ZEGJAW is committed to providing quality products and customer satisfaction. We promise to provide **twelve months of after-sales service** for this product. For any questions, concerns, or support needs regarding your ZEGJAW Electric Leaf Blower, please contact our customer service team through the retailer's platform or visit the official ZEGJAW brand store for more information.

Online Support: [Visit the ZEGJAW Store on Amazon](#)