

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [heetipuk](#) /

› [heetipuk Mini Karaoke Machine Y6 User Manual](#)

heetipuk Y6

heetipuk Mini Karaoke Machine Y6 User Manual

Model: Y6

1. PRODUCT OVERVIEW

The heetipuk Y6 Mini Karaoke Machine is a portable audio device designed for entertainment, featuring a Bluetooth speaker and two wireless microphones. It offers various sound effects and lighting modes for an interactive experience.



Image 1.1: The heetipuk Y6 Mini Karaoke Machine, featuring the main speaker unit and two wireless microphones.

Key Features:

- **HiFi 3D Stereo Sound:** Equipped with a 5W speaker and DSP technology for clear audio output.
- **Voice Changing Modes:** Includes 5 distinct voice effects (male, female, child, monster, KTV mode).
- **Dynamic LED Lights:** Features 7 different lighting effects that synchronize with music.
- **Multiple Connectivity Options:** Supports Bluetooth 5.3, TF card, AUX input, and USB drives.
- **Portable Design:** Compact size (4.1 x 3.9 x 3.9 inches) with a 1200mAh rechargeable battery for extended use.

2. WHAT'S IN THE BOX

- Mini Karaoke Machine x 1
- Wireless Microphones x 2
- USB-C Charging Cable x 1

3. PRODUCT COMPONENTS AND CONTROLS

Speaker Unit Controls:



Image 3.1: Speaker unit control panel with button functions.

- **Power Button (/▶▶):** Long press to turn on/off. Single click to play/pause music.
- **Mode Button (M):** Long press to turn LED lights on/off. Single click to switch music playback mode (Bluetooth, TF, USB, AUX). Double click to switch light effects.
- **Volume Up (+):** Long press for next track. Single click to increase speaker volume.
- **Volume Down (-):** Long press for previous track. Single click to decrease speaker volume.

Microphone Controls:

- **Power Button:** Long press to turn on/off.
- **Volume Up (+):** Single click to increase microphone volume or echo.
- **Volume Down (-):** Single click to decrease microphone volume or echo.
- **Voice Effect Button:** Single click to switch voice effects. Double click to remove original sound (karaoke mode).

Ports:

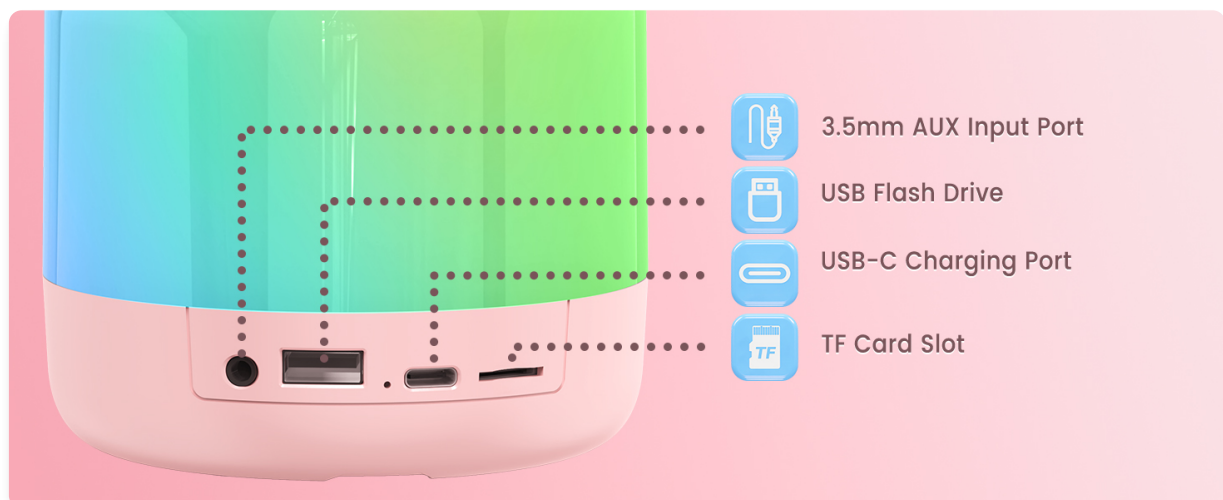


Image 3.2: Rear view of the speaker unit showing connectivity ports.

- **3.5mm AUX Input Port:** For connecting external audio devices via AUX cable.
- **USB Flash Drive Port:** For playing music from a USB drive.
- **USB-C Charging Port:** For charging the speaker unit.
- **TF Card Slot:** For playing music from a TF (MicroSD) card.

4. INITIAL SETUP

4.1 Charging the Device

1. Connect the provided USB-C charging cable to the USB-C charging port on the speaker unit.
2. Connect the other end of the cable to a compatible USB power adapter (not included).
3. The charging indicator light will illuminate. A full charge typically takes approximately 3 hours.
4. Ensure both microphones are also charged if they have separate charging ports or indicators.

4.2 Powering On and Microphone Pairing

1. Long press the Power button on the speaker unit to turn it on.
2. Long press the Power button on each wireless microphone to turn them on.
3. The microphones should automatically pair with the speaker unit. A confirmation sound or indicator light may signal successful pairing.

5. OPERATING INSTRUCTIONS

5.1 Bluetooth Connection

1. Ensure the speaker unit is powered on and in Bluetooth mode (indicated by a blue light or voice prompt). If not, single click the 'M' button to switch modes until Bluetooth is active.
2. On your mobile device (smartphone, tablet, etc.), enable Bluetooth and search for available devices.
3. Select "Y6" (or similar name) from the list of devices to connect.
4. Once connected, you can play music from your device through the karaoke machine.

5.2 Playing Music from Other Sources



Versatile Connectivity Choices

The graphic illustrates the speaker unit's connectivity options. On the left, a smartphone is connected to the speaker via Bluetooth, and a tablet is connected via USB. On the right, a USB flash drive and a TF card are shown. Below the speaker unit, four icons represent the connectivity options: Bluetooth 5.3, TF Card, USB Flash Drive, and AUX Audio Cable.

Bluetooth 5.3

TF Card

USB Flash Drive

AUX Audio Cable

Best Present for Your Kids

Image 5.1: The Y6 Mini Karaoke Machine supports multiple audio input methods.

- **TF Card:** Insert a TF (MicroSD) card with MP3 audio files into the TF card slot. The machine will automatically switch to TF card mode and begin playback.
- **USB Drive:** Insert a USB flash drive with MP3 audio files into the USB port. The machine will automatically switch to USB mode and begin playback.
- **AUX Input:** Connect an external audio device (e.g., MP3 player) to the 3.5mm AUX input port using an AUX cable. Single click the 'M' button to switch to AUX mode.

5.3 Microphone Usage

- **Microphone Volume:** Use the '+' and '-' buttons on the microphone to adjust its volume.
- **Voice Effects:** Single click the Voice Effect button on the microphone to cycle through the 5 available voice modes (male, female, child, monster, KTV mode).



Image 5.2: The five distinct voice-changing effects available on the microphones.

- **Echo Adjustment:** The '+' and '-' buttons on the microphone can also adjust the echo level.
- **Original Sound Removal (Karaoke Mode):** Double click the Voice Effect button on the microphone to attempt to remove the vocal track from a playing song, allowing you to sing along.

5.4 LED Light Effects

- **Turn Lights On/Off:** Long press the 'M' button on the speaker unit.
- **Switch Light Effects:** Double click the 'M' button on the speaker unit to cycle through the 7 different dynamic lighting effects.



6. BATTERY INFORMATION

The heetipuk Y6 Mini Karaoke Machine is equipped with a 1200mAh rechargeable battery.



Image 6.1: Battery charging and working time details.

- **Charging Time:** Approximately 3 hours for a full charge.
- **Working Time:** Up to 4 hours of continuous music playback on a full charge.

7. MAINTENANCE

- Keep the device dry. Do not expose it to water or excessive moisture.
- Clean the device with a soft, dry cloth. Avoid using abrasive cleaners or solvents.
- Store the device in a cool, dry place away from direct sunlight and extreme temperatures.
- Charge the battery regularly, even if not in use, to maintain battery health.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Battery is depleted.	Charge the speaker unit and microphones.
No sound from speaker	Volume is too low; incorrect input mode; device not connected.	Increase speaker volume; ensure correct input mode (Bluetooth, TF, USB, AUX); re-establish connection.
Microphone not working	Microphone is off; battery depleted; not paired.	Turn on microphone; charge microphone; re-pair microphone with speaker unit.
Bluetooth connection fails	Device is out of range; Bluetooth not enabled; interference.	Ensure devices are within range; enable Bluetooth on both devices; try disconnecting and reconnecting.
Sound distortion	Volume too high; low battery.	Reduce speaker or microphone volume; charge the device.

9. SPECIFICATIONS

Feature	Detail
Model Number	Y6
Product Dimensions	4.13 x 4.13 x 3.94 inches
Item Weight	15.9 ounces
Battery Type	Lithium Polymer
Battery Capacity	1200mAh (Speaker)
Connectivity	Bluetooth 5.3, TF Card, USB Flash Drive, 3.5mm AUX
Speaker Output	5W
Charging Port	USB Type C
Color	Pink-Square Mics

10. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the contact details provided with your purchase or visit the official heetipuk website. Keep your purchase receipt for warranty claims.