

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Larex](#) /
- › [LAREX Baby Swing & Rocker User Manual - Model B0DCG6415M](#)

Larex B0DCG6415M

LAREX Baby Swing & Rocker User Manual - Model B0DCG6415M

Comprehensive instructions for safe and effective use of your LAREX Baby Swing.

IMPORTANT SAFETY WARNINGS

WARNING: This product is not for sleep or unsupervised use. Stay near and watch baby during use. Never leave infant unattended. Never use on soft surface (bed, sofa, cushion), as seat may tip over and cause suffocation.

FALL HAZARD: Children have suffered head injuries falling from product.

- **ALWAYS** use restraints. Adjust to fit snugly.
- **NEVER** lift or carry baby in product.
- **STOP** using product when baby starts trying to sit up or has reached 9KG, whichever comes first.
- The upright position is only for children who have developed enough upper body control to sit up without tipping forward.
- **ALWAYS** place product on floor. Never use on any elevated surface.

SUFFOCATION HAZARD: Babies have suffocated when seats tipped over on soft surfaces.

- **NEVER** use on a bed, sofa, cushion, or other soft surface.
- Stay near and watch baby during use. This product is not safe for sleep or unsupervised use. If baby falls asleep, remove baby as soon as possible and place baby on a firm, flat sleep surface such as a crib or bassinet.

This product must be used with its original adapter.

1. SETUP & ASSEMBLY

The LAREX Baby Swing is designed for easy assembly. Follow these steps to set up your swing:

1. **Base Assembly:** Connect the two parts of the base and secure them.
2. **Attach Seat:** Securely attach the seat unit to the assembled base. Ensure it clicks into place.
3. **Power Connection:** Plug the swing into a standard electrical outlet using the provided original adapter. The plug-in option helps save on batteries.
4. **Unlock Swing Function:** Before using the swing function, push the button located under the front of the swing base

upwards to unlock it. If the button is locked, the swing function will not work properly.

The lightweight and detachable design allows for simple storage and portability.

5 Swing Speeds

Timer Settings:
8/15/30 min

! Push the button up to unlock before using the swing.

Up to Unlock
Down to Lock

! This product is not for sleep or unsupervised use.

Image: LAREX Baby Swing highlighting 5 swing speeds and timer settings (8/15/30 min). A warning indicates to push the button up to unlock before using the swing.



Image: The LAREX Baby Swing demonstrating its compact and detachable design for easy storage and transport. The seat can be separated from the base.

2. OPERATING INSTRUCTIONS

Your LAREX Baby Swing offers multiple features to soothe and entertain your baby.

2.1. Swing Speeds

The swing features 5 adjustable swing speeds. The gentle side-to-side motion simulates the feeling of being held. You can adjust the speed using the touch panel on the base or the remote control.

5 Swing Speeds



Timer Settings:
8/15/30 min



! Push the button up to unlock before using the swing.

Up to Unlock
Down to Lock




This product is not for sleep or unsupervised use.

Image: LAREX Baby Swing highlighting 5 swing speeds and timer settings (8/15/30 min). A warning indicates to push the button up to unlock before using the swing.

2.2. Melodies & Bluetooth

The swing includes 10 built-in melodies to help calm your baby. Additionally, you can connect your smartphone via Bluetooth to play your baby's favorite music or sounds.

Remote Control & Control Panel

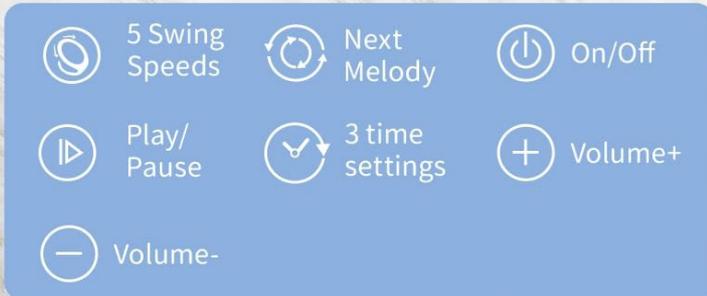

⚠ This product is not for sleep or unsupervised use.

Image: Close-up of the LAREX Baby Swing's control panel and remote control, showing buttons for swing speeds, music, volume, and timer settings.

To play built-in melodies: Press the music button on the control panel or remote. Use the next/previous track buttons to cycle through the 10 melodies.

To connect via Bluetooth: Activate Bluetooth on your device and select "LAREX Swing" from the available devices. Once connected, you can play audio from your device through the swing's speakers.

Adjusting Volume: Use the volume up (+) and volume down (-) buttons on the control panel or remote to adjust the audio level.

2.3. Timer Settings

You can set the swing to operate for a specific duration using the timer function. Available settings are 8, 15, or 30 minutes.

To set the timer: Press the timer button on the control panel or remote to cycle through the available time options.

2.4. Remote Control

The included remote control provides convenient two-way operation, allowing you to adjust settings without disturbing your baby.



Image: Close-up of the LAREX Baby Swing's control panel and remote control, showing buttons for swing speeds, music, volume, and timer settings.

The remote allows control over power, swing speed, music selection, volume, and timer settings.

Note: Ensure the remote has working batteries for optimal performance.

2.5. Harness System

The 3-point harness ensures your baby's safety while in the swing. Always ensure the harness is snugly adjusted around your baby.

Give Mom's Arms a Rest

0-6
MONTHS

UP
TO 20
POUNDS



This product is not for sleep or unsupervised use.

Image: A baby secured in the LAREX Baby Swing, demonstrating the proper use of the 3-point harness for safety and comfort.

3. MAINTENANCE & CARE

Proper maintenance ensures the longevity and hygiene of your LAREX Baby Swing.

3.1. Cleaning the Seat Pad & Pillow

The reversible plush seat pad and pillow are machine washable for easy cleaning. This allows for quick cleanup of spills or messes.

Machine Washable Seat Pad&Headrest



This product is not for sleep or unsupervised use.

Image: The removable seat pad and headrest of the LAREX Baby Swing being placed into a washing machine, illustrating its machine-washable feature.

Washing Instructions: Remove the seat pad and pillow from the swing. Machine wash on a gentle cycle with cold water. Do not bleach. Tumble dry low or air dry.

3.2. Mosquito Net with Canopy

The swing includes a mosquito net with a canopy to protect your baby from insects and provide shade. This is particularly useful when using the swing outdoors.

Protect Your Baby from Bites



Reversible headrest



Reversible body pad



Mosquito net with canopy



One-step assembly



This product is not for sleep or unsupervised use.

Image: The LAREX Baby Swing with its mosquito net and canopy extended, providing protection from insects and shade for the baby.

The canopy and net can be easily attached or detached as needed. Wipe clean with a damp cloth.

4. PRODUCT SPECIFICATIONS

| Feature | Detail |
|----------------|---------------------|
| Brand | Larex |
| Model | B0DCG6415M |
| Age Range | 0-6 Months |
| Maximum Weight | 20 Pounds (9.07 kg) |
| Swing Speeds | 5 |

| | |
|-----------------------------|--|
| Melodies | 10 Built-in, plus Bluetooth connectivity |
| Timer Settings | 8, 15, 30 minutes |
| Control | Touch Panel & Remote Control |
| Harness | 3-point harness |
| Seat Pad | Reversible (plush for winter, mesh for summer), machine washable |
| Portability | Lightweight and detachable design |
| Power Source | Plug-in (original adapter required) |
| Item Weight | 9.25 Pounds (4.2 kg) |
| Item Dimensions (D x W x H) | 7"D x 20"W x 17"H |
| Material Type | Polyester |

5. TROUBLESHOOTING

If you encounter any issues with your LAREX Baby Swing, please refer to the following common solutions:

- **Swing not working:** Ensure the swing function is unlocked by pushing the button under the front of the base upwards. Verify the power adapter is securely plugged into both the swing and a working electrical outlet. Ensure you are using the original adapter.
- **No sound/music:** Check the volume settings on both the swing's control panel/remote and your connected Bluetooth device (if applicable). Ensure Bluetooth is correctly paired.
- **Remote control not responding:** Check and replace the batteries in the remote control. Ensure there are no obstructions between the remote and the swing.
- **Unstable or unusual movement:** Ensure the swing is placed on a firm, flat surface. Verify all assembly connections are secure. Do not use on soft surfaces like beds or sofas.

For further assistance, please contact LAREX customer support.

6. WARRANTY & SUPPORT

LAREX is committed to providing high-quality products. For information regarding warranty coverage, product registration, or customer support, please visit the official LAREX website or contact their customer service department.

You can visit the [Larex Store on Amazon](#) for more product information and support resources.

7. PRODUCT VIDEOS

Your browser does not support the video tag.

Video: A detailed review of the LAREX Baby Swing, covering its features, ease of use, and benefits for infants. This video is provided by a seller.

Your browser does not support the video tag.

Video: A user review highlighting the LAREX Baby Swing's lightweight design and safety features for a 7-month-old baby. This video is provided by a seller.

Your browser does not support the video tag.

Video: A review of the LAREX Baby Swing, showcasing its features and benefits for infants. This video is provided by a seller.

Your browser does not support the video tag.

Video: A demonstration of the LAREX Baby Swing's machine-washable features and long-term use after 6 months. This video is provided by a seller.

Your browser does not support the video tag.

Video: A review highlighting the LAREX Baby Swing's lightweight and easy-to-use electric rocker functions. This video is provided by a seller.

Your browser does not support the video tag.

Video: A short preview demonstrating the LAREX Baby Swing's suitability for newborns. This video is provided by a seller.