

## PHILIPS XW9463/11

# Philips AquaTrio 9000 Cordless Wet & Dry Vacuum Cleaner

MODEL: XW9463/11 - USER MANUAL

## 1. Introduction

This manual provides essential information for the safe and effective operation, maintenance, and troubleshooting of your Philips AquaTrio 9000 Series cordless wet and dry vacuum cleaner, model XW9463/11. This appliance is designed for comprehensive 3-in-1 cleaning, handling dust, stains, and liquids on various hard floor types, and also functions as a handheld vacuum.

## 2. Safety Information

Please read all safety instructions carefully before using the appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Ensure the voltage indicated on the charger corresponds to the local mains voltage before connecting the appliance.
- Do not use the appliance to pick up flammable or combustible liquids, hot ashes, or sharp objects.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Do not immerse the appliance in water or other liquids.
- Only use Philips-recommended accessories and replacement parts.
- Store the appliance indoors in a dry place.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been



The Philips AquaTrio 9000 is a versatile cleaning system. It consists of a main motor unit that can be attached to different cleaning heads for various tasks. The primary wet & dry cleaning head features high-speed AquaSpin brushes and separate clean and dirty water tanks. An additional dry vacuum head is provided for carpet and quick dry cleaning. The unit also converts into a handheld vacuum for targeted cleaning.



Image 2: The Philips AquaTrio 9000 stored on its charging and accessory station, showcasing its compact design and integrated storage for tools.

## 5. Setup

---

### 5.1 Assembly

1. Unpack all components and ensure they are free from damage.
2. Attach the main motor unit to the desired cleaning head (wet & dry or dry vacuum) until it clicks into place.
3. Place the assembled unit onto the charging/storage station.

### 5.2 Initial Charging

Before first use, fully charge the appliance. Connect the power adapter to the charging station and plug it into a wall outlet. The battery indicator on the display will show charging progress. A full charge typically takes several hours.

### 5.3 Filling the Clean Water Tank

For wet cleaning, remove the clean water tank from the appliance. Fill it with tap water up to the MAX line. You may add a small amount of Philips Floor Cleaning Solution as per the instructions on the solution bottle. Reinsert the tank securely.

## 6. Operating Instructions

---

The AquaTrio 9000 offers versatile cleaning modes:

### 6.1 Wet & Dry Cleaning Mode

This mode is ideal for hard floors, simultaneously vacuuming dry debris and washing away wet spills and stains. The high-speed AquaSpin brushes rotate at 4000 rpm to effectively clean. The PowerCyclone Aqua technology separates dirty water from clean water, ensuring you always clean with fresh water.



Image 3: Close-up view of the AquaSpin brushes effectively cleaning a variety of wet and dry messes on a hard floor surface.



## Toujours nettoyer à l'eau claire

Image 4: The transparent dirty water tank illustrating the PowerCyclone Aqua system, which separates solid debris from the dirty water, ensuring clean water is always used for washing.

### **6.2 Dry Vacuum Mode**

Attach the dry vacuum head for cleaning carpets, rugs, or for quick dry vacuuming on hard floors without water. The integrated LED lights on the cleaning head illuminate hidden dust and debris, ensuring thorough cleaning.

### **6.3 Handheld Mode**

Detach the main motor unit from the extension tube to use it as a handheld vacuum. Attach the crevice tool or motorized turbo brush for cleaning upholstery, car interiors, tight corners, or pet hair.



## Solution de nettoyage 3 en 1

Image 5: The Philips AquaTrio 9000 demonstrating its versatility: wet cleaning on a messy floor, dry vacuuming on a carpet, and handheld use for targeted cleaning.

## 7. Maintenance

---

Regular maintenance ensures optimal performance and longevity of your appliance.

### 7.1 Self-Cleaning System

After each wet cleaning session, place the appliance on its charging station and activate the self-cleaning cycle. This system automatically cleans the AquaSpin brushes and internal channels, removing dirt and bacteria. Ensure the dirty water tank is not full and the clean water tank has sufficient water for the cycle.



Image 6: Close-up of the AquaSpin brushes during the automatic self-cleaning process, highlighting the hygienic maintenance feature.

## 7.2 Emptying and Cleaning Tanks

- **Dirty Water Tank:** After each use, remove the dirty water tank and empty its contents. Rinse the tank thoroughly with clean water.
- **Clean Water Tank:** Empty any remaining water from the clean water tank if the appliance will not be used for an extended period. Rinse and dry.

## 7.3 Cleaning AquaSpin Brushes

Even with the self-cleaning function, it is recommended to periodically remove and manually clean the AquaSpin brushes to remove any trapped hair or debris. Allow them to air dry completely before reinserting.

## 7.4 Filter Maintenance

The appliance features a washable filter. Regularly check the filter for dirt buildup. Remove the filter, tap out loose debris, and rinse it under running water. Allow it to dry completely for at least 24 hours before reinserting. Replace the filter (Model XV1791/01) as needed to maintain optimal suction power.

## 8. Troubleshooting

---

If you encounter issues with your Philips AquaTrio 9000, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on	Battery is depleted or not properly inserted.	Charge the battery. Ensure the battery is securely inserted into the main unit.
Low suction power	Dirty filter, clogged nozzle/brushes, or full dirty water tank.	Clean or replace the filter. Clear any blockages from the nozzle or brushes. Empty and clean the dirty water tank.
Water leakage	Water tanks not properly installed or damaged, or seals are worn.	Ensure both clean and dirty water tanks are correctly and securely fitted. Check seals for damage.
Brushes not rotating	Brushes are jammed by debris or not correctly installed.	Remove and clean the brushes, ensuring no hair or debris is tangled. Reinstall them correctly.
Self-cleaning cycle not starting	Insufficient water in the clean water tank or dirty water tank is too full.	Fill the clean water tank to the minimum level required. Empty the dirty water tank.

## 9. Specifications

Feature	Detail
Brand	PHILIPS
Model Number	XW9463/11
Product Dimensions (L x W x H)	19 x 26.5 x 113.5 cm
Item Weight	8.1 Kilograms
Power	34 Watts
Voltage	220 Volts
Run Time	Up to 38 minutes
Power Source	Battery Powered (1 Lithium-ion battery included)
Filter Type	Cyclone
Recommended Surface	Hard floors, carpets
Special Features	Cordless, Wet & Dry, 3-in-1, AquaSpin Brushes, Self-Cleaning System, PowerCyclone Aqua, LED lights

## 10. Warranty and Support

---

For warranty information, product registration, or technical support, please refer to the official Philips website or contact Philips customer service in your region. Keep your purchase receipt as proof of purchase for warranty claims.

You can find additional support and frequently asked questions by visiting the Philips support page for your product model.