

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [Biegedy](#) /

› Biegedy B22 10-inch Android 14 Tablet User Manual

Biegedy B22

Biegedy B22 10-inch Android 14 Tablet User Manual

Model: B22

1. INTRODUCTION

This manual provides essential information for setting up, operating, and maintaining your Biegedy B22 10-inch Android 14 Tablet. Please read this manual thoroughly before using your device to ensure proper functionality and to prevent damage.

2. PACKAGE CONTENTS

Verify that all items listed below are included in your package. If any items are missing or damaged, please contact customer support.

Image: All accessories included with the Biegedy B22 Tablet.

- Biegedy B22 Tablet
- Bluetooth Keyboard
- Mouse
- Protective Case
- Screen Protector
- Charger
- Type-C Cable
- OTG Adapter
- User Manual

3. DEVICE LAYOUT

Familiarize yourself with the physical features and ports of your tablet.



- ❶ Réinitialiser ❷ Marche / Arrêt ❸ Volume + ❹ Volume -
- ❺ Interface USB Type-C ❻ Fente AUX 3.5 mm ❼ Caméra 5.0MP
- ❽ Double haut-parleur ❽ Caméra 8.0MP ❾ Les lumières clignotent

Image: Biegedy B22 Tablet physical layout.

1. **Reset Button:** Used to restart the device if it becomes unresponsive.
2. **Power On/Off Button:** Press and hold to power on or off. Short press to turn the screen on/off.
3. **Volume +:** Increases the volume.
4. **Volume -:** Decreases the volume.
5. **USB Type-C Interface:** For charging and data transfer.
6. **AUX 3.5 mm Slot:** For connecting headphones.
7. **Front Camera (5.0MP):** For video calls and selfies.
8. **Dual Speakers:** Provides audio output.
9. **Rear Camera (8.0MP):** For taking photos and videos.
10. **Indicator Lights:** Provide status information.

4. GETTING STARTED

4.1 Charging the Tablet

Before first use, fully charge your tablet. Connect the provided Type-C cable to the tablet's USB Type-C interface and the charger to a power outlet.

**20(6+14)GB RAM+
128GB ROM+1TB TF**

20RAM permet un multitâche fluide et un passage rapide entre les applications
128 Go de mémoire haute vitesse pour vos fichiers et prise en charge d'une extension jusqu'à 1 To avec Micro SD

-  **20 GO DE RAM**
-  **128 Go ROM Stockage rapide**
-  **1 To d'extension Micro SD**



Image: Tablet charging and battery life overview.

4.2 Powering On/Off

- **To Power On:** Press and hold the Power On/Off button until the screen lights up.
- **To Power Off:** Press and hold the Power On/Off button, then select 'Power off' from the options that appear on the screen.
- **To Restart:** Press and hold the Power On/Off button, then select 'Restart' from the options.

4.3 Initial Setup

Upon first power-on, follow the on-screen prompts to configure your tablet. This includes selecting your language, connecting to Wi-Fi, setting up your Google account, and configuring security options like facial recognition.

5. BASIC OPERATIONS

5.1 Touch Gestures

- **Tap:** Select an item or activate a function.
- **Tap and Hold:** Access contextual menus or move items.
- **Swipe:** Navigate through screens or lists.
- **Pinch:** Zoom in or out on images and web pages.

5.2 Navigation

The Android 14 operating system provides intuitive navigation. Use the on-screen navigation bar (typically at the bottom) for Back, Home, and Recent Apps functions. Swipe down from the top of the screen to access notifications and quick settings.



Image: Android 14 system features.

6. CONNECTIVITY

6.1 Wi-Fi Connection

1. Go to **Settings** > **Network & internet** > **Wi-Fi**.
2. Toggle **Wi-Fi On**.
3. Select your desired network from the list.
4. Enter the password if prompted, then tap **Connect**.

6.2 Bluetooth Pairing

1. Go to **Settings** > **Connected devices** > **Bluetooth**.
2. Toggle **Bluetooth On**.
3. Ensure your Bluetooth device (e.g., keyboard, mouse) is in pairing mode.
4. Select the device from the 'Available devices' list and follow any on-screen instructions to complete pairing.

Écran 10,1 pouces 1080FHD
Un écran plus grand, un monde plus sauvage

-  10,1 pouces
-  Ratio 16:10
-  1280*800 ips Full HD
-  Vidéo Full HD 1080P
-  Widevine L1

FHD+

Image: Wi-Fi 6 and Bluetooth 5.0 connectivity.

7. CAMERAS

The tablet is equipped with a 5MP front camera and an 8MP rear camera.

Son stéréo avec deux haut-parleurs



📶 Dernière technologie WiFi 6

La technologie Wi-Fi 6 prend en charge la coexistence des bandes 2.4G et 5G pour des vitesses plus rapides, une latence plus faible, une plus grande capacité, plus de sécurité et plus d'économies d'énergie.

📶 Bluetooth 5.0

Connectez des écouteurs Bluetooth, des claviers Bluetooth et d'autres appareils compatibles Bluetooth via Bluetooth 5.0 pour des connexions plus rapides et plus stables.

Image: Front and rear cameras with facial recognition.

7.1 Taking Photos and Videos

1. Open the **Camera** application.
2. Tap the camera icon to switch between front and rear cameras.
3. Select photo or video mode.
4. Tap the shutter button to capture.

8. STORAGE AND MEMORY

The tablet comes with 128GB of internal storage and 20GB of RAM (6GB physical + 14GB virtual expandable memory).

Tablette Système Android 14

Les tablettes sont équipées du tout dernier système Android 14, qui augmente la productivité de l'utilisateur tout en améliorant les performances, la confidentialité, la sécurité et la personnalisation de l'expérience utilisateur.

 **Android 14**

 **Privacy Protection**
Device Safety and Control

 **GMS Certification**
Millions of applications



Image: RAM and ROM specifications with Micro SD expansion.

8.1 Expanding Storage

You can expand the storage up to 1TB using a Micro SD/TF card. Insert the card into the designated slot on the tablet.

8.2 Managing Storage

To view and manage your storage, go to **Settings > Storage**. Here you can see how much space is used by apps, photos, videos, and other files.

9. BATTERY MANAGEMENT

The tablet is equipped with a 6000 mAh battery, providing approximately 6 hours of average usage.

9.1 Optimizing Battery Life

- Reduce screen brightness.
- Turn off Wi-Fi and Bluetooth when not in use.
- Close unused applications running in the background.
- Enable battery saver mode in **Settings** > **Battery**.

10. SECURITY FEATURES

10.1 Facial Recognition

The tablet supports facial recognition for quick and secure unlocking.

1. Go to **Settings** > **Security & privacy** > **Face unlock**.
2. Follow the on-screen instructions to register your face.
3. Ensure you are in a well-lit area during registration.

11. SPECIFICATIONS

Detailed technical specifications for the Biegedy B22 Tablet.

Feature	Specification
Brand	Biegedy
Model Number	B22
Operating System	Android 14
Processor	Octa-Core Allwinner, 1.8 GHz
RAM	20 GB (6GB physical + 14GB virtual)
Internal Storage	128 GB
Expandable Storage	Up to 1 TB via Micro SD/TF card
Screen Size	10 inches
Screen Resolution	1280 x 800 pixels
Graphics Chipset	ARM/Mali Integrated
Wi-Fi	Dual-band 2.4G/5G (802.11a/b/g/n/ax - Wi-Fi 6)
Bluetooth	Bluetooth 5.0
Front Camera	5 MP
Rear Camera	8 MP

Feature	Specification
Battery Capacity	6000 mAh
Average Battery Life	6 hours
Dimensions (L x W x H)	24.6 x 1 x 15.4 cm
Other Features	GPS, Widevine L1 support, Facial Recognition

12. TROUBLESHOOTING

This section addresses common issues you might encounter with your tablet.

12.1 Tablet Not Turning On

- Ensure the tablet is sufficiently charged. Connect it to the charger for at least 30 minutes.
- Press and hold the Power On/Off button for 10-15 seconds.
- If unresponsive, use a thin object to press the Reset button (refer to Device Layout).

12.2 Wi-Fi Connection Issues

- Check if Wi-Fi is enabled in Settings.
- Ensure you have entered the correct Wi-Fi password.
- Restart your Wi-Fi router and the tablet.
- Try connecting to a different Wi-Fi network to rule out router issues.

12.3 Slow Performance

- Close unnecessary background applications.
- Clear cache for frequently used apps in **Settings > Apps**.
- Ensure sufficient storage space is available. Delete old files or move them to an SD card.
- Restart the tablet regularly.

13. MAINTENANCE

- Keep the tablet clean using a soft, dry cloth. Avoid liquid cleaners.
- Protect the screen with the provided screen protector and case.
- Avoid exposing the tablet to extreme temperatures, direct sunlight, or moisture.
- Regularly back up important data to prevent loss.
- Keep the operating system and applications updated for optimal performance and security.

14. WARRANTY AND SUPPORT INFORMATION

The manufacturer provides a warranty for this product. Please refer to the warranty card included in your package for specific terms and conditions, including the duration of the warranty (stated as '3' in specifications, please confirm with documentation).

For technical support, product inquiries, or warranty claims, please contact Biegedy customer service through the retailer where you purchased the product or refer to the contact information provided in your warranty documentation.

