

Fleafer c15

Fleafer c15 Digital Camera User Manual

Model: c15 | Brand: Fleafer

1. INTRODUCTION

This manual provides essential instructions for the safe and effective use of your Fleafer c15 Digital Camera. This camera is designed for ease of use, capturing 56-megapixel still images and recording Full HD 1080P videos. It features a 16x digital zoom, anti-shake technology, and various shooting modes to enhance your photography experience.

Please read this manual thoroughly before operating the camera and retain it for future reference.

2. PACKAGE CONTENTS

Verify that all the following items are included in your package:

- Fleafer c15 Digital Camera
- 32GB TF Card
- BL-5B Lithium-Ion Batteries (x2)
- USB Data Cable (Type-C)
- Lanyard
- Camera Pouch



Image: The Fleafer c15 Digital Camera shown with its complete set of accessories, including the camera body, two batteries, a 32GB TF card, USB cable, lanyard, and a small pouch.

3. CAMERA OVERVIEW

Familiarize yourself with the main components of your camera.

FHD 1080P & 56MP

Advanced CMOS sensor for instant and decent image



16x Zoom



Auto Focus



2.8 Screen



Multiple filters



56MP



44MP



36MP

1920x1080 digital camera captures natural-color images that are quite enough for young photographer

Image: Front and rear views of the Fleafer c15 Digital Camera, highlighting the lens, flash, and control buttons on the back panel.

3.1 Front View

- **Lens:** Captures images and videos.
- **Flash:** Provides illumination in low-light conditions.
- **Microphone:** Records audio during video capture.

3.2 Rear View

- **LCD Display:** 2.8-inch screen for viewing images, videos, and menu options.
 - **Power Button:** Turns the camera on or off.
 - **Shutter Button:** Press to take a photo or start/stop video recording.
 - **Zoom Buttons:** Adjust digital zoom (W for wide, T for telephoto).
 - **Menu Button:** Access camera settings.
 - **Mode Button:** Switch between photo, video, and playback modes.
 - **Navigation Buttons:** For menu navigation and selecting options.
-

4. SETUP

4.1 Battery Installation

1. Open the battery compartment cover located on the bottom of the camera.
2. Insert a BL-5B Lithium-Ion battery (1000mAh) into the compartment, ensuring correct polarity.
3. Close the battery compartment cover securely.

4.2 TF Card Installation

1. Locate the TF card slot, usually near the battery compartment or on the side.
2. Insert the included 32GB TF card into the slot until it clicks into place. Ensure the card is oriented correctly.
3. To remove, gently press the card until it springs out.

4.3 Initial Charging

Before first use, fully charge the camera battery.

1. Connect the camera to a power source (e.g., computer USB port or USB wall adapter) using the provided Type-C USB cable.
2. The charging indicator light will illuminate. It will turn off or change color once charging is complete.
3. A full charge typically takes several hours.



Image: The Fleafer c15 Digital Camera connected to a laptop via its USB-C port, illustrating both charging and data transfer capabilities. An included 32GB TF card is also shown.

5. OPERATING THE CAMERA

5.1 Power On/Off

Press and hold the **Power Button** for a few seconds to turn the camera on or off.

5.2 Photo Mode

1. Turn on the camera. It will typically default to Photo Mode. If not, press the **Mode Button** to select Photo Mode.
2. Frame your shot using the LCD display.
3. Press the **Shutter Button** fully to capture a 56-megapixel image.

5.3 Video Mode

1. Press the **Mode Button** to switch to Video Mode.
2. Press the **Shutter Button** to start recording Full HD 1080P video.
3. Press the **Shutter Button** again to stop recording.

2024 NEWEST 56MP DIGITAL CAMERA



Image: The camera's display showing options for video and photo capture, emphasizing its 1080P HD video and 56MP photo resolution. Icons for 16x zoom, auto focus, 2.8-inch screen, and multiple filters are also present.

5.4 Digital Zoom

Use the **Zoom Buttons** (W/T) to adjust the 16x digital zoom. Press 'T' to zoom in and 'W' to zoom out.



Image: A visual representation of the camera's 16x digital zoom capability, showing different zoom levels (4x, 8x, 16x). The image also displays examples of various color filters (Red, B&W, Blue, Yellow) that can be applied to photos.

5.5 Special Features

- **Anti-Shake:** Helps reduce blur caused by camera movement. This feature is automatically enabled.
- **Built-in Fill Light:** Provides additional light in dark environments. Activate via menu settings.

- **Self-Timer:** Set a delay of 2, 5, or 10 seconds before a photo is taken. Access through the menu.
- **Continuous Shooting:** Capture multiple photos in quick succession. Enable in the menu.
- **Face Recognition & Smile Detection:** Automatically detects faces and smiles for optimal focus and capture.

Meaningful Gift

Use the included USB cable to connect the camera to the computer to view the pictures.



Image: Top panel shows a sequence of four images demonstrating continuous shooting of a snowboarder. The bottom panel illustrates the anti-shake feature, comparing a clear image (ON) with a blurred image (OFF) of a skier.

Type-C Charging & USB Transfer & 32GB Card

Use the included USB cable to connect the camera to the computer to view the pictures.



Image: Top panel shows icons for 2s, 5s, and 10s self-timer settings. The middle row illustrates face recognition and smile detection. The bottom row compares a photo taken with the fill light ON versus OFF in a low-light setting.

6. CONNECTING TO A COMPUTER

To transfer photos and videos to your computer:

1. Ensure the camera is powered on.
2. Connect the camera to your computer using the provided USB data cable.
3. The camera will appear as a removable disk on your computer.
4. Open the camera's folder to access and transfer your files.



Image: The Fleafer c15 Digital Camera connected to a laptop via its USB-C port, demonstrating how to directly transfer photos to a computer. An included 32GB TF card is also shown.

7. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the camera body. For the lens, use a specialized lens cleaning cloth. Avoid abrasive cleaners or solvents.
- **Storage:** Store the camera in a cool, dry place away from direct sunlight and extreme temperatures. Remove the battery if the camera will not be used for an extended period.
- **Water Resistance:** This camera is **not water resistant**. Avoid exposure to water or high humidity.

8. TROUBLESHOOTING

Problem	Possible Solution
Camera does not power on.	Ensure the battery is correctly inserted and fully charged. Try using the second included battery.

Problem	Possible Solution
Cannot take photos/videos.	Check if the TF card is inserted correctly and has sufficient free space. Ensure the camera is in the correct mode (Photo/Video).
Images are blurry.	Ensure the lens is clean. Hold the camera steady. Check lighting conditions; use the built-in fill light if necessary.
Computer does not recognize camera.	Ensure the USB cable is securely connected to both the camera and the computer. Try a different USB port or cable. Ensure the camera is powered on.

9. SPECIFICATIONS

Feature	Detail
Model Name	c15
Maximum Image Resolution	56 MP
Video Resolution	1080P FHD (30 FPS)
Digital Zoom	16x
Image Stabilization	Digital
Photo Sensor Technology	CMOS (1/3.2-inch)
Display Type	2.8-inch LCD
Supported File Formats	JPEG (images), MP4 (videos)
Storage Media	TF Card (32GB included)
Connectivity	USB (Type-C)
Battery Type	Lithium Ion (BL-5B, 1000mAh)
Weight	0.26 Kilograms
Special Features	Anti-shake, Face Recognition, Smile Detection, Continuous Shooting, Self-timer, Built-in Fill Light
Water Resistance Level	Not Water Resistant

10. WARRANTY AND SUPPORT

Your Fleafer c15 Digital Camera comes with a one-year satisfaction warranty. In the event of any issues or questions regarding your camera, please contact customer support for assistance. A no-hassle replacement policy is available for eligible concerns.

For support, please refer to the contact information provided with your purchase or visit the official Fleafer website.