

Nuwave Bravo Pro Smart Oven

Nuwave Bravo Pro Smart Air Fryer Toaster Oven Combo (21QT, Cozy Blue)

Model: Bravo Pro Smart Oven | Brand: Nuwave

INTRODUCTION AND OVERVIEW

The Nuwave Bravo Pro Smart Air Fryer Toaster Oven Combo is a versatile 10-in-1 countertop appliance designed for efficient and precise cooking. This manual provides essential information for setting up, operating, maintaining, and troubleshooting your appliance.

- **3X Faster, 35% Air Crispier:** Features a newly designed fan and housing for quicker cooking and crispier results.
- **2X More Even Cooking:** Utilizes an upgraded Ultra-Fast Convection System with top and bottom heating elements for uniform temperature distribution.
- **10 Pre-Programmed Presets:** Includes functions for Air Fry, Grill, Bake, Reheat, Bagel, Pizza, Toast, Broil, Waffle, Dehydrate, Frozen, and Keep Warm.
- **Customizable Heating:** Adjust the ratio of top and bottom heaters (0-100%) and convection fan speed for precise cooking.
- **Wide Temperature Range:** Offers a cooking temperature range from 50°F to 450°F in 5°F increments.



Image: The Nuwave Bravo Pro Smart Air Fryer Toaster Oven Combo in Cozy Blue, showcasing a perfectly cooked whole chicken inside, highlighting its capacity and cooking capabilities.

SETUP

Before first use, ensure all packaging materials are removed. Place the appliance on a stable, heat-resistant surface with adequate clearance from walls and other appliances for proper ventilation. Wash all included accessories with warm, soapy water before initial use.

Included Components

- Air Fry Basket
- Enamel Baking Pan
- Heavy Duty Cooking Rack
- Crumb Tray
- Recipe Book



Image: A visual representation of the Nuwave Bravo Pro Smart Oven's included accessories, such as the crumb tray, cooking rack, baking pan, air fry basket, and recipe book.

OPERATING INSTRUCTIONS

The Nuwave Bravo Pro features intuitive digital controls and a versatile dial for easy operation. Follow these steps for various cooking functions.

Basic Operation

1. Press the **ON/OFF** button to power on the appliance.
2. Rotate the central dial to select your desired cooking function from the 10 pre-programmed presets (Toast, Air Fry, Bake, Broil, Dehydrate, Pizza, Reheat, Roast, Bagel, Waffle).
3. Press the **TEMP** button to adjust the temperature using the dial. Temperatures can be set from 50°F to 450°F in 5°F increments.
4. Press the **TIME** button to adjust the cooking duration using the dial.
5. For functions like Air Fry, adjust the fan speed (0-3) using the **FAN** button and dial.
6. For customized heating, use the **TOP/BTM** button to adjust the top and bottom heater ratio (0-100%).
7. Press the **PREHEAT** button if preheating is desired for your selected function.
8. Press the **START/PAUSE** button to begin cooking.

Customize Your Pizza Oven

Adjust the ratio of the top and bottom heaters for crispy crusts and melty cheese



Image: The digital control panel of the Nuwave Bravo Pro Smart Oven, displaying the 10 preset cooking functions and the central control dial.

Video: Nuwave Bravo Pro Smart Air Fryer Oven, 10-in-1 Functions

Your browser does not support the video tag.

Video Description: This video provides an overview of the Nuwave Bravo Pro Smart Air Fryer Oven, demonstrating its 10-in-1 functions and user-friendly interface. It highlights the versatility of the appliance for various cooking needs.

Easy to Control

With user-friendly control panel



LED Display



Intuitive Control Dial



Prominent Buttons



360° Super Hot Air Circulation



16 oz
French Fries

A metal mesh basket filled with golden-brown french fries.

4
Slices of Toasts

A metal mesh rack holding four square slices of golden-brown toast.

12 inch
Pizza

A metal mesh rack holding a whole 12-inch pizza with toppings.

4-lb
Whole Chicken

A metal mesh basket containing a whole roasted chicken with vegetables.

Image: The Nuwave Bravo Pro Smart Oven's display showing precise temperature control, with examples of food items like steak, cookies, and pizza cooked at different temperatures.

More Than an Air Fryer Oven



Image: A pizza baking inside the Nuwave Bravo Pro Smart Oven, with on-screen graphics demonstrating the adjustable top and bottom heating percentages for optimal results.

MAINTENANCE

Regular cleaning ensures optimal performance and longevity of your Nuwave Bravo Pro. Always unplug the appliance and allow it to cool completely before cleaning.

- **Exterior:** Wipe the exterior with a damp cloth. Do not use abrasive cleaners.
- **Interior:** The interior can be wiped with a damp cloth and mild detergent. For stubborn stains, a non-abrasive sponge can be used.
- **Accessories:** The enamel baking pan, air fry basket, heavy-duty cooking rack, and crumb tray are

dishwasher-safe for easy cleaning.

- **Crumb Tray:** Regularly remove and empty the crumb tray to prevent buildup and ensure safety.

Easy to Clean Easy to use

Intuitive Digital Controls

Temperature range from 50°F to 450°F adjustable in precise 5°F increments. Our heater never turns off while cooking.

Dishwasher-safe

Image: The dishwasher-safe accessories of the Nuwave Bravo Pro Smart Oven, showing a baking pan being loaded into a dishwasher for convenient cleaning.

TROUBLESHOOTING

If you encounter any issues with your Nuwave Bravo Pro, please refer to the following common troubleshooting tips. For more complex problems, contact customer support.

- **Appliance not turning on:** Ensure the power cord is securely plugged into a working electrical outlet. Check your circuit breaker.
- **Food not cooking evenly:** Ensure the correct rack position is used for the selected function. Rotate food halfway through cooking for best results. Verify that the fan speed and top/bottom heat settings are appropriate for your recipe.
- **Excessive smoke:** This may be due to food residue or grease buildup. Clean the interior and accessories thoroughly. Avoid using excessive oil when air frying.
- **Temperature not reaching desired level:** Allow adequate preheating time. Ensure the door is fully closed during operation.

SPECIFICATIONS

Feature	Detail
Brand	Nuwave
Model Name	Bravo Pro Smart Oven
Color	Cozy Blue
Product Dimensions	13"D x 17.68"W x 9.75"H
Capacity	21 Quarts
Wattage	1800 watts
Temperature Range	50°F to 450°F
Control Type	Touch Control

Material	Metal, Tempered Glass
Item Weight	14.4 Pounds
UPC	652185902206

WARRANTY AND SUPPORT

Nuwave is committed to providing quality products and customer satisfaction. For any inquiries or support, please refer to the contact information below.

Customer Service

- For Amazon Purchases: support@nuwavenow.com
- For All Other Purchases: hello@nuwavenow.com

Protection Plans

Extended protection plans are available for purchase to safeguard your investment:

- **3-Year Protection Plan:** Available for \$25.99 (one-time payment).
- **4-Year Protection Plan:** Available for \$34.99 (one-time payment).
- **Complete Protect:** Monthly plan for \$16.99, covering eligible past and future purchases.

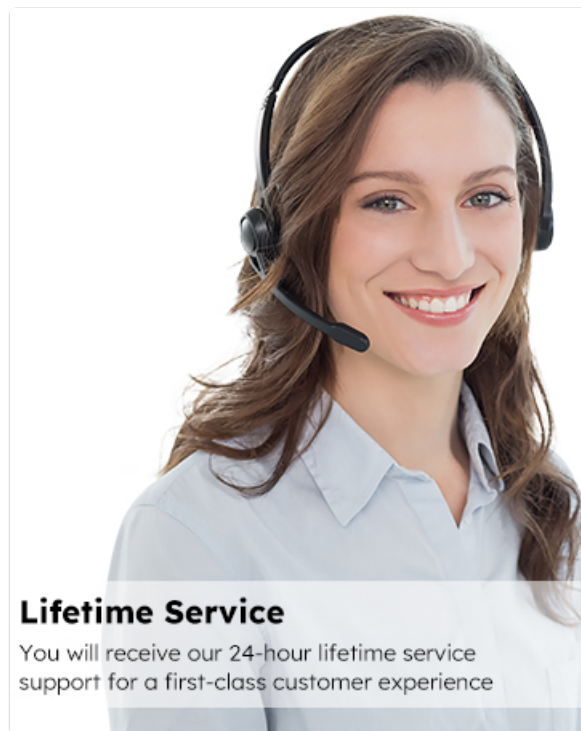


Image: A customer service representative, symbolizing the lifetime service support offered by Nuwave.