

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Fuxtec](#) /

› [Fuxtec FX-E1VC20 Cordless Wet/Dry Vacuum Cleaner with Blower Function - User Manual](#)

Fuxtec FX-E1VC20

Fuxtec FX-E1VC20 Cordless Wet/Dry Vacuum Cleaner with Blower Function

USER MANUAL

1. Introduction

This manual provides essential information for the safe and efficient operation of your Fuxtec FX-E1VC20 cordless wet/dry vacuum cleaner. Please read these instructions carefully before initial use and retain them for future reference. This device is designed for versatile cleaning tasks, both indoors and outdoors, including homes, gardens, vehicles, campers, basements, and workshops.

The FX-E1VC20 features a 10-liter tank, a compact design, and an integrated handle for maximum portability. It includes both vacuuming and blowing functions to address various cleaning needs, from dust and dirt to liquids.

2. Safety Instructions

Always observe basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and personal injury.

- Read all instructions before operating the appliance.
- Do not operate the vacuum cleaner without filters in place.
- Ensure the battery pack is fully charged before use (battery and charger sold separately for 'SOLO' variant).
- Do not vacuum flammable or combustible liquids, hot ashes, or sharp objects.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Use only Fuxtec recommended accessories and replacement parts.
- Store the appliance indoors in a dry place when not in use.
- This appliance is not intended for use by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

3. Package Contents

Verify that all items are present in your package. If any parts are missing or damaged, contact Fuxtec customer support.

- Fuxtec FX-E1VC20 Cordless Wet/Dry Vacuum Cleaner Unit
- Flexible Hose
- Universal Floor Brush
- 2-in-1 Nozzle (Crevice and Brush Tool)
- Filter Basket
- Foam Filter (for wet vacuuming)
- Fabric Filter (for dry vacuuming)

Note: For the 'SOLO' variant (FX-E1VC20 SOLO), the battery and charger are not included and must be purchased separately.



Image: All included accessories for the Fuxtec FX-E1VC20 vacuum cleaner, including hose, filters, floor brush, and 2-in-1 nozzle.



Image: Fuxtec FX-E1VC20 cordless wet/dry vacuum cleaner, illustrating that battery and charger are not included.

4. Product Overview

Familiarize yourself with the main components of your Fuxtec FX-E1VC20 vacuum cleaner.



Image: Fuxtec FX-E1VC20 cordless wet/dry vacuum cleaner with hose and floor nozzle attached.



Image: Top view of the Fuxtec FX-E1VC20 vacuum cleaner, highlighting the handle, power switch, and accessory storage slots.

- **Integrated Handle:** For easy transport.
- **Power Switch:** Easily accessible for turning the unit on/off.
- **Quick Release System:** For easy access to the 10L tank for cleaning and maintenance.
- **Hose Connection Ports:** For vacuuming and blowing functions.
- **Accessory Storage Slots:** Conveniently store nozzles and hose.
- **Float Valve:** Safety system to prevent overfilling during wet vacuuming.

5. Setup

1. **Battery Installation:** Open the battery compartment. Insert a charged Fuxtec 20V battery pack (not included with 'SOLO' variant) into the slot until it clicks into place. Close the compartment securely.

2. **Filter Installation:**

- **For Dry Vacuuming:** Place the fabric filter over the filter basket.
- **For Wet Vacuuming:** Remove the fabric filter and install the foam filter over the filter basket. Ensure it is properly seated to prevent liquid from entering the motor.

3. **Hose and Accessory Attachment:**

- Attach the flexible hose to the suction port on the front of the unit for vacuuming.

- Select the desired nozzle (universal floor brush or 2-in-1 nozzle) and attach it to the end of the flexible hose.



Image: Fuxtec FX-E1VC20 vacuum cleaner with the floor brush attachment and hose extended.



Image: Side view of the Fuxtec FX-E1VC20 vacuum cleaner with the crevice tool attached to the hose.

6. Operating Instructions

6.1. Vacuuming

1. Ensure the correct filter is installed for either wet or dry vacuuming.
2. Connect the flexible hose to the front suction port.
3. Attach the appropriate nozzle for the cleaning task.
4. Press the power switch to the 'ON' position.
5. Guide the nozzle over the surface to be cleaned.
6. For wet vacuuming, the float valve will automatically stop suction when the tank is full. Turn off the unit and empty the tank immediately.

6.2. Blower Function

1. Disconnect the flexible hose from the front suction port.
2. Attach the flexible hose to the blower port, typically located at the rear or side of the unit.
3. Press the power switch to the 'ON' position.
4. Direct the airflow to clear debris from surfaces.

7. Maintenance

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

7.1. Emptying the Tank

1. Turn off the vacuum cleaner and remove the battery.
2. Use the quick-release latches to detach the motor head from the tank.
3. Carefully lift the motor head and empty the contents of the 10-liter tank.
4. Clean the inside of the tank with water and mild detergent if necessary, then dry thoroughly.

7.2. Cleaning Filters

- **Fabric Filter:** Shake off dust or gently brush clean. If heavily soiled, wash with water and mild soap, then allow to air dry completely before reinstallation.
- **Foam Filter:** Rinse with water and mild soap. Squeeze out excess water and allow to air dry completely before reinstallation.
- Never operate the vacuum cleaner with a wet filter for dry vacuuming.

7.3. General Cleaning

Wipe the exterior of the vacuum cleaner with a damp cloth. Do not use harsh chemicals or abrasive cleaners. Ensure all parts are dry before storage.

8. Troubleshooting

If you encounter issues with your Fuxtec FX-E1VC20, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Vacuum does not turn on	Battery not charged or improperly inserted	Charge battery, ensure it is correctly inserted.
Low suction power	Clogged filter, full tank, blocked hose/nozzle	Clean or replace filter, empty tank, clear blockages.
Motor stops during wet vacuuming	Tank is full (float valve activated)	Turn off unit, empty the tank.
Unusual noise	Foreign object in hose/tank, loose part	Inspect and remove foreign objects, check for loose components.

If the problem persists after attempting these solutions, please contact Fuxtec customer support.

9. Specifications

Feature	Detail
Model	FX-E1VC20
Brand	Fuxtec
Tank Capacity	10 Liters
Voltage	20 Volts (Battery-powered)
Special Features	Cordless, Blower Function
Item Weight	4 Kilograms
Package Dimensions	40.2 x 33.5 x 27 cm

10. Warranty and Support


For warranty information, technical support, or to order replacement parts, please refer to the official Fuxtec website or contact your local Fuxtec dealer. Keep your purchase receipt as proof of purchase for any warranty claims.

Fuxtec is committed to providing high-quality products and customer satisfaction. Do not attempt to repair the device yourself; unauthorized repairs may void your warranty.

© 2024 Fuxtec. All rights reserved.

Related Documents - FX-E1VC20

	<p>FUXTEC FX-E1VC20 Akku Nass-/Trockensauger – Bedienungsanleitung</p> <p>Umfassende Bedienungsanleitung für den FUXTEC FX-E1VC20 Akku Nass-/Trockensauger. Enthält Sicherheitshinweise, Anwendungsanleitungen, Montage und technische Daten.</p>
	<p>FUXTEC FX-LS52 Laubkehrmaschine Bedienungsanleitung</p> <p>Umfassende Bedienungsanleitung für die FUXTEC FX-LS52 Laubkehrmaschine. Erfahren Sie mehr über Montage, sichere Anwendung, Wartung und technische Daten für Ihren Außenbereich.</p>
	<p>FUXTEC FX-CT Serie Bollerwagen Bedienungsanleitung</p> <p>Umfassende Bedienungsanleitung für die FUXTEC FX-CT Serie Bollerwagen, die Sicherheitshinweise, Montage, Produktinformationen, Wartung und Garantie abdeckt. In mehreren Sprachen verfügbar.</p>
	<p>FUXTEC FX-E1RMEH20 Akku-Rasenmäher Bedienungsanleitung</p> <p>Diese Bedienungsanleitung für den FUXTEC FX-E1RMEH20 Akku-Rasenmäher enthält wichtige Informationen zu Sicherheit, Montage, Bedienung, Wartung und technischen Daten für einen sicheren und effizienten Einsatz.</p>
	<p>FUXTEC FX-CT Serie Bedienungsanleitung</p> <p>Diese Bedienungsanleitung bietet detaillierte Informationen zur sicheren Verwendung, Montage und Wartung der FUXTEC FX-CT Serie Bollerwagen, einschließlich wichtiger Sicherheitshinweise und optionaler Zubehörteile.</p>
	<p>FUXTEC FX-LB126ECO Leaf Blower User Manual</p> <p>Comprehensive user manual for the FUXTEC FX-LB126ECO gasoline leaf blower, covering operation, safety, maintenance, and troubleshooting in multiple languages.</p>

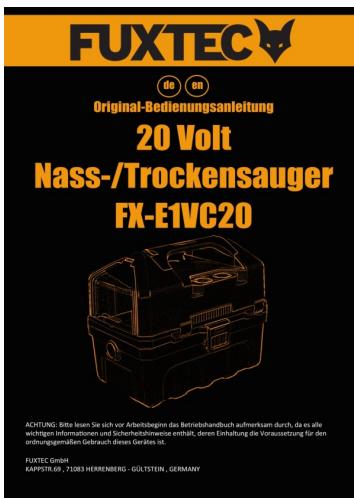

[\[pdf\]](#)


FX E1VC20 Christoph Bernhardt Inhalt OTTOOriginal Bedienungsanleitung FUXTEC 3 Einführung und Sicherheit Bei Ablenkung können Sie die Kontrolle über das Gerät verlieren Page 5 Original 1867c435 42cd 5cbd 9d10 b2038f00eacbd otto de files 1867c435 b2038f00eacb |||

Deutsche Version.....Seite 3 English Version.....Page 20 Original-Bedienungsanleitung FUXTEC **FX-E1VC20** Inhalt Einführung und Sicherheit

.....4

Bestimmun...

lang:de **score:46** filesize: 1.5 M page_count: 36 document date: 2024-01-02

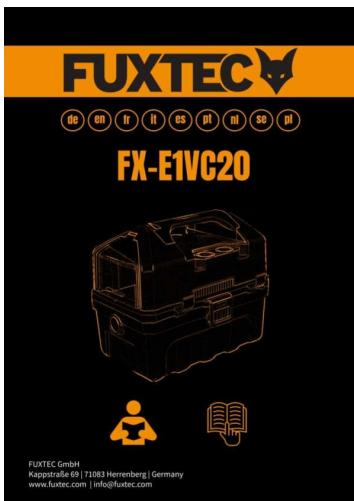

[FUXTEC FX-E1VC20 Akku Nass-/Trockensauger – Bedienungsanleitung](#)

Umfassende Bedienungsanleitung für den FUXTEC FX-E1VC20 Akku Nass-/Trockensauger. Enthält Sicherheitshinweise, Anwendungsanleitungen, Montage und technische Daten.

lang:de **score:34** filesize: 2.15 M page_count: 167 document date: 2024-12-03