

Miele Duoflex Extra Vacuum Cleaner

Miele Duoflex Extra Vacuum Cleaner HX1 Instruction Manual

Model: Duoflex Extra Vacuum Cleaner (12580550)

Brand: Miele

INTRODUCTION

This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your Miele Duoflex Extra Cordless and Bagless Multi-Use, Multi-Floor Flexible Stick Vacuum Cleaner. Please read these instructions carefully before first use and keep them for future reference.

SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury. This appliance is intended for domestic use only. Do not use outdoors or on wet surfaces. Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts. Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes. Do not use without dust bin and filters in place. Use only as described in this manual.

PACKAGE CONTENTS

Your Miele Duoflex Extra Vacuum Cleaner package includes the following components:

- Miele Duoflex Extra main unit
- Wand (extension tube)
- Intelligent MultiFloor Electrobrush
- Soft Universal Brush (HX-UB)
- Crevice Tool
- Upholstery Nozzle
- SpeedLock Wall Bracket
- Charging cable
- Instruction Manual



Image: Miele Duoflex Extra Vacuum Cleaner with all included accessories laid out.

SETUP

1. Assembly

Connect the main unit to the wand, and then attach the desired floorhead (e.g., MultiFloor Electrobrush) to the other end of the wand. Ensure all connections click securely into place.



Image: The Miele Duoflex Extra in its full stick configuration and as a compact handheld unit.

2. Charging the Battery

The Miele Duoflex Extra is powered by a Lithium-Ion battery. Before first use, fully charge the battery.

- **Using the SpeedLock Wall Bracket:** Mount the SpeedLock Wall Bracket to a suitable wall. Connect the charging cable to the bracket. Place the main unit onto the bracket; it will automatically begin charging.
- **Direct Charging:** Alternatively, you can plug the charging cable directly into the main unit for charging without the wall bracket.

The LED indicator lights on the main unit will show the battery level and charging status. A full charge takes

approximately 3.5 hours.



Long Running Time

Up to 55 minutes on
MIN level without electrobrush.

*Valid for power level 1 without connected electrobrush.

Image: Close-up of the LED battery indicator lights on the vacuum's main unit.

3. Attaching Accessories

Accessories like the Crevice Tool, Dusting Brush, Soft Universal Brush, and Upholstery Nozzle can be attached directly to the main unit or the wand for extended reach. The SpeedLock system allows for quick changes between configurations.

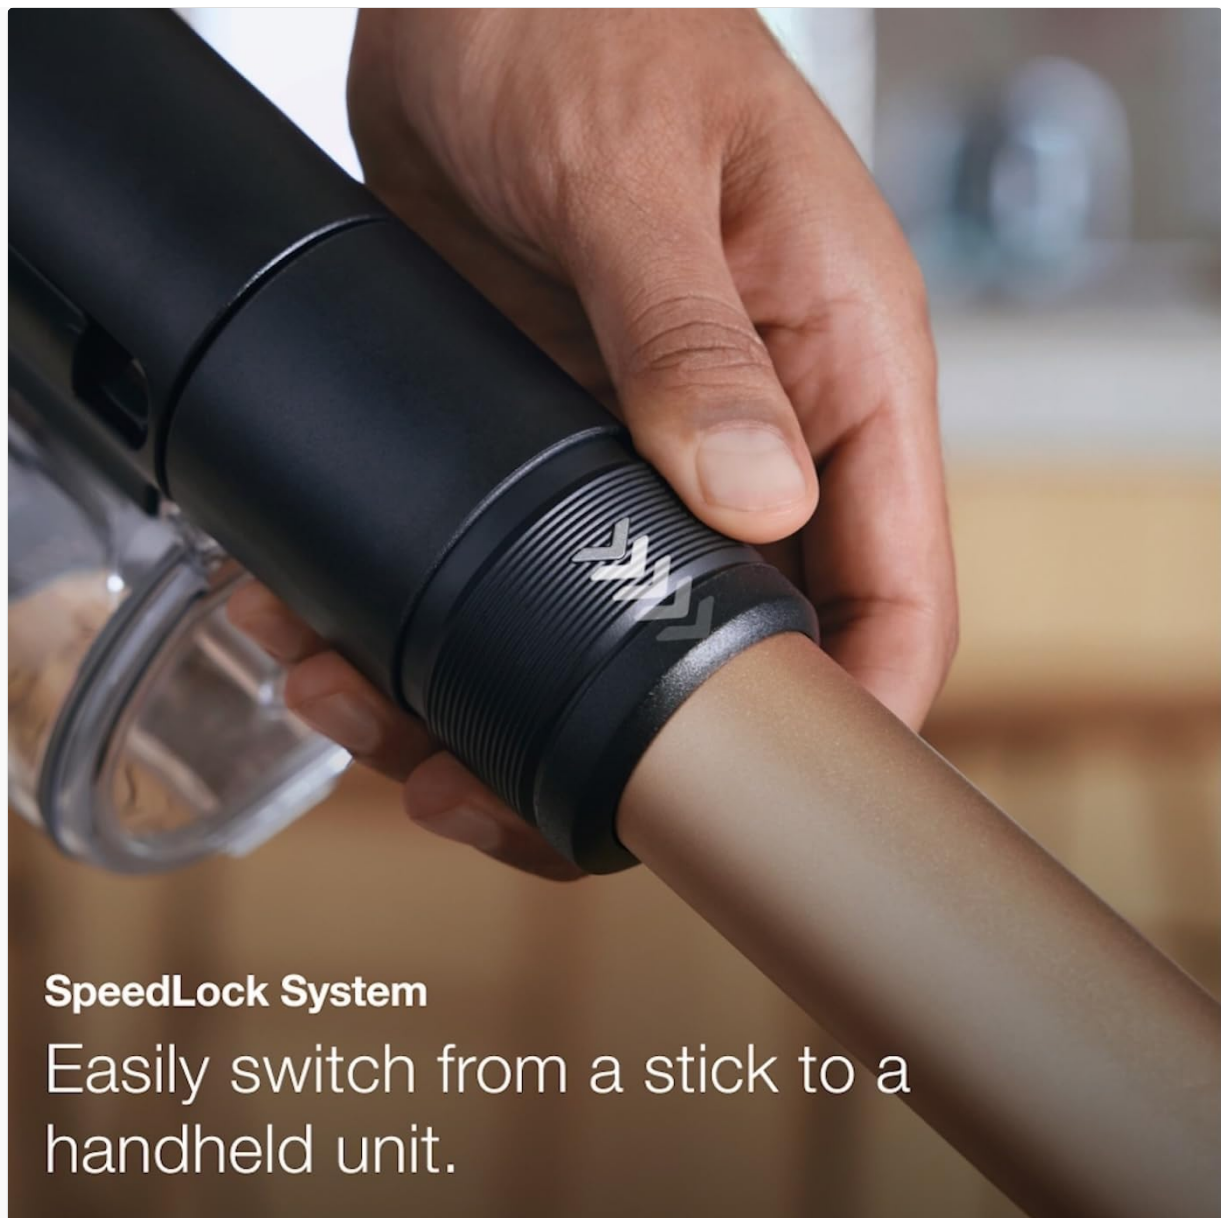


Image: A hand demonstrating the SpeedLock System to switch between stick and handheld modes.

OPERATING INSTRUCTIONS

1. Power On/Off and Suction Control

Press the power button on the main unit to turn the vacuum on or off. Use the suction control button to switch between two power levels: low for delicate surfaces and high for maximum cleaning performance.

2. Using the MultiFloor Electrobrush

The Intelligent MultiFloor Electrobrush automatically adjusts suction power based on the floor type, gliding smoothly from hard floors to carpets. It can also lay flat to reach under low furniture.

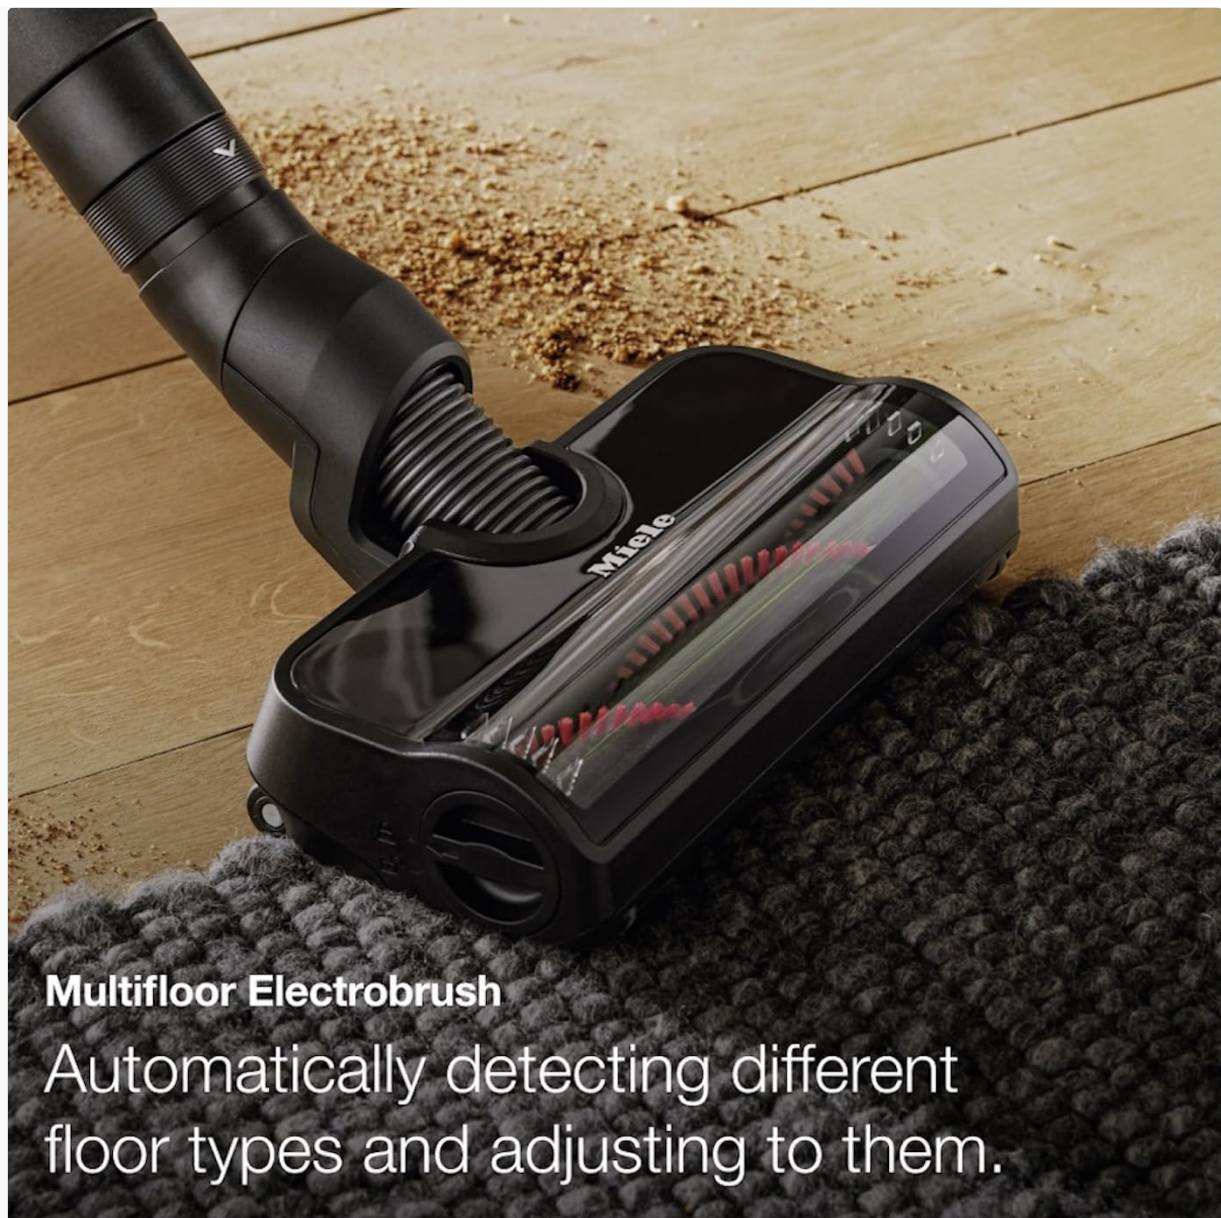


Image: The MultiFloor Electrobrush transitioning from a carpeted area to a hard floor, demonstrating its automatic adaptation.

3. Specialized Attachments

- **Soft Universal Brush (HX-UB):** Ideal for sensitive surfaces that are prone to scratching, such as furniture or delicate electronics.
- **Crevice Tool:** Perfect for cleaning tight spaces, corners, and along edges.
- **Upholstery Nozzle:** Designed for effective cleaning of upholstered furniture, curtains, and mattresses.




Soft Universal Brush
Ideal for scratch-sensitive surfaces.

Image: The Soft Universal Brush being used to clean dust from a glass table, highlighting its gentle cleaning action.

4. Flexible Use

The modular design allows for versatile cleaning. Use it as a stick vacuum for floors, a handheld unit for furniture and high-up areas, or with the flexible hose for hard-to-reach spots.

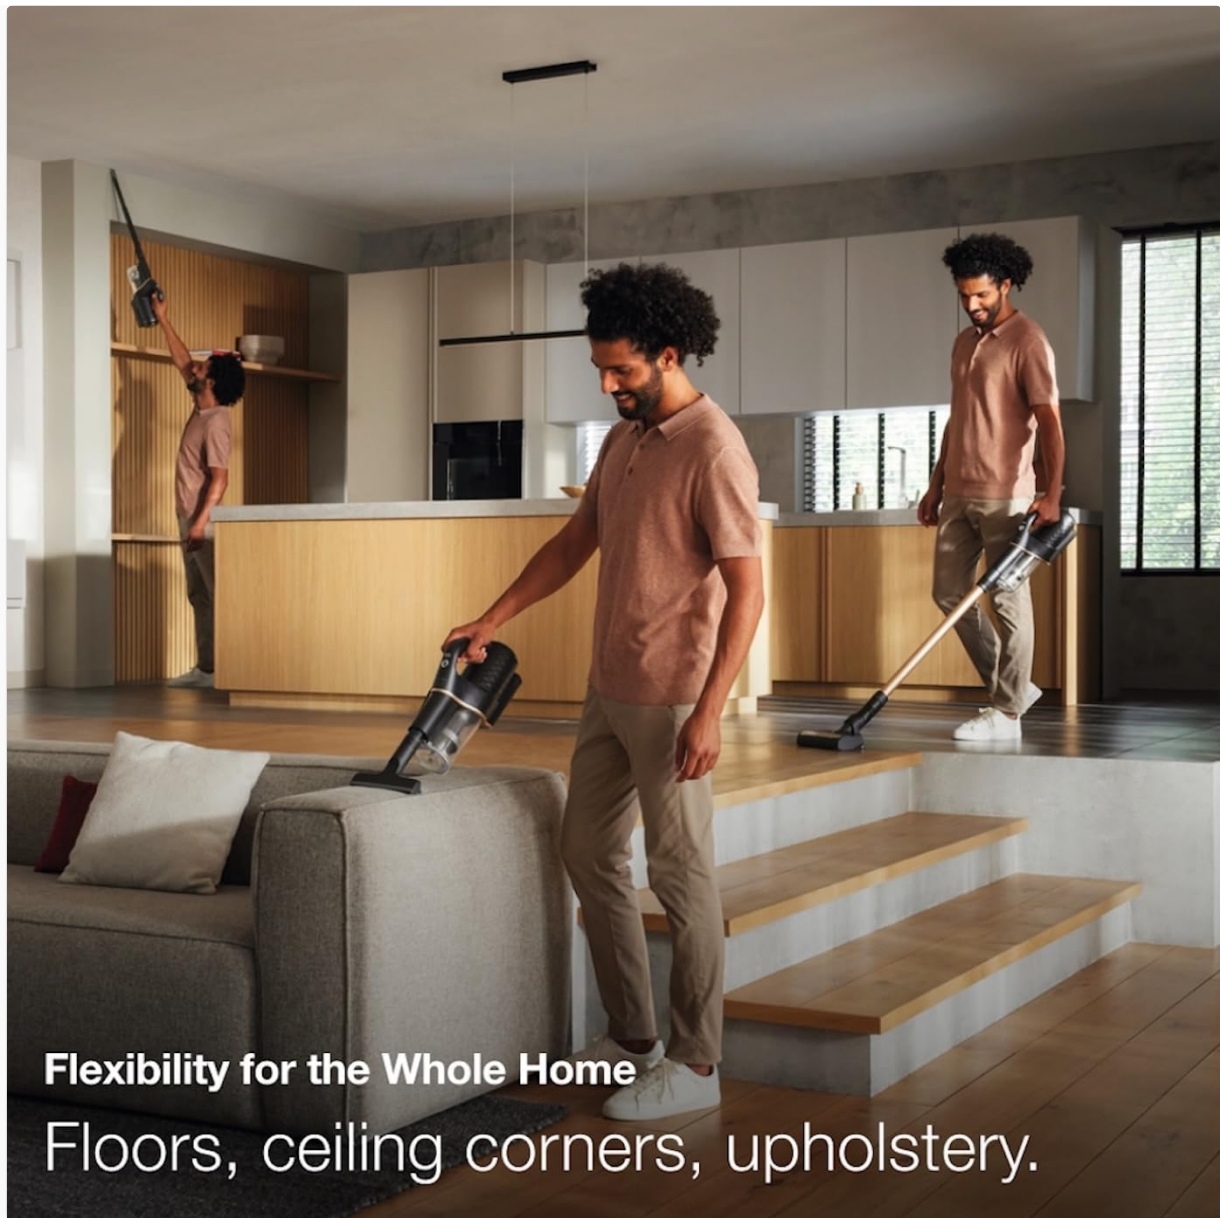

Flexibility for the Whole Home
Floors, ceiling corners, upholstery.

Image: A person using the Miele Duoflex Extra in different configurations to clean floors, upholstery, and high corners.

 
Your browser does not support the video tag.

Video: An official Miele video demonstrating the features and versatility of the Duoflex HX1 Extra vacuum cleaner.

MAINTENANCE

1. Emptying the Dust Bin

The Click2Open feature allows for quick and hygienic emptying of the dust bin. Simply press the release button to open the bottom flap and empty collected dirt directly into a waste bin.

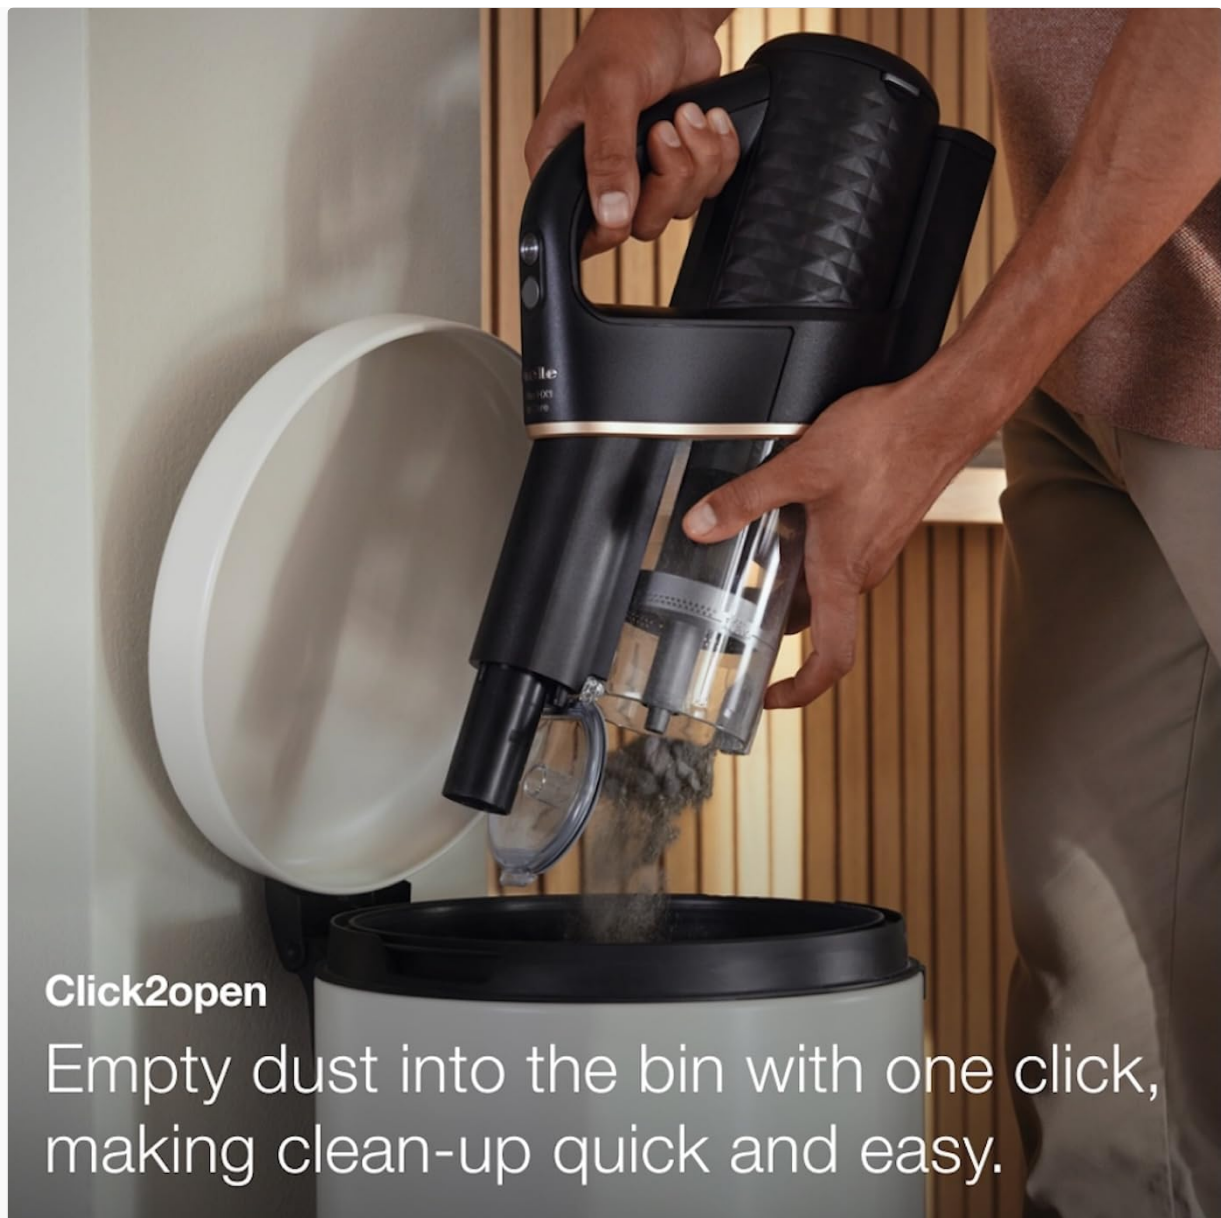

Click2open

Empty dust into the bin with one click,
making clean-up quick and easy.

Image: A hand operating the Click2Open mechanism to empty the vacuum's dust bin into a trash can.

2. Cleaning the Hygiene Filter

The Duoflex includes a Hygiene Filter for 99.99% vacuum filtration. The filter is non-washable and should be replaced periodically according to usage. Refer to the full manual for replacement instructions.



Hygiene Filter

99.99%* vacuum filtration.

*acc. to IEC 62885-4

Image: Close-up of the Hygiene Filter within the vacuum's dust collection system.

3. Cleaning the MultiFloor Electrobrush

To maintain optimal performance, regularly check the brush roll for tangled hair or debris. The brush roll can be easily removed for cleaning by twisting the side lock mechanism.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Battery discharged	Charge the battery fully.
Reduced suction	Dust bin full or filter clogged	Empty dust bin and clean/replace filter.
Brush roll not spinning	Obstruction in brush roll or carpet too thick	Remove obstruction. For thick carpets, try a lower suction setting or lift the floorhead slightly.
Unusual noise	Foreign object in the air path	Check all air paths and attachments for obstructions.

If the problem persists after attempting these solutions, please contact Miele customer support.

SPECIFICATIONS

Feature	Detail
Brand	Miele
Model Name	Duoflex Extra Vacuum Cleaner
Model Number	12580550
Special Features	Bagless, Compact, Cordless, Lightweight, Portable
Filter Type	Non-washable Hygiene Filter
Battery Type	Lithium-Ion
Battery Life	Up to 55 minutes (on power level 1 without electrobrush)
Charging Time	3.5 Hours
Capacity	0.3 Liters
Item Weight	6.9 pounds
Product Dimensions	11.4"L x 7.6"W x 29.9"H
Wattage	260 watts
Noise Level	79 Decibels

WARRANTY

Miele products are designed for durability and reliability. For specific warranty details and terms, please refer to the warranty card included with your product or visit the official Miele website.







SUPPORT

For further assistance, troubleshooting, or to purchase genuine Miele accessories and spare parts, please visit the official Miele store or contact Miele customer service.

[Visit the Miele Store](#)

© 2025 Miele. All rights reserved.

Related Documents - Duoflex Extra Vacuum Cleaner

<div><div>Miele</div><div></div><div><div>en</div><div>Operating Instructions Cordless Stick Vacuum Cleaner</div><div>es</div><div>Instrucciones de funcionamiento Aspiradora vertical inalámbrica</div><div>fr</div><div>Mode d'emploi Aspirateur-bâton sans fil</div></div><div><div>HS19</div><div>10.19.11.000.020</div></div></div>	<p>Miele HS19 Cordless Stick Vacuum Cleaner Operating Instructions</p> <p>Comprehensive operating instructions for the Miele HS19 Cordless Stick Vacuum Cleaner, covering installation, use, maintenance, safety, and troubleshooting.</p>
<div><div>Miele</div><div></div><div><div>de</div><div>Gebrauchsanweisung Akkustaubsauger</div><div>en</div><div>Operating Instructions Cordless vacuum cleaner</div><div>es</div><div>Instrucciones de manejo Aspiradores sin cable</div><div>fr</div><div>Mode d'emploi Aspirateur bâton sans fil</div><div>it</div><div>Istruzioni d'uso Soppio elettrico senza fili</div><div>pt</div><div>Guia de utilização aspiradora sem fio</div></div><div><div>HS19</div><div>10.19.12.014.000</div></div></div>	<p>Miele HS19 Akkustaubsauger: Gebrauchsanweisung und Sicherheitshinweise</p> <p>Umfassende Gebrauchsanweisung für den Miele HS19 Akkustaubsauger. Enthält detaillierte Informationen zur Installation, Bedienung, Wartung und Sicherheit.</p>
<div><div>Miele</div><div></div><div><div>en-US</div><div>Operating Instructions Cordless Stick Vacuum Cleaner</div><div>en-CA</div><div>Operating Instructions Battery-powered stick vacuum cleaner</div><div>fr-CA</div><div>Mode d'emploi Aspirateur bâton sans fil</div></div><div><div>HS23</div><div>10.20.12.011.000</div></div></div>	<p>Miele HS23 Cordless Stick Vacuum Cleaner Operating Instructions Manual</p> <p>Official operating instructions and user manual for the Miele HS23 cordless stick vacuum cleaner. Learn about safety, setup, operation, maintenance, and troubleshooting for your Miele vacuum.</p>
<div><div>Miele</div><div></div><div><div>en</div><div>Instruções de utilização Aspiradores de pil a bateria</div><div>CA</div><div>Operating Instructions Battery-powered stick vacuum cleaner</div><div>MX</div><div>Modo d'empleo aspiradora vertical inalámbrica</div><div>US</div><div>Operating Instructions Cordless Stick Vacuum Cleaner</div></div><div><div>HS19</div><div>10.19.11.000.020</div></div></div>	<p>Miele HS19 Cordless Stick Vacuum Cleaner Operating Instructions</p> <p>This guide provides essential operating instructions for the Miele HS19 cordless stick vacuum cleaner, covering safety, setup, usage, maintenance, and troubleshooting for optimal performance.</p>
<div><div>Miele</div><div><div>Operating instructions</div><div></div><div>Cordless stick vacuum cleaner</div></div><div><div>en-GB</div><div><div>HS19</div><div>10.19.11.000.020</div></div></div></div>	<p>Miele HS19 Cordless Stick Vacuum Cleaner: Operating Instructions and User Guide</p> <p>Comprehensive operating instructions for the Miele HS19 cordless stick vacuum cleaner. Learn about setup, usage, maintenance, troubleshooting, and safety guidelines for your Miele appliance.</p>
<div><div>Miele</div><div><div>Operating instructions</div><div></div><div>Cordless stick vacuum cleaner</div></div><div><div>AUS, NZ</div><div><div>HS19</div><div>10.19.11.000.020</div></div></div></div>	<p>Miele Cordless Stick Vacuum Cleaner HS19 Operating Instructions</p> <p>Comprehensive operating instructions for the Miele HS19 cordless stick vacuum cleaner, covering safety, assembly, use, maintenance, and troubleshooting. Includes details on battery care and optional accessories.</p>

